




Electrolux

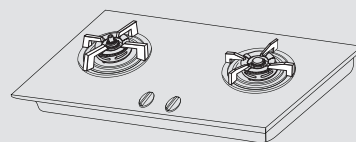

EGT8028CK
EGT9038CK
EGT8028CKP
EGT9038CKP
EGT9038CKT

.....
EN GAS HOB

.....
USER MANUAL

Safety instructions	3
Parts identification	4
Installation instructions	5
Installation procedure	5
Gas connection	7
Conversion to city gas	7
Operation	8
Ignition burners	8
Using the hob correctly	8
Maintenance and care	9
Glass top	9
Burner - caps & crowns	9
What to do if	9
Technical specifications	10
Warranty conditions	10

Thank you for choosing and using Electrolux home appliances.

Electrolux Group of Sweden is one of the world largest home appliances companies. With more than 65 million Electrolux products being used by millions of households worldwide each year, it is also the world largest manufacturer of kitchen electrical appliances. The group has sold more than 55 million kitchen products, which is equivalent to the combined heights of 5 Mount Everest. Besides that, more than 2/3 of the world star hotels use Electrolux professional kitchen equipment.

Clearly, the excellent achievement of Electrolux over the last 80 years has been widely recognized by 450 million families all over the world. Now, we are pleased to make some of the best products from this renowned brand available to consumers in Southeast Asia. To us, not only is Electrolux one of the most reliable brands in dealing with home appliances, it is also a brand that promises to bring innovative lifestyles to all families through its cutting edge technologies and excellent designs. For not only do they add a touch of elegance to your kitchen, but Electrolux products also makes cooking easier, more enjoyable and something to share with. Enjoy happy cooking now with Electrolux kitchen appliances!

Once again, we would like to extend our heartiest thanks to you for your trust in choosing Electrolux products!

Before installing or using this appliance, please read this instruction book carefully and pay particular attention to the safety warnings in the following page.

Should you have further enquiries regarding this appliance, kindly contact our Customer Care for advice. Please keep this instruction book for future reference and pass it on to any future owners of this appliance.

Safety instructions

- Do not use gas other than that which is specified on the label attached.
- Do not place anything, e.g. flame tamer, asbestos mat, between pan and pan support as serious damage to the appliance may result. (Fig 1)
- Do not remove the pan support and enclose the burner with a wok stand not supplied by Electrolux as this will concentrate the flame and deflect the heat onto the top plate. (Fig 2)
- Do not use large pots or heavy weights which can bend the pan support or deflect the flame onto the top plate. (Fig 3)
- Locate pan centrally over burner so that it is stable and does not overheat the appliance. (Fig 4)
- Use only wok support supplied or recommended by the manufacturer of the appliance. (Fig 5)
- Wok support to be used for wok and other trivets for flat bottom pot.
- The unit to be used for cooking only. Do not dry towels, clothes, etc., over it. If this is done, there is danger of fire.
- If a gas leak is found, close stopcock, open up all windows and call your dealer. Do refrain from turning an electric switch on or off, lighting a match, smoking or using a lighter.
- Use the appliance in a well-ventilated room.
- Do not use vinyl gas hose. It is liable to be softened by heat. Use only a rubber hose.
- Be sure to turn off the ignition knob and regulator of the cylinder after use.
- Avoid touching the burner, pan stand etc., immediately after use. Otherwise you will get burnt.
- Ensure that the rubber hose does not touch any part of the unit or lies underneath it.
- Connect the rubber hose to the gas inlet and fasten it with a hose clamp.
- The pan stand leg nearest to the flame will have discolouration after use. Such phenomenon is normal.
- **Mini stand should be used for the two burners series when using the utensils with the diameter 120mm or below.**



WARNING:-

- **In the event of the burner flames being accidentally extinguished, turn off the burner control knob and do not attempt to re-ignite the burner for at least 1 minute.**
- **For burner fitted with a flame supervision device, if after 15 seconds of ignition operation the burner has not lit, stop operating the device and open the compartment door and wait at least 1 minute before attempting a further ignition of the burner.**
- **If nozzle holes are blocked, use a thin wire or pin to pierce and clean the nozzle holes.**

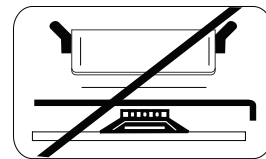


Fig. 1

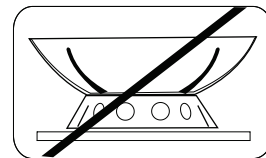


Fig. 2

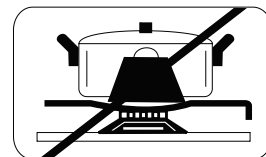


Fig. 3

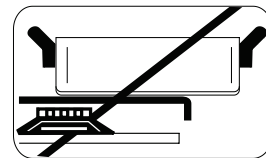


Fig. 4



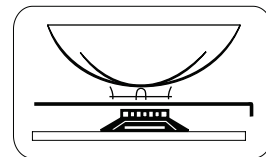


Fig. 5

EGT8028CK/ EGT8028CKP

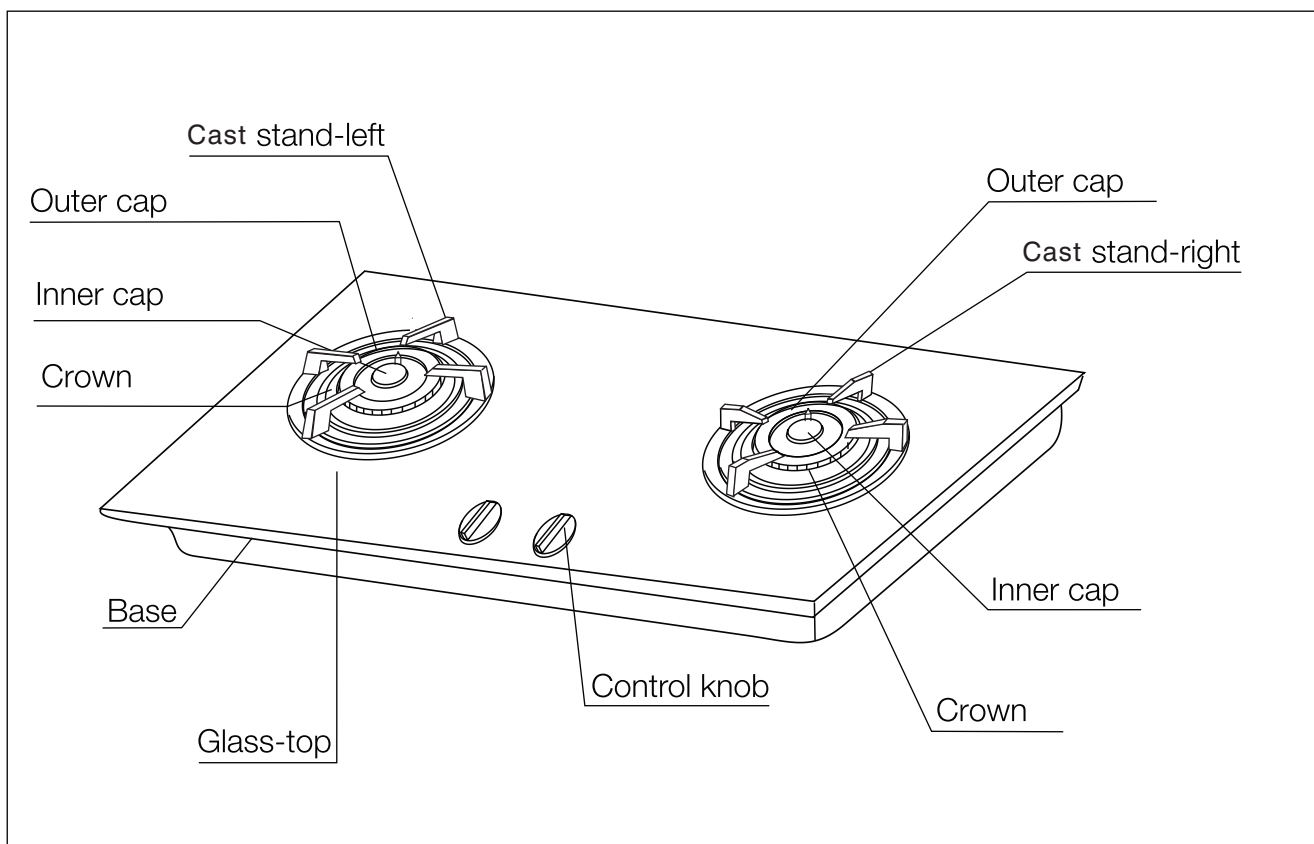

EGT9038CK/ EGT9038CKP/ EGT9038CKT

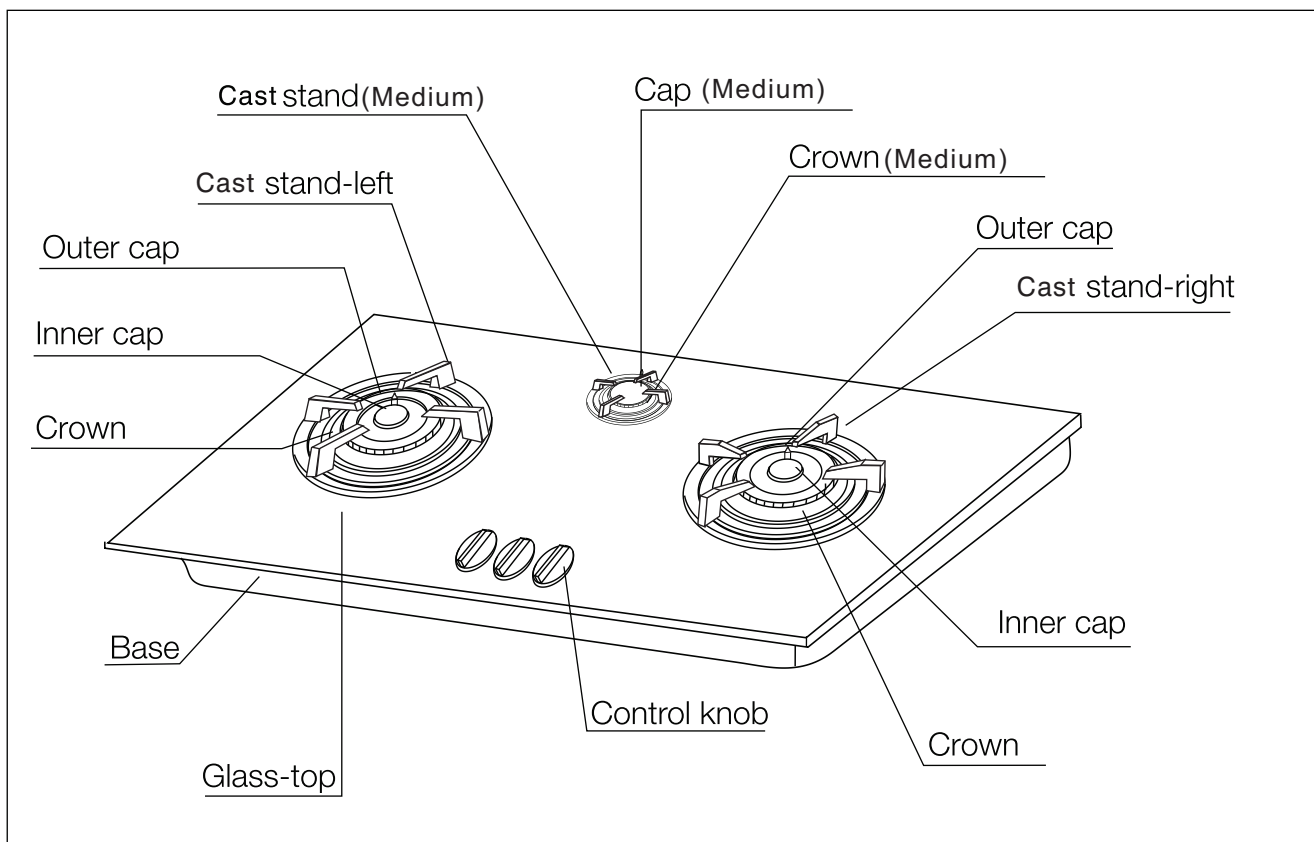

5 installation instructions

Installation instructions

- Have the installer show you the location of the gas shut off valve and how to shut it off in emergency.
- Be certain all packing materials are removed from the hob before operating to prevent fire or smoke damage that could be caused by the presence of these materials.
- Observe all instructions for minimum clearance to any combustible surfaces. These should be in accordance with information on the rating plate and with national fire laws.
- If the hob is installed near windows, proper precautions should be taken to prevent curtains from blowing over burners creating FIRE HAZARD.
- When choosing a location for this hob consider, availability and position of gas and electric supply paths.
- Any openings around gas and electric service outlets shall be closed at the time of installation.
- Do not install another hob next to this unit.
- The underside of the hob must be checked to ensure that there are no projections which might foul the hob. Make sure that the countertop is solidly supported and can withstand the weight of the hob.
- Check that the cabinet is leveled from side to side and from front to back in its installed position.
- Cabinet ventilation can be improved by the provision of air holes to the cabinet. Care should be taken to ensure that ventilation holes are not obstructed.
- When fitting a vent hood above the hob, refer to the manufacturer own installations relating to that product. However as a general rule, a minimum clear vertical distance of 750mm (30") should be maintained between the cooktop and the underside of any cupboard, wall unit or vent. (Fig 6)
- Any cabinet installed above the cooktop must not be greater than 325mm (13" deep). (Fig 6)
- The edge of the hob must have a minimum distance from the rear wall of 55mm. (Fig 6)

BATTERY COMPARTMENT

1. When the battery is exhausted; or the spark become weakness, a new battery should be replaced.
2. The battery compartment is located as shown in the diagram. Please place the battery in correct polarity as shown.

Warning: Please take out the battery if no use for a long time.



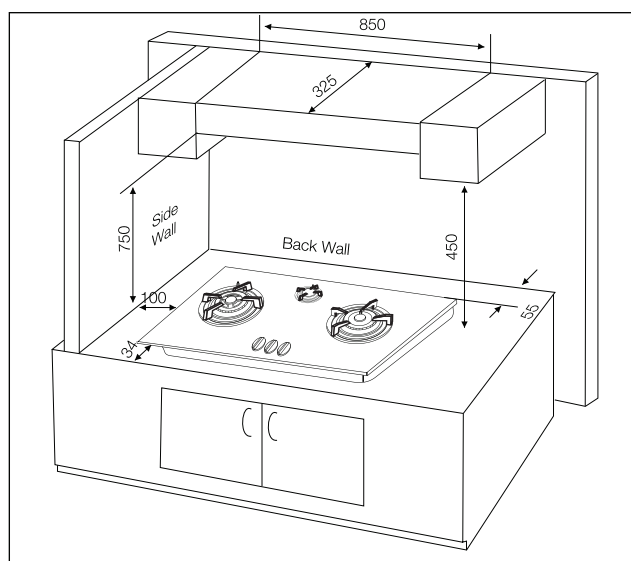


Fig. 6 (in mm)

If clearance between side/black walls and periphery of the burner is less than 200mm, the walls must be protected with a non-combustible material. The protection must extend a minimum distance of 450mm above the burner. Horizontal surfaces less than 750mm vertically above the cooktop must also be protected.

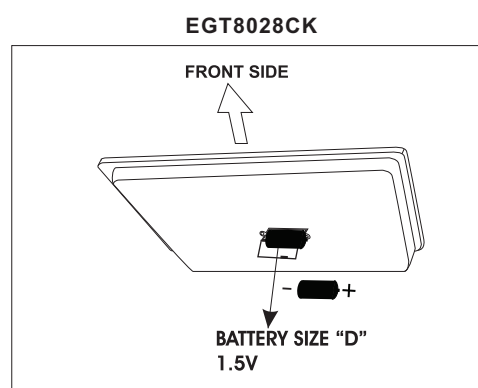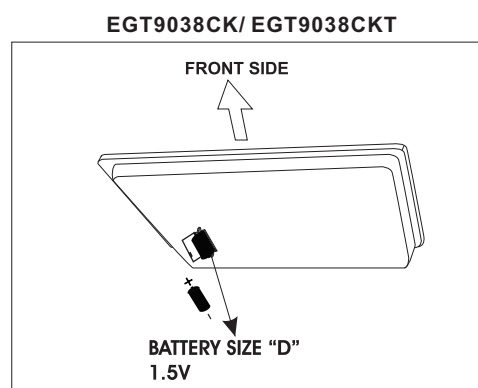

Installation procedure


- Before installing the appliance, check that the location provides the required clearances from combustible materials and check if necessary to provide protection to adjacent surfaces as required by the regulation. Make provision for the gas supply to be connected to the location.
- Cut the opening in the bench top to the dimensions shown in Fig 7.
- Remove the hob from the carton.
- Install the hob in the cut-out (Fig 7)
- Connect gas supply to inlet of hob. Turn the gas on and check for leaks using soap solution and brush around all the joints and connection.
- Test the appliance; depress the control knob and turn to full flame setting to activate the electric igniter. The burner will ignite. Adjust control knob to the desired setting. On initial usage you may have to repeat this ignition function several times (to allow air to be purged from the gas supply system). No adjustment should be necessary. If any problem occur, refer to the servicing instructions or the fault finding chart.
- Ensure the manual is left with the user. If any of the above procedures do not produce satisfactory results, the agent service department should be consulted for more specialized assistance.

Flexible Base Model

The flexible base models have slightly smaller than the usual burner base boxes of the same appliance category. They come with flexible (adjustable) guiding metal plate at the 4 outer edges of the burner boxes, this feature gives the flexibility of the appliances to be fitted into already cut out holes which are too big or too small for the normal sizes. The flexible metal plate are meant to be bent into supporting shape, as illustrated in Fig 7b& Fig 7c, to stabilize the appliances where applicable. At installation, please ensure that the appliance's position is adjusted and supported at the flanges of the burner box.

Caution : Cut out sizes which exceed the maximum specified dimension are not suitable for mounting.

MODEL: EGT9038CK / EGT9038CKT

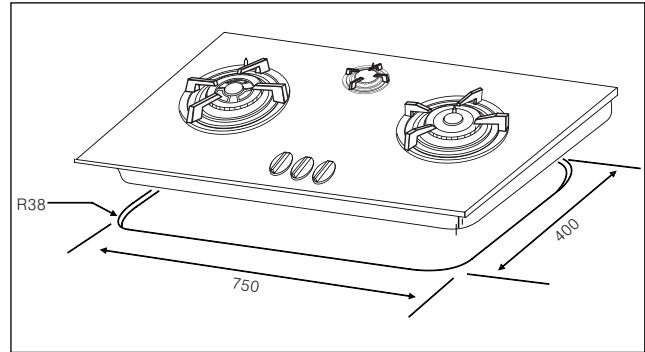

MODEL: EGT8028CK

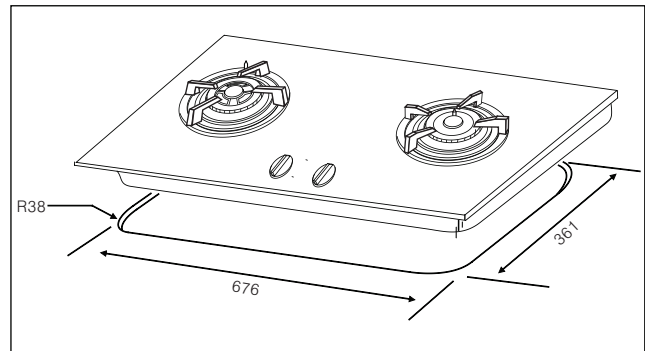


Fig. 7 (in mm)

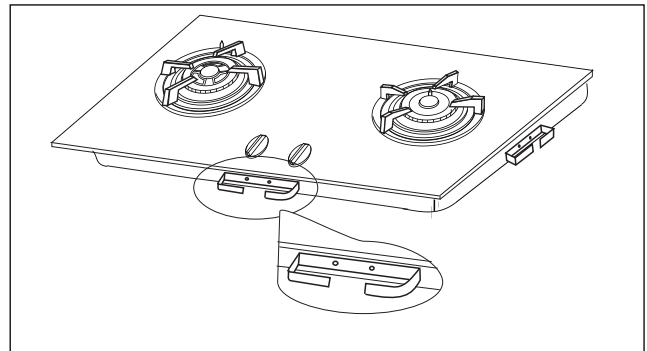


Fig 7b

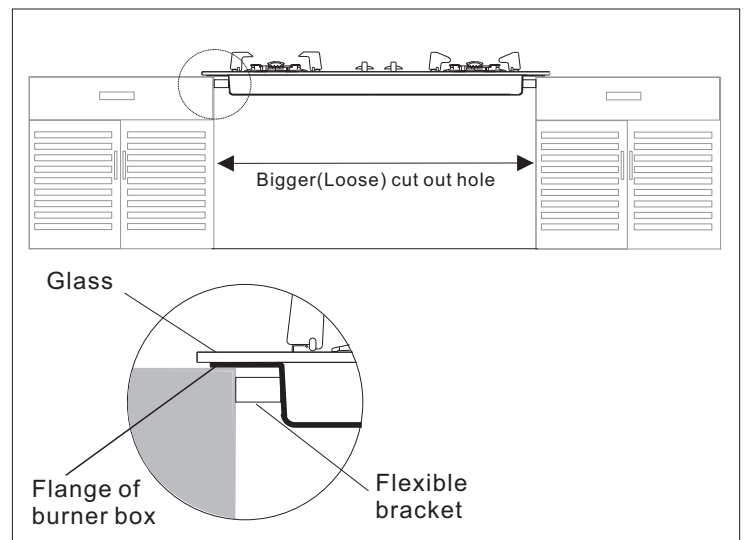


Fig 7c

Bench cut-out size viewed from front of bench, i.e. control panel at front.

7 installation instructions

Gas connection

Cylinder or network connection must be carried out according to the relevant local standards.

Flexible connection

The supply hose must be visible for its entire length (max. one meter) and must be secured with a hose clamp X (Fig 8). The sealing washer must be fitted.

Soap test procedure

- Turn the burner controls off and turn on the gas supply.
- Apply soapy solution to each joint. (Figure 8)
- Formation of bubbles indicates leakage and must be tightened.
- Repeat soap test.



IMPORTANT SAFETY INSTRUCTION:-

Upon completion of gas installation connections, it is compulsory to check for gas leakage at the joint. (Soap Test)



Conversion to city gas

Injectors replacement

- Remove the pan support.
- Remove the burner caps and crown.
- With a socket spanner 7 , unscrew and remove the injectors (Fig 10), and replace them with the ones required for the type of gas in use.
- **When changing from LPG to City Gas, fit the City Gas injector marked 350 for outer and 145 inner of wok burner. While, fit the injector marked 190 for semi rapid burner.**
- Reassemble the parts, with the same procedure in reverse.
- Replace the rating label (placed near the gas supply). You can find this label in the package of the injectors supplied with the appliance.

Adjustment of minimum level

To adjust the minimum level of the burners, proceed as follow:

- Unscrew the screws at the tray areas.
- Remove the knobs and the glass top.
- Light the burners.
- Turn valve to minimum position.
- With a screwdriver, adjust the by-pass screw next to valve shaft (Fig 12, letter a.)
- When converting from LPG to City Gas, unscrew the by-pass screw about one turn anti-clockwise. If changing from City Gas to LPG, completely tighten the screw clockwise.
- Finally check that the flame does not go out when quickly turning the knob from the maximum position to the minimum position.

This procedure can be carried out even though the hob has been positioned on the counter top.

If clearance between side/back walls and periphery of the burner is less than 200mm, the walls must be protected with a non-combustible material. The protection must extend a minimum distance of 450mm above the burner. Horizontal surfaces less than 750mm vertically above the hob must also be protected.



WARNING:-

Check the data plate to ensure that the appliance is suitable for the available gas supply.

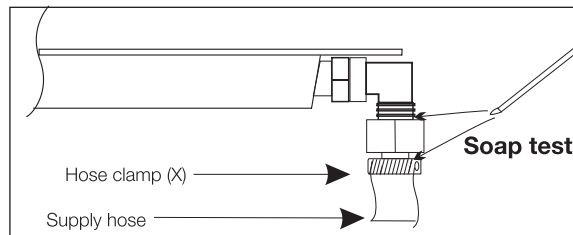


Fig 8

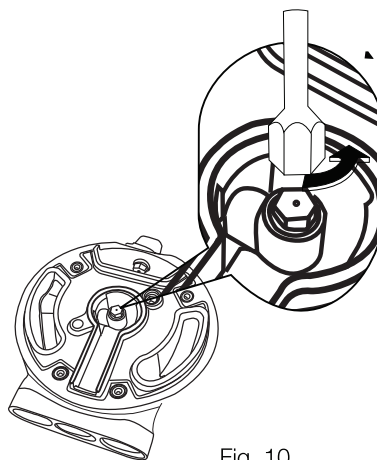


Fig. 10

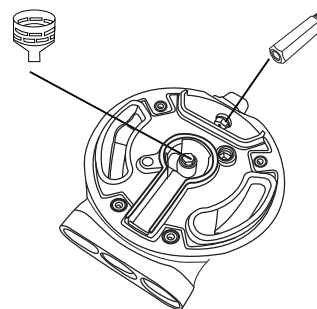


Fig. 11


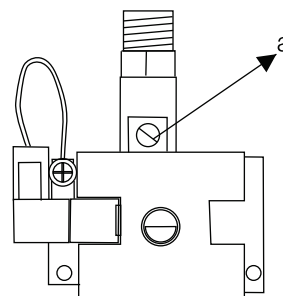


Fig. 12

Ignition burners

1. Check to make sure that the gas supply is accessible and set up with the necessary and appropriate fittings/connectors.
2. Turn all control knobs to off position.
3. This device is fitted with a safety tap to control the gas flow. When the dot on the knob lines up with the following symbols on the panel, these conditions prevail:

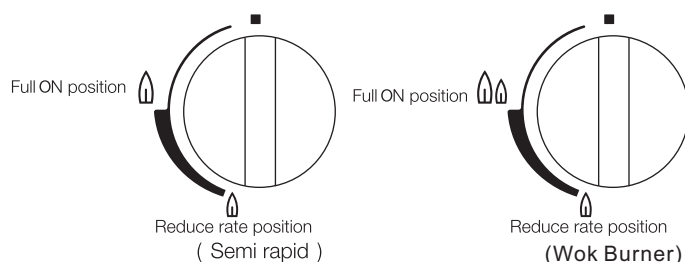

To close, rotate the knob to the right until you feel the tap's distinct click.

4. To ignite, hold the knob and depress for several seconds, rotate it to maximum gas flow position. For models with thermocouple, keep the knob depressed about 5~8 seconds, otherwise the flame will extinguish.
5. If the burner does not light the first time, repeat Step 4.
6. If the flame extinguishes suddenly, repeat Step 4.
7. When using the unit again immediately after having once turned it off, wait for about ten seconds before re-igniting.
8. Each burner has its own independent ignitor.
9. When the burner is lit, turn the knob to adjust the flame size according to your needs. This needs no depression of the knob.

For burner fitted with a flame supervision device, if after 15 seconds of ignition operation the burner has not lit, stop operating the device and wait at least 1 minute before attempting a further ignition of the burner.

Using the hob correctly

- To ensure maximum burner efficiency, it is strongly recommended that you use only pots and pans with a bottom fitting the size of the burner used, so that the flame will not spread beyond the bottom of the vessel (Table 1).
- It is also advisable, as soon as the liquid starts boiling, to turn down the flame so that it will barely keep the liquid simmering.

Burner	Minimum Diameter	Maximum Diameter
Wok Burner	160mm	240mm
Semi-rapid	100mm	200mm

Table 1

Choice of burner

- A semi-rapid burner is for special low heat, simmering and slow cooking.
- A wok burner is for very fast heating using a wok or large pan.



NOTE:-

Remember that a wide-bottomed pan allows a faster cooking than a narrow one.

Always use pots which properly fit what you have to cook.

Particularly make sure that the pans are not too small for liquids, since these could easily overflow.

The pans should not be too large for a faster cooking.

You should use pans with the right diameter to fit the burner, in order to make the most out of it, thus reducing gas consumption as in Fig 12.

It is also advisable to cover any boiling casserole and as soon as the liquid starts to boil, lower the flame enough to keep the boiling point.

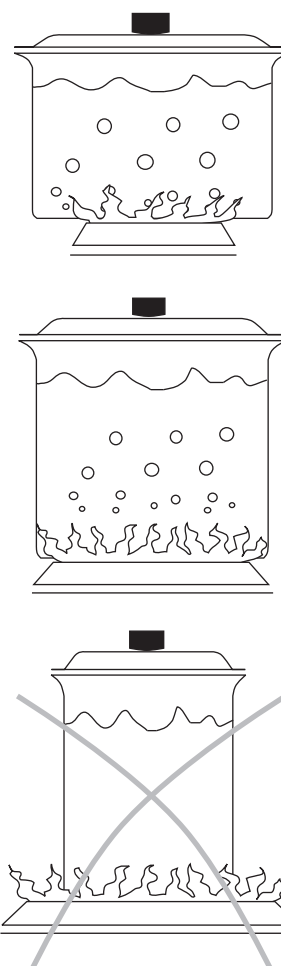


Fig. 12

Glass top

- Persistent stains may require vigorous rubbing with nylon scourer or creamed powder cleansers. Household enamel cleaners are available, follow the manufacturer instructions in their use. Harsh abrasive cleaners, powder cleaners, steel wool or wax polishes should not be used.
- Do not use the glass top as a work table.
- If necessary, use a matchstick or brush to car ports.
- After cleaning, ensure the burner caps are reassembled properly into position.
- After cleaning service, when assembling the burner crown and caps, care must be taken to ensure the spark plug is not knocked. The spark plug will crack if knocked and may give rise to flame ignition problem.

Burner caps & crowns

- These can all be lifted off and removed for separate cleaning.
- Ensure burner caps and crowns are thoroughly dried after cleaning or spillage.
- When cleaning the burner crowns, ensure that all the flame ports and other holes are free of any blockage.



NOTE:-

When refitting the burner caps & crowns, ensure that they are correctly seated.

What to do if

Phenomenon	Reason	Solution
Burner will not light...	Air in gas line Blockage in line Ignition not sparking Battery is dead Burner not fitted correctly	Purge gas line Trace back & clear Check lead & electrode Replace battery Fit burner in correct position
Burner lights back to injector...	Excessive lint up of burner mixing tube Excessive gas pressure	Remove & clean burner Check gas regulator pressure & adjust if necessary
Burner has explosive ignition...	Excessive gas pressure	Check gas regulator pressure & adjust if necessary
Ignitor not sparking...	Electrode gap excessive Ignitor connections loose Battery is dead	Check gap, adjust if not between 4-5 mm Check connections to ignitor, replace if faulty Change a new battery



WARNING:-

Do not spray aerosols in the vicinity of this hob while in operation. Some propellant gases can break down when heated and produce corrosive vapours which will attack some materials.

Articles which are made from flammable materials should not be stored in drawers or cupboards immediately below this hob.

Do not store articles within 50mm of the base.

Do not touch spark ignitor while lighting the burner.

Where this appliance is installed in a marine craft or in caravans, it shall not be used as a space heater.

Technical specifications

	L.P.Gas	City Gas
Wok Burner	4.8 kW	4.8 kW
Semi-rapid Reduce Rate	1.8 kW 1.0 kW	1.8 kW 1.0 kW
Setting	30 mbar	10 mbar
Gas Connection	0.5 inch straight thread (14 threads per inch)	0.5 inch straight thread (14 threads per inch)
Battery	1.5V D.C	1.5V D.C

If you need any technical help or would like more information about our products, please do not hesitate to contact our Customer Care Center, listed below:

Thailand

Call Center Tel : (+66 2) 725 9000
Electrolux Thailand Co.,Ltd.
Electrolux Building
14th Floor 1910 New Petchburi Road,
Bangkapi,Huay Kwang, Bangkok 10310
Office Tel : (+66 2) 7259100
Office Fax : (+66 2) 7259299
Email : customercareshai@electrolux.com

Malaysia

Domestic Toll Free : 1300-88-11-22
Electrolux Home Appliances Sdn. Bhd.
Unit T2-7, 7th Floor, Tower 2 , Jaya33 Hyperoffice
No. 3, Jalan Semangat, Seksyen 13,
46100 Petaling Jaya, Selangor
Office Tel : (+60 3) 7843 5999
Office Fax : (+60 3) 7955 5511
Email : malaysia.customercare@electrolux.com

Indonesia

Tel : (+62 21) 522 7180
PT. Electrolux Indonesia
Gedung Plaza Kuningan
Menara Utara 2nd Floor,
Suite 201, Jl. HR Rasuna Said
kav C 11-14, Karet Setiabudi
Jakarta Selatan 12940
Office Tel: (+62 21) 522 7099
Office Fax: (+62 21) 522 7097
Email : customercare@electrolux.co.id

Philippines

Domestic Toll Free : 1-800-10-845-care 2273
Customer Care Hotline : (+63 2) 845 care 2273
Electrolux Phils Inc.
25th Floor, Equitable Bank Tower 8751
Paseo De Roxas, Makati City,
1226 Philippines
Office Tel : (+63 2) 845 4510
Office TeleFax : (+63 2) 845 4543
Office Fax : (+63 2) 845 4548
Email : wecare@electrolux.com

Vietnam

Domestic Toll Free : 1800-58-88-99
Tel : (+84 8) 3910 5465
Electrolux Vietnam Ltd.
Floor 9th, A&B Tower
76 Le Lai street - Ben Thanh Ward - District 1
Ho Chi Minh City , Vietnam
Office Tel : (+84 8) 3910 5465
Office Fax : (+84 8) 3910 5470
Email : vncare@electrolux.com

Singapore

CUSTOMER CARE HOTLINE : (+65) 6507 8699
Electrolux S.E.A. Pte Ltd.
11 Lorong 3 Toa Payoh
Jackson Square, Block B, #01-13/14/15
Singapore 319579
Office Tel : (+65) 6507 8900
Office Fax : (+65) 6356 5489
Email : customer-care.sin@electrolux.com

Hongkong

Tel: (+852) 8203 0298
Dah Chong Hong, Ltd. - Service Centre
8/F., Yee Lim Godown Block C
2-28 Kwai Lok Street, Kwai Chung, N.T.
Hong Kong

www.electrolux.com

The Thoughtful Design Innovator.

Do you remember the last time you opened a gift that made you say, "Oh! How did you know? That's exactly what I wanted!" That's the kind of feeling that we at Electrolux seek to evoke in everyone who chooses or uses one of our products. We devote time, knowledge, and a great deal of thought to anticipating and creating the kind of appliances that our customers really need and want.

This kind of thoughtful care means innovating with insight. Not design for design's sake, but design for the user's sake. For us, thoughtful design means making appliances easier to use and tasks more enjoyable to perform, freeing our customers to experience the ultimate 21st century luxury: ease of mind. Our aim is to make this ease of mind more available to more people in more parts of their everyday lives, all over the world.

The "Thinking of you" promise from Electrolux goes beyond meeting the needs of today's consumers. It also means we're committed to making appliances safe for the environment—now and for future generations.

Electrolux. Thinking of you.

Share more of our thinking at
www.electrolux.com



The Electrolux Group.