



ETB2302J-A, ETB2302J-H,  
ETB2502J-A, ETB2502J-H,  
ETB2802J-A, ETB2802J-H,  
ETB3400J-A, ETB3400J-H,  
ETB3700J-A, ETB3700J-H,

## EASY WAY TO REGISTER YOUR PRODUCT WITH YOUR SMARTPHONE

- 1 Photograph** the camera icon located on your product's serial tag, including the 4 dots (⦿).



Step 1 - Photograph the camera icon with the right, including the 4 dot (⦿).  
Step 2 - Send it in via Line, Facebook Messenger.  
Or go online.  
● Line: @eluxreg  
● Facebook: eluxreg  
● Online: eluxreg.com

MADE IN THAILAND



- 2 Send it in** via Line, Facebook Messenger or go online.



@eluxreg



eluxreg



eluxreg.com

- 3 Enjoy** many privileges.\*

\* Terms and conditions apply.



# Electrolux

# ENG



## Thank You for choosing Electrolux!

Congratulations and thank you for choosing an Electrolux refrigerator/freezer. We are sure you will find your new appliance a pleasure to use. Before you start using the appliance, we recommend you read through the entire user manual which describes the appliance and its many functions. To avoid any unnecessary risks, misuse or hazards that may be present when using a new electrical appliance, it is important you read the safety instructions carefully. We recommend you keep this user manual for future reference and pass it on to future owners. After unpacking the appliance, please check that it is not damaged. If in doubt, do not use the appliance but contact your local Electrolux Customer Care Centre.

## CONTENTS

Important Safety Information .....	3
Installing the New Refrigerator .....	4
Cleaning the Refrigerator .....	5
Temperature Control .....	5
TasteSeal Room .....	6
Door Storage Bins .....	6
Crisper Bin .....	6
- Storing Vegetables	
- Storing Fruits and Small Items	
Deodorizer .....	6
LED Lighting .....	6
Refrigerator Features .....	7
Food Storage Guide .....	10
Troubleshooting .....	11
Noise .....	12

**RoHS**  
Compliant

Being ensured the permissible content limitation of  
some toxic chemicals (RoHS compliant)  
(According to the Circular No. 30/2011/TT-BCT Vietnam,  
dated 10<sup>th</sup> August, 2011)

## ENVIRONMENTAL TIP

### Disposal information for users

Most of the packing materials are recyclable. Please dispose these materials through your local recycling depot or place them in appropriate collection containers.

If you wish to discard this appliance, please contact your local authorities and ask for the correct method of disposal. These products are RoHS compliance.

### Conditions of use

This appliance is intended to be used in household and similar applications such as,

- The kitchen areas in shops, offices and other working environments;
- Farm house and by clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments;
- Catering and similar non-retail applications;

Please read the user manual carefully and keep it in a handy place for later reference.

The symbols you see in this manual have the following meanings:

## WARNING

This symbol indicates information concerning your personal safety.

## CAUTION

This symbol indicates information on how to avoid damaging the appliance.



## TIPS AND INFORMATION

This symbol indicates tips and information about the use of the appliance.

## ENVIRONMENTAL TIP

This symbol indicates tips and information about economical and ecological use of the appliance.

### MEANING OF SYMBOLS

-  This symbol indicates to never do this.
-  This symbol indicates to always do this.

## TIPS AND INFORMATION

Important: Check for any damages or marks. If you find that the refrigerator is damaged or marked, you must report this within 7 days if you wish to claim for damages/marks under the manufacturer's warranty. This does not affect your statutory rights.













## WARNING



If pressurised aerosol containers bear the word 'Flammable' and/or a small flame symbol, do not store them inside any refrigerator. If you do so, you may cause an explosion.

When you dispose of refrigerators and freezers, remove all doors. Children can suffocate if they get trapped inside. This refrigerator contains insulation formed with flammable blowing gases. Avoid safety hazards by carefully disposing of this appliance.






## WARNING

-  This appliance must be plugged into its own dedicated 220-240V, 50/60Hz AC electrical outlet
-  Ensure that the electrical outlet is properly earthed to ground. Consult a qualified electrician if you are unsure.
-  Do not use an extension cord or adapter plug.
-  If the power cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified personnel in order to avoid a hazard.
-  Unplug the appliance before cleaning and before changing the light bulb to avoid electric shock.
-  Never unplug the appliance by pulling on the power cord. Always grip the plug firmly, and pull straight out of the receptacle to prevent damaging the power cord. Choose a location that is not too cold for installation.
-  The temperature should be above 10 degrees °C.
-  Put the appliance in a dry place, avoiding areas of high moisture or humidity.
-  Do not place the appliance in frosty or unprotected areas, such as in a garage or on a verandah.
-  Do not place the appliance in direct sunlight.
-  Do not place the appliance near stoves, fires or heaters.
-  The plug must be accessible when the appliance is in position.

## WARNING

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Please follow these tips;

 
-  Never let children play with the refrigerator.
-  Never store fizzy drinks in the freezer compartment.
-  Never try to repair the refrigerator on your own.
-  Never use electric heaters or dryers to defrost the freezer because you can receive an electric shock.
-  Never use electrical appliances inside the storage areas.

## WARNING

### Stability Foot

When you refrigerator is in place, wind down the stability foot to the floor to stabilise it. Lift the front of the refrigerator to take the weight of the stability foot, then turn it 1/4 turn further to ensure firm contact with the floor.

If you do move the refrigerator, remember to wind it back up, to allow the refrigerator to roll. Remember to reset it when reinstalling.

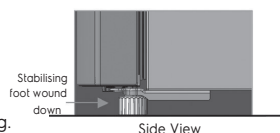

#### R600A REFRIGERANT WARNING

- This appliance contains flammable R600a refrigerant. Avoid safety hazards by carefully installing, handling, servicing and disposing of this appliance. If your appliance contains R600a it will be indicated on the rating plate inside the appliance.
- Ensure that the tubing of the refrigerant circuit is not damaged during transportation and installation.
- In the event any damage accidentally occurs, keep the appliance away from open fires and any devices that produce sparks or arcs and luminaries during normal or abnormal operation, and unplug the appliance at the power point. Call authorized service for necessary action and advice.
- Leaking refrigerant may ignite vent area if leak occurs.
- The room for installing appliance must be at least 1m<sup>3</sup> per 8g of refrigerant. The amount and type of refrigerant in the appliance can be found on the rating plate inside the appliance.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

#### WARNING

- Do not use a steam cleaner. If live components come in contact with the condensing steam, they may short circuit or cause an electric shock.
- Do not plug the appliance into a timer fitted to the power point.
- Do not put your appliance on an uneven surface.
- Do not store explosive substances such as aerosol cans with flammable propellant in the appliance.
- Do not store fizzy drinks in the freezer compartment.
- Never try to repair the refrigerator on your own. Use only a qualified or authorised service person for repairs.
- Never use electric heaters or dryers to defrost the freezer because you can receive an electric shock.

### Installing Your New Refrigerator

 
Clean the refrigerator thoroughly according to instruction, and wipe away any dust that has accumulated during shipping.

Check that the floor is level. If it is not then adjust the provided levelling leg so product is level and stable.

We recommend that you let your refrigerator run for two to three hours before you put any food in it. This will allow you to check that it is operating properly and that enough cool air is going to the freezer.

#### Clearance around your Top and Bottom Mount refrigerator

- Allow a minimum of 30mm clearance on both sides of the refrigerator.
- Allow 50mm clearance at the back of the refrigerator.
- Allow a minimum of 10mm clearance above the hinge cover.
- If you do not have a cupboard with allowance for air flow above the refrigerator, the recommended clearance area on top increases to 90 mm.
- When positioned in a corner area, spacing of at 350mm on the hinge side will allow the doors to open enough to enable the removal of bins and shelves.

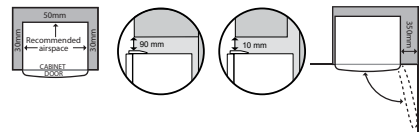


NOTE: In installation where both sides and the rear of the refrigerator are not enclosed by cabinetry eg the refrigerator is placed against a wall, the clearance between the rear of refrigerator and the wall should not be greater than 75mm.


Your refrigerator uses energy efficient components that may produce different noises (Refer "Noises" page for examples) to your old refrigerator. Occasionally a gurgling sound of refrigerator flowing or the sound of parts expanding and contracting can be heard. These noises are quite normal.

#### Installing your refrigerator

 
1. Roll the refrigerator into place. The rollers are designed for forward or backward movement only. They are not castors. Moving the refrigerator sideways may damage your floor and the rollers. Before moving your refrigerator ensure height adjusting nut and the stability foot are fully wound up off the floor.
2. Wind the height adjusting nut under door hinge down until the refrigerator is tilted back by 10mm (see diagram).

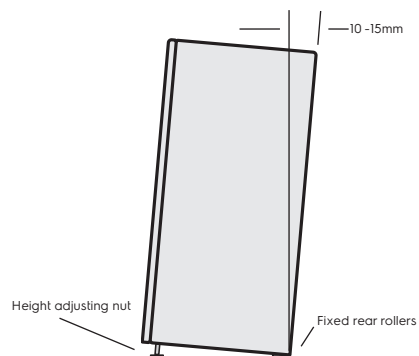

 - Wind the height adjusting nut on the handle side down until the refrigerator is level and stable. If you have difficulty winding the nut or height adjusting foot down, have someone tilt the refrigerator back so you have better access.



 - Check the alignment of the refrigerator to the surrounding cupboards to see if it is level. You can adjust the level as detailed in step 2 and 3.

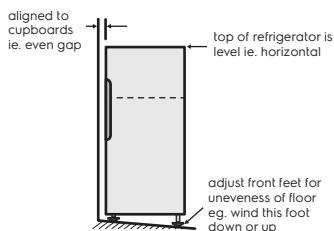

## Cleaning Your Refrigerator

### Exterior

You should only clean your refrigerator with lukewarm soapy water and a soft cloth. Rinse with clean water and then wipe the surface with a soft clean cloth to remove any soap residue.

### Interior

You should clean the refrigerator interior regularly. Wash the interior with a soft cloth and lukewarm soapy water. Thoroughly dry all surfaces and removable parts. Avoid getting water on refrigerator controls. If you have taken out any removable parts, replace them and switch the power on before restocking the refrigerator with food. Naturally, you should keep the interior of your refrigerator hygienic by promptly and thoroughly wiping up any food spills.

## WARNING

Never use hot water, solvents, commercial, caustic or abrasive cleaners, or scourers to clean this appliance as they will damage it. Many commercially available cleaning products and detergents contain solvents that will damage your refrigerator. When cleaning, use only a soft cloth and lukewarm soapy water.

## TEMPERATURE CONTROL

When you first turn on the refrigerator, set both the refrigerator and freezer temperature control to normal. Please refer to the below section for information on adjusting refrigerator and freezer temperature.

## TIPS AND INFORMATION

When you set a temperature, you set an average temperature for the whole refrigerator cabinet.

Checking the softness of ice cream is a good indication that your freezer is the right temperature, while checking the temperature of water kept in the refrigerator is a good way of checking the temperature of the food compartment.

Temperatures inside each compartment may vary, depending on how much food you store and where you place it.

 
High or low room temperature may also affect the actual temperature inside the refrigerator.

When you change the temperature settings, make small adjustments and wait 24 hours before assessing whether you need to make any further changes.


### For Top Freezer models

Freezer temperature setting recommendation


Summer  
(Higher than 35°C)



Set to normal

 

Winter  
(Under 15°C)

 

## TIPS AND INFORMATION

Setting the freezer temperature to colder is not recommended for normal or very hot climate condition as this will limit the cooling capacity to other sections of the refrigerator. In very cold climate the freezer will need to be set colder.

Refrigerator temperature adjustment

- Select the refrigerator control
- Slide the control to the left to set it to colder
- Slide the control to the right to set less cold

Refrigerator temperature setting recommendation

 
Set to colder



Set to **TASTESEAL**



Set to less cold




## FEATURES

This section tells you how to make the most of the many useful features of the refrigerator and how to clean them.

### TASTESEAL Room

 Use the **TASTESEAL** compartment to store meat, snack, beverage and dairy products. You can adjust TASTESEAL temperature by sliding the refrigerator temperature control.

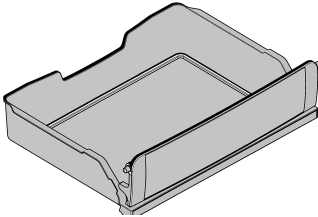

Recommended food storage

Temperature adjustment	Product
COLDER	Soft freezing
<b>TASTESEAL</b>	Meats and Fish
LESS COLD	Cheese, yogurt, dairy products and drinks


### WARNING

 Please refer to page 10 for storage guideline when storing meat and fish.

Please do not store beverage or bottle of drink in TASTESEAL compartment once set refrigerator temperature as COLDER and TASTESEAL.

### Door storage bins (shelves)

Both the refrigerator and freezer have door storage bins. You can adjust the refrigerator bins to meet different storage needs. All the door bins are completely removable for cleaning. If you want to remove or adjust a bin, lift and tilt to remove. To replace, tilt the top and push bin down until the support lugs lock it in place.

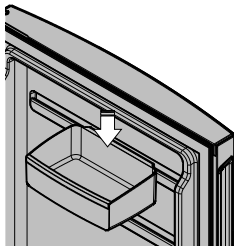

### Store safe compartment (where fitted)

You can use this compartment to store food and other items. To operate lock, push up to open and down to lock.

 
### Crisper bin

Storing vegetables

Use the crisper bin to store vegetables, fruits or small items. You can adjust the humidity inside the bin by sliding the humidity control.


Storing fruits and small items

You can store fruits in the crisper bin, but do remember to lower the humidity by sliding the lever on the humidity control.

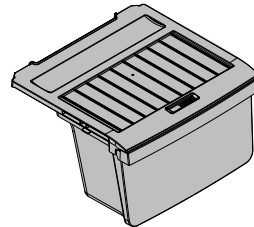

### Deodorizer

 Your refrigerator is fitted with FreshTaste Deodorizer to assist with the removal of food odours inside your refrigerator. Keeping the food covered and wrapping it in plastic will also help to reduce the odours inside your refrigerator.

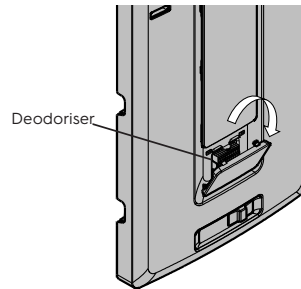

### LED Lighting

 
Your refrigerator is fitted with long life LED lighting. In the unlikely event the LED lights should ever fail, then the LED lights need to be serviced by a qualified technician. Refer to page 11 for contact details.

### DOOR ALARM

If the refrigerator door is left open longer than two minutes, a buzzer will sound. Re-set the alarm by pressing the Light switch or closing the door.

## TOP FREEZER FEATURES

- ETB2302J-A
- ETB2302J-H

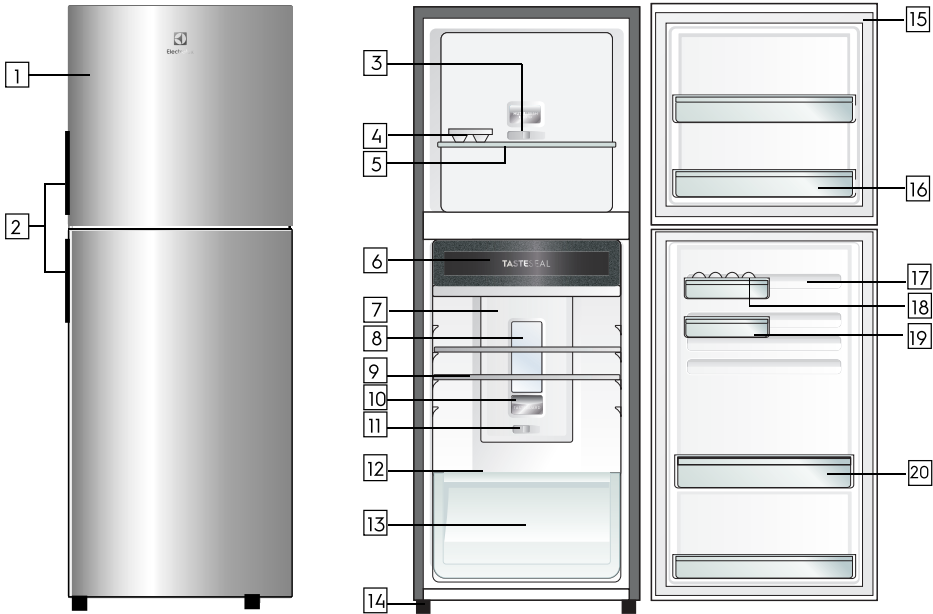


The details of the refrigerator feature:

1	Doors
2	Door Handles
3	Slide Control Freezer
4	Ice Tray
5	Freezer Shelf
6	TasteSeal Room
7	Multi Flow
8	Refrigerator Light
9	Shelf
10	Deodoriser Cover Refrigerator

11	Slide Control Refrigerator
12	Humidity Slide
13	Crisper
14	Feet
15	Gaskets
16	Door Bins
17	FlexStor Rails
18	Egg Tray
19	FlexStor Bins
20	Bottle Bins

TOP FREEZER FEATURES

 - ETB2502J-A
- ETB2802J-A
- ETB2502J-H
- ETB2802J-H

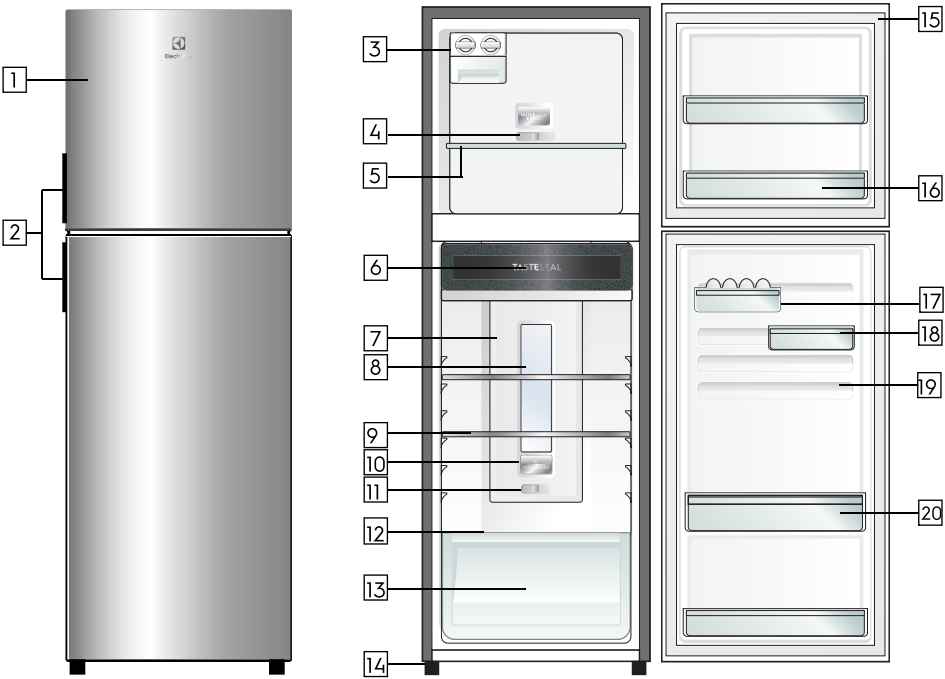

The details of the refrigerator feature:


1	Doors
2	Door Handles
3	Ice Twist & Serve
4	Slide Control Freezer
5	Freezer Shelf
6	TasteSeal Room
7	Multi Flow
8	Refrigerator Light
9	Shelves
10	Deodoriser Cover Refrigerator

11	Slide Control Refrigerator
12	Humidity Slide
13	Crisper
14	Feet
15	Gaskets
16	Door Bins
17	Egg Tray
18	FlexStor Bins
19	FlexStor Rails
20	Bottle Bins



TOP FREEZER FEATURES

 - ETB3400J-A
  - ETB3400J-H
- ETB3700J-A
  - ETB3700J-H

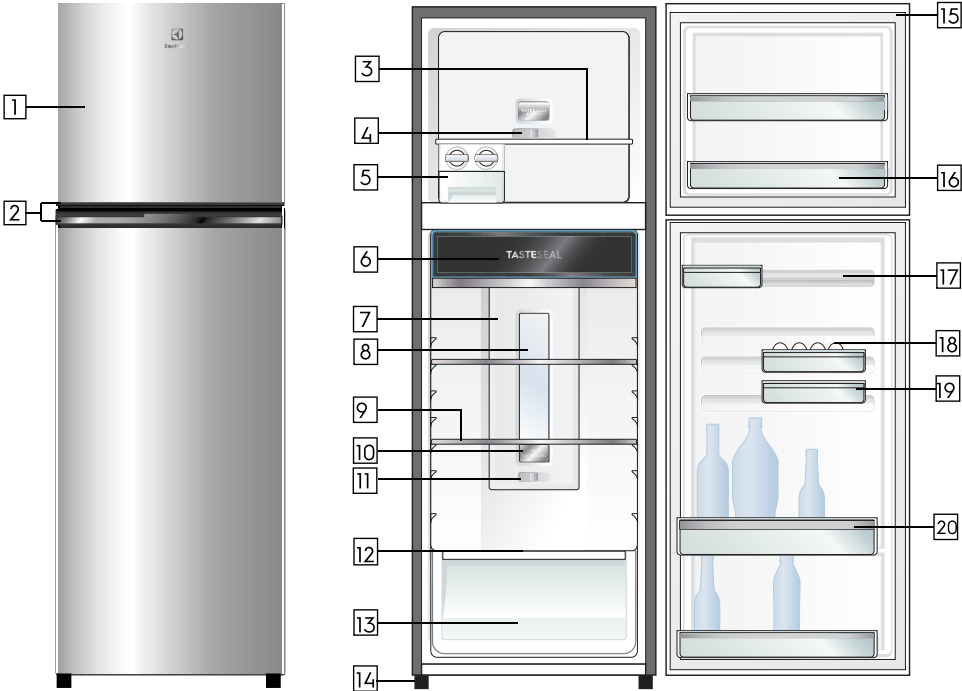

The details of the refrigerator feature:

1	Doors
2	Door Handles
3	Freezer Shelf
4	Slide Control Freezer
5	Ice Twist & Serve
6	TasteSeal Room
7	Multi Flow
8	Refrigerator Light
9	Shelves
10	Deodoriser Cover Refrigerator

11	Slide Control Refrigerator
12	Humidity Slide
13	Crisper
14	Feet
15	Gaskets
16	Door Bins
17	FlexStor Rails
18	Egg Tray
19	FlexStor Bins
20	Bottle Bins

## FOOD STORAGE GUIDE

CATEGORY	PRODUCT	REFRIGERATOR	FREEZER	STORAGE TIPS
MEAT	Sausages and Mince	1-2 Days	2-3 Months	Keep cold meat at the back of the refrigerator where it is coldest.
	Chops and Steak	3-4 Days	4-6 Months	
	Cold Meats	3-5 Days	4-6 Months	Plastic can cause meat to sweat if stored in refrigerator for more than a day.
	Roasts	3-5 Days	12 Months	Roast can take up to 48 hours to defrost properly, transfer frozen roast to the refrigerator 2 days before use.
POULTRY	Chicken	1-2 Days	2 Months	If poultry takes on a smell or colour you are unsure about it is best to throw it out.
	Roast Chicken	3-5 Days	12 Months	
	Eggs	6 Weeks	Not Suitable	Whole eggs are not suitable for freezing, slightly beaten eggs may be frozen for four months.
SEAFOOD	Whole fish and fillets	2-3 Days	2 Months	Store in an airtight container or foil.
	Lobster and crabs	1-2 Days	2 Months	
	Prawns	1-2 Days	2 Months	Never freeze prawns in salty water as this will dehydrate the flesh.
DAIRY	Milk	Until Expiry Date	Not Suitable	If dairy takes on a smell or colour and you are unsure about it, it is best to throw it out.
	Yoghurt	7- 10 Days	Not Suitable	
	Hard Cheeses	2 Weeks - 2 Months	2 Months (Grated)	
	Soft Cheeses	1-2 Weeks	Not Suitable	Depending on the variety hard cheese can last from 2 weeks to 2 months.
	Butter	8 Weeks	12 Months	
FRUIT & VEGETABLES	Every fruit and vegetable has a different shelf life. Some stay fresh for a couple of days e.g. beans, others can last for a couple of months e.g. onions.		8-12 Months When freezing chop and blanch in small portions.	Keep vegetables in the crisper and away from the air vents to avoid freezing.
				Don't wash fruit and vegetables before storing them in the refrigerator as this can make them susceptible to rotting.
LEFT OVERS	Homemade meals	3-4 Days	2-6 Months	Store in sealed container.
				Freeze meals in small portion sizes to limit wastage.

### IMPORTANT

Please note, use this information as a guide only, actual storage times will vary depending on how you use your refrigerator, climatic conditions and the freshness of the food.

## TROUBLESHOOTING

If you find that something is wrong with your refrigerator, you can carry out some easy checks before calling for service. You may be able to fix the problem and save time and costs, and spare yourself from some inconvenience.

Problem	Solution
<b>When your appliance is not operating</b>	<ul style="list-style-type: none"><li>• Check that the power cord is plugged into the power outlet properly and that the outlet is switched on.</li><li>• Try running another appliance from the same power outlet. If no power is coming out from the outlet, you may have a blown fuse or tripped your household power supply circuit.</li><li>• Try adjusting the temperature control to a slightly colder position.</li><li>• It is normal for the freezer fan to NOT operate during the automatic defrost cycle or for a short time after the refrigerator is turned on.</li></ul>
<b>When there is refrigerator noise</b>	<ul style="list-style-type: none"><li>• Your refrigerator uses energy efficient components that may produce different noises from your old refrigerator.</li><li>• Occasionally, a gurgling sound of the refrigerant flowing or the sound of parts contracting or expanding may be heard.</li><li>• These sounds are quite normal. If the refrigerator is rattling or making vibrating noises, check that it is level and adjust levelling foot.</li></ul>
<b>If there are odours inside the refrigerator</b>	<ul style="list-style-type: none"><li>• The interior may need cleaning</li><li>• Some foods may produce strong odours and need to be tightly sealed.</li></ul>
<b>If the temperature in the refrigerator is too warm</b>	<ul style="list-style-type: none"><li>• Check that the refrigerator has enough clearance at the sides, back and top. Refer to the installation instructions in this manual.</li><li>• Refer to <b>Temperature Control</b> section.</li><li>• The door may have been opened for too long or too frequently.</li><li>• Food containers or packaging may be holding the door</li></ul>
<b>If the temperature in the refrigerator is too cold</b>	<ul style="list-style-type: none"><li>• Refer to <b>Temperature Control</b> section.</li><li>• Increase the temperature to avoid high energy consumption.</li></ul>

 
 
 
 
## SERVICE REQUEST

If the problem persists after you have made the above mentioned checks, contact your nearest service centre or the dealer where you bought the refrigerator from. Be ready to quote the model number which is stated on the label found at the inner plastic compartment liner wall of the refrigerator.

### Important notice

Before calling a service technician, please check carefully the operating instructions, service booklet and warranty terms and conditions.

# Noise

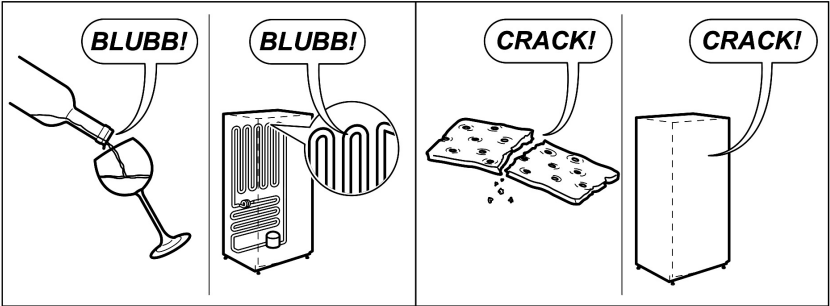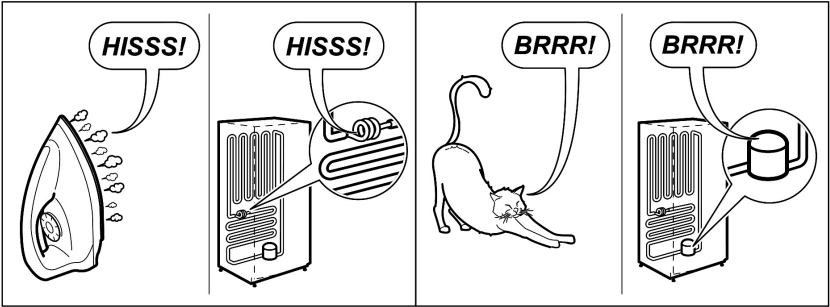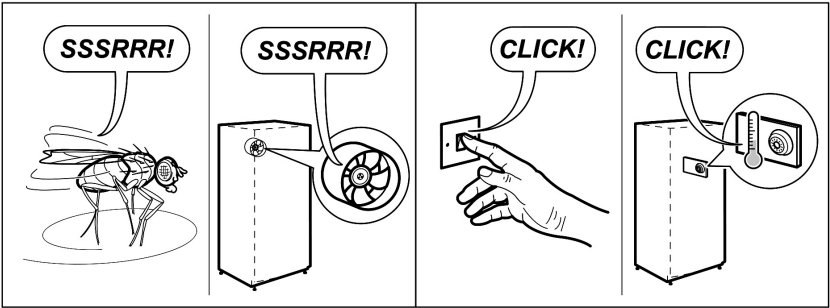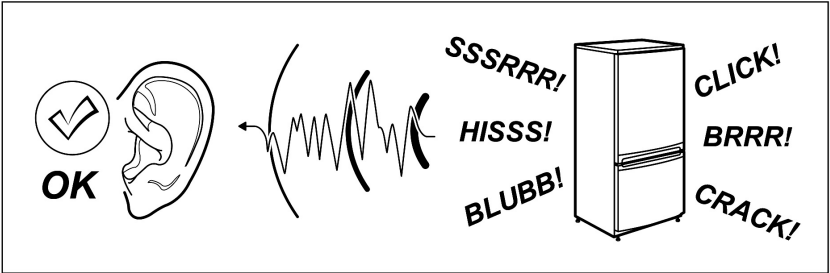

## Notes

[illegible]