


EQAXF01BxBV



EN


USER MANUAL

1

VN

TÀI LIỆU HƯỚNG DẪN SỬ DỤNG

1

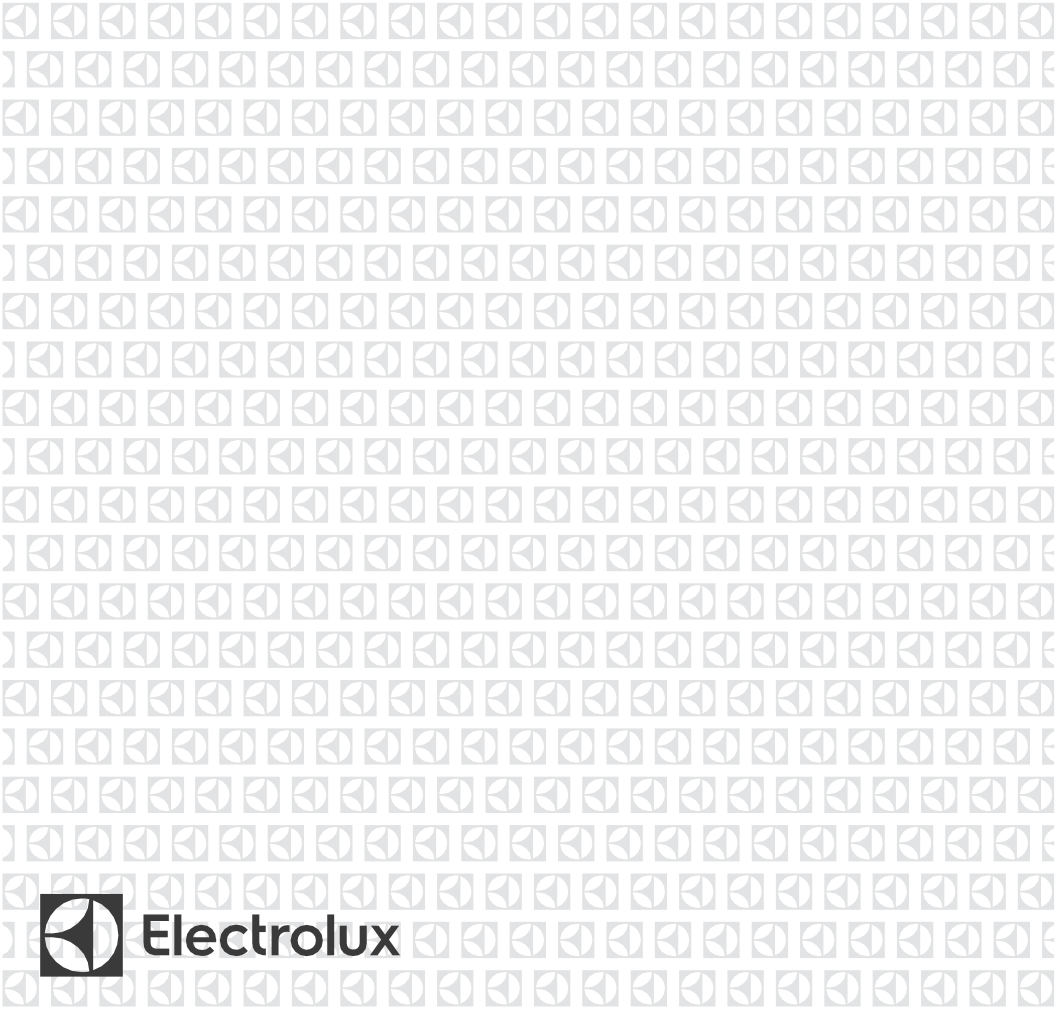

Electrolux

Welcome

Thank you for choosing ELECTROLUX. This manual contains all the information you need to safely and correctly use your water dispenser. Please read all the instructions prior to using the appliance, and keep this manual in a secure place for future reference. Do not remove the rating plate label which attached adhesive identification label containing the code, model number, manufacturer and other information. This label will be used by an ELECTROLUX authorized service representative in the event that your water dispenser needs servicing.

Environmental Notice

The packaging material used is recyclable. We recommend that you separate plastic, paper and cardboard and give them to recycling agents. To help preserve the environment, the refrigerant used in this product is R134a (Hydrofluorocarbon - HFC), which does not affect the ozone layer and has little impact on the greenhouse effect. According to WEEE (Waste of Electrical and Electronic Equipment) guidelines, waste from electrical and electronic devices should be collected separately. If you need to dispose of this appliance in the future, do not throw it away with the rest of your domestic garbage. Instead, please take the appliance to the nearest WEEE collecting agents, where available.



Contents

Water dispenser information	3
Precautions	4
Illustration	6
Using your water dispenser	7
Operation instructions	8
Cleaning and maintenance	10
Trouble Shooting	12
Circuit diagram	13
Technical Information	13
Customer Care	14

Attention

Do not try to install or turn on the unit without having read the indicated safety precautions in this manual.

The dispenser heats water to a temperature of 90°C. It can cause severe scalding. Please operate it carefully.

In case of damage, please contact an authorized technical service agent.

Do not disassemble the electrical parts of this appliance. Any repairs done by an unauthorized person may cause serious injuries or properties incident.

The adult should supervise the children in order to make sure the children can not play with the appliance.

The appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

This appliance is intended to be household used only .

If the power cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

To avoid danger of suffocation, keep plastic bag away from babies and children.

Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

Water dispenser information

1. This unit is designed for drinkable water only. Put bottles as specified inside the cabinet before using.
2. This unit should be used in an environment with temperatures ranging from 10°C to 43°C with a relative humidity not higher than 90%.
3. The dispenser can satisfy the need for hot water, cold water, room temperature water and water as a mixture of the cold water and room temperature water.
4. With the adoption of distinctive thermal isolation technology, this unit can minimize thermal exchange between hot, room temperature and cold water.
5. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
6. Regional restrictions
The heating method of machine can be only used in the lower than 1500m elevations.

Precautions

For children

1. Destroy the carton, plastic bag and other packing materials after the dispenser is unpacked. Children might use them for play.
2. Children require supervision when using the dispenser.
3. Recommend to install the anti-tilt bracket at the back side of this water dispenser to prevent the dispenser from falling down which could cause injury.(Fig. 6)

For the user/installer

1. Plug the water dispenser directly into the socket. The unit requires proper grounding and the correct voltage (as technical information specified on page 13 of this manual).(Fig. 1)
2. An appropriate length of power-supply cord is provided to reduce the risks of becoming entangled in, or tripping over a longer cord.
3. Connect the plug firmly.
4. Do not use an extension cord or plug adaptor.(Fig.2)
5. Choose a place that is near a grounded electrical socket. Keep the dispenser at least 20cm away from walls and other appliances and furnitures on all 4 sides.
6. Do not place the water dispenser sitting over the power cord.

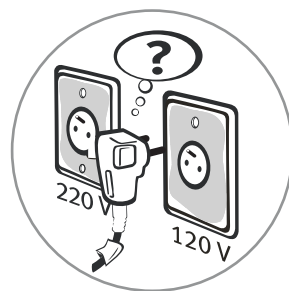


Fig. 1

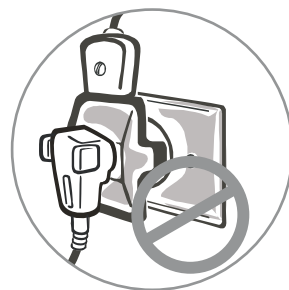


Fig. 2

7. Do not pull out or insert the plug with wet hands to avoid electric shock.(Fig. 3)
8. Use the switch when turning the heating/ cooling On/Off. Locate on the left back side of water dispenser.(page 6)
9. Do not fasten, twist or tie the power cord. If the power cord is damaged, it should be replaced by the manufacturer, service technician or a qualified person to prevent any risk.
10. Keep the unit in a dry place and away from direct sunlight. Do not place the machine on paper or foam. Do not place anything flammable beside this machine.(Fig. 4)
11. To avoid damage to the unit, do not plug the power cord or turn on the heating switch until the water can flow out from the hot water spout when the hot water button be activated.
12. Unplug the unit when the unit will not be used for a long preiod for the reason of saving electricity.
13. Never turn the unit upside down or tilt it more than 45°.(Fig. 5)
14. Never use organic liquids polishing chemical to clean the machine.
15. The thermostat to control temperature has been set up by manufacturer. There is no need to adjust it yourself.

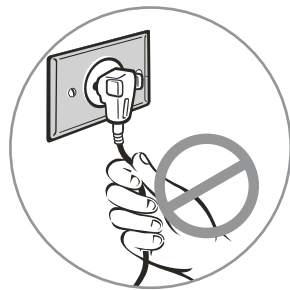


Fig. 3



Fig. 4


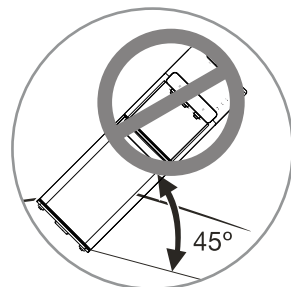


Fig. 5

Illustration

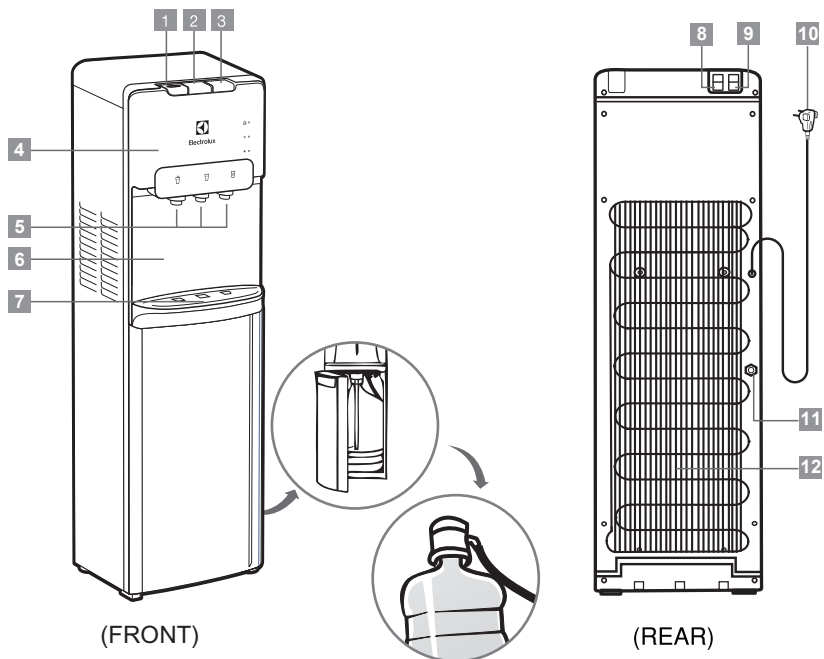

- 1 button of hot water
- 2 button of normal water
- 3 button of cold water
- 4 panel
- 5 spout
- 6 front carapace
- 7 drip tray

- 8 cooling switch
- 9 heating switch
- 10 power cord
- 11 drain hole
- 12 condenser

Using your water dispenser

Locate dispenser

1. Place dispenser upright.
2. Locate dispenser on a hard and level surface in a cool shaded location near a grounded socket. Do not plug in power cord yet.
3. Position dispenser so the back is at least 20 cm from wall and there are at least 20 cm of clearance on both sides.

Assemble

1. Snap drip tray and grid assembly into front carapace.

Machine Installation

Installing the floor Bracket kit(Fig.6)

1. Use 13 mm screw to fix the fixing bracket on the side of base pan.
2. Drill out a screw hole(6 mm) on the floor.
3. Insert a screw anchor (wall plug) into the drilled hole.
4. Move water dispenser, Align fixing bracket hole with screw hole of the floor.
5. Put the 25mm screw into the screw hole of fixing bracket.
6. Tighten the screw.

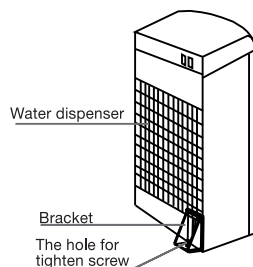


Fig. 6



Install water bottle

1. Open cabinet door.
2. Place fresh bottle outside of cabinet.
3. Remove the entire plastic cap from top of bottle.
4. Clean outside of new bottle with a cloth.
5. Place probe assembly into bottle.
6. Slide collar with head down until it clicks in place.
7. Slide bottle into cabinet and close door.



Fig. 7

Provide electricity

Plug cord into a properly grounded socket.

At this time the pump will begin to move water from the bottle to the hot and cold tanks. It will take up to approximate 12 minutes to fill the tanks for the first time. During this period the pump will run continuously. This is normal.

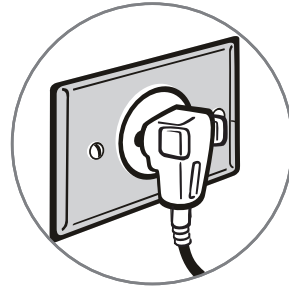


Fig. 8

Operation Instructions

Activate heating and cooling

This unit will not dispense hot or cold water until the switches are activated.

To activate, push top side of power switches in to start heating and cooling water.

- If you do not want to heat water, push bottom side of red switch in.
- If you do not want to cool water, push bottom side of green switch in;



Fig. 9

Dispensing water

This unit has been tested and sanitized prior to packing and shipping. During transit dust and odors can accumulate in the tank and lines. Dispense and dispose at least one liter of water to prior to drinking any water.

Dispensing cold water

After setup, it will take up to approximate 1 hour get water to maximum cold temperature. During this time the compressor could run continuously. This is normal.

1. Position bottle, glass, pitcher or cooking pot below spout.
2. Press cold water button downward to start cold water flow.
3. Release button once desired fill level is achieved.



Fig. 10

Dispensing normal water

1. Position bottle, glass, pitcher or cooking pot below spout.
2. Press normal water button downward to start normal water flow.
3. Release button once desired fill level is achieved.

Dispensing hot water

After setup, hot water will be available in 15-20 minutes.

1. Position bottle, glass, pitcher or cooking pot below spout.
2. Push the red child lock button from right to left and press hot water button downward to start hot water flow.
3. Release button once desired fill level is achieved.



Fig. 11

Changing bottles

A flashing orange light on your function lights alerts you when your bottle is empty. Replace the bottle as soon as possible.

Do not dispense hot, cool or cold water if the orange light is flashing as you could empty the tanks and cause the dispenser to overheat.

1. Open the cabinet door.
2. Slide empty bottle out of cabinet.
3. Remove probe assembly from empty bottle.
4. Set empty bottle aside.
5. Place fresh bottle outside of cabinet. Remove entire plastic cap from top of bottle. Clean outside of new bottle with a cloth.
6. Place probe assembly into bottle. Slide collar with head down until it clicks in place.
7. Slide bottle into cabinet and close door.



Fig.12

Cleaning and maintenance

1. The unit has been factory disinfected, however, it is advisable to clean the dispenser prior to initial use.
2. Follow the step of “using your water dispenser “ on page 7
3. Make sure unplug the water dispenser before cleaning.
4. Dispense water from each spout till no water flow out from spout.
5. Place a large bucket beneath the drain hole which is on the back of water dispenser, then remove the drain cap and drain out water.
6. Once draining finished, close the drain hole with drain cap.
7. Follow “using your water dispenser “ on page 7 to use the water dispenser normally.

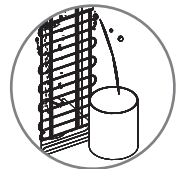


Fig. 13

Sanitizing

The machine should be disinfected with disinfectant separately bought from drugstore or marketplace according to the instruction manual of the disinfectant and then clean it with water (see cleaning and draining instructions). Generally this should be done every three months.



Fig. 14

To remove mineral deposits

Mix 1 gallon of water with half pound of citric acid crystals, inject into the machine and make sure the water can flow out from the hot water spout when the hot water button be activated. Switch on the power and heat water, 30 minutes later, drain off the liquid and clean it with water two or three times. Generally this should be done every six months.

Never disassemble this machine by yourself to avoid risk of damaging machine.

⚠ CAUTION

Scald Hazard

Be careful on the hot water coming out when tapping hot water and drain water from drain hole.

⚠ CAUTION

Water Leakage

Drain cap loose may cause water leakage and cause floor damage. Please make sure it is tighten enough before long term using.

⚠ WARNING

Electrical Shock Hazard

Unplug the water dispenser before cleaning and wiping up spilled water on unit.

⚠ WARNING

Scald Hazard

Dispenser heats water to a temperature of 194°F (90°C). Water temperatures above 125°F (52°C) can cause severe burns or scalding. Children, the disabled and the elderly are at highest risk of being scalded. Children should be supervised by an adult when using this product.

Trouble Shooting

Before calling your service representative check the following items:

Water dispenser does not work

- Make sure the water dispenser is properly connected to a working socket and the heating/cooling switches are set ON.

Water is leaking

- Unplug the water dispenser, remove bottle and replace with new one.
- Make sure the drain cap at the back side of water dispenser is tighten enough.

No water is coming from the spout

- Make sure the bottle is not empty, if empty, replace it with new one.
- Make sure to completely depress the pushbutton controls.
- Make sure the connection tube inside the unit is not loose.

Cold water is not cold

- Make sure the water dispenser is properly connected to a working socket
- Make sure the green cooling switch is set ON.
- Wait until the COOLING indicator turns off, it takes up to approximate 1 hour to cool the water in general.
- Make sure the back of the water dispenser is at least 20 cm away from a wall and there is free airflow on all sides of the water dispenser.

Hot water is not hot

- Make sure the water dispenser is properly connected to a working socket.
- Make sure the red heating switch is set ON.
- Wait until the HEATING indicator turns off, it takes 15~20 minutes to heat the water in general.

Dispenser is noisy

- Make sure water dispenser is placed on placid and solid surface.
- Compressor on and off operation will happen to control the cold water as specification, it is normal.
- Pump will working to pump water into the tank when tap water, it is normal.

Water tastes


- Dust and odor be accumulated in the tank, dispose the reservoir water and replace bottle with a new one.
- Sanitize water dispenser or descale according to "Cleaning and maintenance".



To avoid accident, cut off the power supply before operation according to the following instruction.

Sometimes when water is dispensed for more than 2 minutes, the pump fails to take the necessary amount of water, in this case the lack of water indicator light on control panel will turn on. If this happens, just open the cabinet door, then close it, and wait for 2 minutes, then the dispenser will return to dispense water.

Circuit diagram

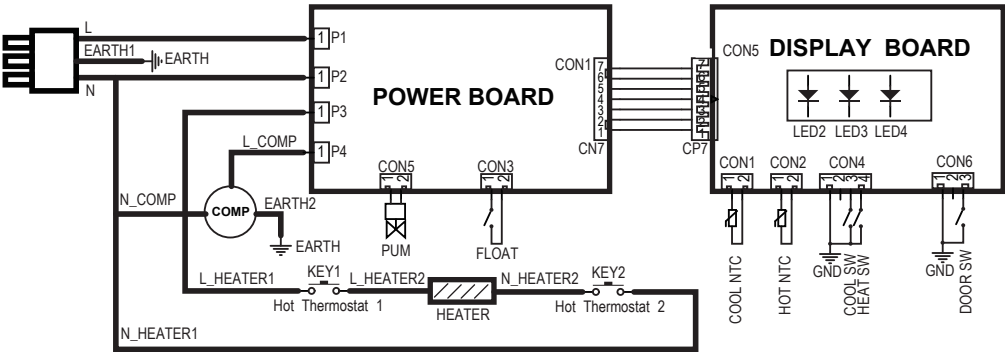

Technical Information

Model	EQAXF01BXBV
Power supply	220V-240V~ 50/60Hz
Cooling Power	100W
Heating Power	420W
Hot Water	4L/h($\geq 90^{\circ}\text{C}$)
Cold Water	2L/h($\leq 10^{\circ}\text{C}$)
Room Temperature Operation	10-43 $^{\circ}\text{C}$
Relative Humidity	$\leq 90\%$
Cooling Current	1.0A
Refrigerant	R134a/32g
Climate Class	ST,T
Cooling Cabinet Temperature	N/A
Product Dimension	L310mmxW374mmxH1040mm
Net Weight	14.7kg
Hot water tank capacity	1.16L
Cold water tank capacity	3.6L
Total capacity	4.76L

Remarks: Above technical data is based on standard testing method, refer to GB/T 22090-2008

Customer Care

Thailand

Call Center Tel : (+66 2) 725 9000
Electrolux Thailand Co.,Ltd.
Electrolux Building
14th Floor 1910 New Petchburi Road,
Bangkapi,Huay Kwang, Bangkok 10310
Office Tel : (+66 2) 7259100
Office Fax : (+66 2) 7259299
Email : customercareshai@electrolux.com

Indonesia

Tel : (+62 21) 522 7180
PT. Electrolux Indonesia
Gedung Plaza Kuningan
Menara Utara 2nd Floor,
Suite 201, Jl. HR Rasuna Said
kav C 11-14, Karet Setiabudi
Jakarta Selatan 12940
Office Tel: (+62 21) 522 7099
Office Fax: (+62 21) 522 7097
Email : customercare@electrolux.co.id

Vietnam

Domestic Toll Free : 1800-58-88-99
Tel : (+84 8) 3910 5465
Electrolux Vietnam Ltd.
Floor 9th, A&B Tower
76 Le Lai street - Ben Thanh Ward - District 1
Ho Chi Minh City dVietnam
Office Tel : (+84 8) 3910 5465
Office Fax : (+84 8) 3910 5470
Email : vncare@electrolux.com

Malaysia

Domestic Toll Free : 1300-88-11-22
Electrolux Home Appliances Sdn. Bhd.
Unit T2-7, 7th Floor, Tower 2 , Jaya33 Hyperoffice,
No. 3, Jalan Semangat, Seksyen 13,
46100 Petaling Jaya, Selangor
Office Tel : (+60 3) 7843 5999
Office Fax : (+60 3) 7955 5511
Email : malaysia.customercare@electrolux.com

Philippines

Domestic Toll Free : 1-800-10-845-care 2273
Customer Care Hotline : (+63 2) 845 care 2273
Electrolux Philippines, Inc.
10th Floor. W5th Avenue Building
5th Avenue Corner 32nd Street
Bonifacio Global City,
Taguig Philippines 1634
Trunkline: +63 2 737- 4756
Website : www.electrolux.com.ph
Email : wecare@electrolux.com

Singapore

CUSTOMER CARE HOTLINE : (+65) 6507 8699
Electrolux S.E.A. Pte Ltd.
11 Lorong 3 Toa Payoh
Jackson Square, Block B, #01-13/14/15
Singapore 319579
Office Tel : (+65) 6507 8900
Office Fax : (+65) 6356 5489
Email : customer-care.sin@electrolux.com


Xin chào

Cảm ơn bạn vì đã lựa chọn ELECTROLUX. Tài liệu hướng dẫn sử dụng này chứa toàn bộ thông tin mà bạn cần để có thể sử dụng cây nước nóng lạnh một cách an toàn và đúng cách. Vui lòng đọc toàn bộ thông tin chỉ dẫn theo thứ tự về cách thức sử dụng thiết bị, và giữ tài liệu này ở một nơi an toàn để tiện tham khảo sau này. Vui lòng không tháo tấm nhãn được dán trên thiết bị, trên nhãn này có ghi mã thiết bị, số kiểu máy, nhà sản xuất và một số thông tin khác. Trung tâm dịch vụ được ủy quyền của ELECTROLUX sẽ sử dụng tấm nhãn này trong trường hợp cây nước nóng lạnh của quý khách cần được bảo dưỡng.

Những lưu ý về môi trường

Những vật liệu đóng gói được sử dụng đều có thể tái chế. Chúng tôi khuyên bạn nên tách riêng nhựa, giấy và bia các tông và gửi chúng vào các đại lý chuyên tái chế. Để bảo vệ môi trường, chất làm lạnh được sử dụng trong sản phẩm này là R134a (Hydroflourcarbon – HFC), chất này không ảnh hưởng đến tầng ôzôn và ít ảnh hưởng đến hiệu ứng nhà kính.

Theo các chỉ dẫn của WEEE (Chất thải từ các trang thiết bị điện và điện tử), chất thải từ các thiết bị điện và điện tử cần phải được thu gom riêng. Nếu bạn không còn nhu cầu sử dụng và muốn vứt bỏ thiết bị này trong tương lai, đừng vứt nó đi cùng với các rác thải thông thường khác trong gia đình. Thay vào đó, hãy mang thiết bị đến đại lý WEEE gần nhất, đại lý này luôn sẵn lòng phục vụ bạn.

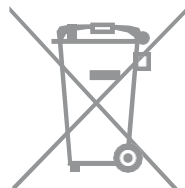

Mục lục

Thông tin về cây nước nóng lạnh.....	3
Thận trọng	4
Mình họa sản phẩm	6
Sử dụng cây nước nóng lạnh	7
Hướng dẫn vận hành	8
Vệ sinh và bảo dưỡng	10
Khắc phục sự cố	12
Sơ đồ mạch điện	13
Thông số kỹ thuật	13
Các trung tâm chăm sóc khách hàng	14

Chú ý

Vui lòng không cố gắng lắp đặt hoặc vận hành thiết bị khi chưa đọc các thông tin chỉ dẫn về an toàn trong tài liệu hướng dẫn này.

Cây nước nóng lạnh có thể làm nhiệt độ nước nóng lên đến 90°C, có thể gây bỏng nặng. Vui lòng vận hành thiết bị thật cẩn thận.

Trong trường hợp sản phẩm bị hư hỏng, vui lòng liên hệ với đại lý dịch vụ được ủy quyền.

Vui lòng không tháo rời các bộ phận điện tử của thiết bị, người không có chuyên môn và không được ủy quyền khi thực hiện bất cứ sửa chữa nào đều có thể gây nên thương tích nghiêm trọng và thiệt hại về tài sản.

Người lớn cần phải giám sát trẻ em để đảm bảo rằng trẻ em không đùa nghịch với thiết bị.

Thiết bị này không nên được sử dụng bởi những người (kể cả trẻ em) bị giảm khả năng về thể chất, cảm giác hay tinh thần hoặc thiếu kinh nghiệm và thiếu kiến thức, trừ khi được giám sát hoặc chỉ dẫn cách sử dụng thiết bị bởi một người có khả năng chịu trách nhiệm về sự an toàn của họ.

Thiết bị này chỉ nên được sử dụng trong hộ gia đình.

Nếu dây điện nguồn bị hỏng, dây mới được thay thế phải là một dây chuyên dụng hay một dây có sẵn từ nhà sản xuất hoặc các đại lý dịch vụ.

Để tránh nguy cơ có thể bị nghẹt thở, vui lòng để các túi nhựa tránh xa tầm tay trẻ sơ sinh và trẻ nhỏ.

Giữ cho hệ thống thông gió ở vỏ thiết bị hoặc ở trong cấu trúc tích hợp của thiết bị luôn mở, tránh gây tắc nghẽn.

Không sử dụng thiết bị cơ khí hoặc các thiết bị khác để đẩy nhanh quá trình ră đông, trừ các thiết bị được nhà sản xuất khuyến cáo.

Thông tin về cây nước nóng lạnh

1. Thiết bị được thiết kế chuyên dụng cho nước uống, và phù hợp cho bình 3 hoặc 5 Ga-lông.
2. Thiết bị nên được sử dụng trong môi trường có phạm vi nhiệt độ từ 10°C đến 43°C với độ ẩm tương đối không cao hơn 90%.
3. Cây nước nóng lạnh có thể phục vụ các nhu cầu về nước nóng, nước lạnh, nước nhiệt độ thường hoặc nước được pha giữa nước lạnh và nước nhiệt độ thường.
4. Bằng việc áp dụng công nghệ cách ly nhiệt độc lập, thiết bị này có thể giảm thiểu sự trao đổi nhiệt giữa nước nóng, nước nhiệt độ thường và nước lạnh.
5. Không cất trữ các chất gây nổ chẳng hạn như bình xịt có chứa chất dễ cháy vào trong thiết bị.
6. Hạn chế về khu vực

Cách thức làm nóng của thiết bị chỉ có thể được sử dụng ở độ cao thấp hơn 1500m.


Thận trọng

Đối với trẻ em


1. Hủy các bì các tông, túi nhựa và các vật liệu đóng gói khác sau khi tháo ra khỏi cây nước nóng lạnh. Trẻ em có thể sử dụng các vật liệu đóng gói này để đùa nghịch.
2. Cần phải có sự giám sát khi trẻ em sử dụng cây nước nóng lạnh.
3. Nhà sản xuất khuyên bạn nên sử dụng một khung chống nghiêng ở phía sau của cây nước nóng lạnh để ngăn việc thiết bị có thể rơi xuống và gây thương tích (Hình 6)

Đối với người sử dụng/người lắp đặt

1. Cắm dây điện nguồn của cây nước nóng lạnh trực tiếp vào ổ điện. Thiết bị cần được nối đất đúng cách và sử dụng nguồn điện áp thích hợp (được mô tả chi tiết trong phần thông tin kỹ thuật trang 13 của tài liệu) (Hình 1)
2. Độ dài thích hợp của dây điện nguồn được thiết kế nhằm giảm sự nguy hiểm từ việc dây có thể bị vướng hoặc người bị vấp ngã do dây điện quá dài.
3. Kết nối phích cắm một cách chắc chắn.
4. Vui lòng không sử dụng dây điện nối thêm hoặc bộ chuyển đổi phích cắm trung gian (Hình 2)
5. Chọn một vị trí gần ổ cắm điện nối đất, đặt thiết bị cách ít nhất 20cm so với tường và các thiết bị và đồ dùng khác ở cả 4 mặt.
6. Không đặt cây nước nóng lạnh đứng lên trên dây điện.

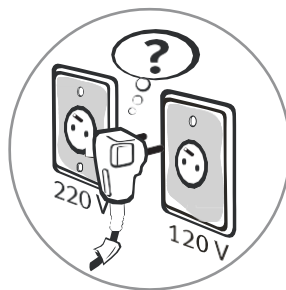

Hình 1

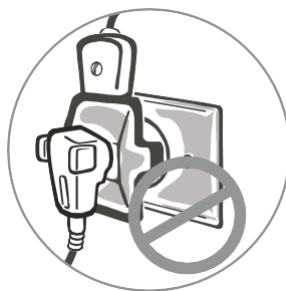

Hình 2

7. Không rút hoặc cắm phích cắm điện khi tay còn ướt để tránh bị giật điện (Hình 3)

8. Sử dụng công tắc khi bật / tắt bộ phận làm nóng / làm mát. Công tắc này nằm ở vị trí phía sau bên trái của cây nước nóng lạnh (Trang 6)

9. Vui lòng không cột, xoắn hoặc buộc thắt dây điện nguồn. Nếu dây điện nguồn bị hỏng, dây mới cần được thay thế bởi nhà sản xuất, chuyên viên bảo dưỡng hoặc người có đủ trình độ chuyên môn để tránh gây nguy hiểm.

10. Đặt thiết bị ở một nơi khô ráo và tránh xa ánh sáng trực tiếp. Không đặt thiết bị nằm trên giấy hoặc bông mút. Không đặt bất cứ vật liệu dễ cháy nào bên cạnh thiết bị (Hình 4)


11. Để tránh làm hỏng thiết bị, không cắm phích cắm điện hoặc bật công tắc làm nóng cho đến khi có nước nóng chảy ra từ vòi khi chế độ nước nóng được kích hoạt.

12. Rút phích cắm thiết bị khi bạn không sử dụng thiết bị trong một thời gian để có thể tiết kiệm điện.

13. Không bao giờ lật ngược hoặc làm thiết bị bị nghiêng quá 45° (Hình 5)

14. Không sử dụng các loại hóa chất tẩy rửa đánh bóng hoặc chất lỏng hữu cơ để vệ sinh thiết bị.


15. Bộ điều chỉnh nhiệt kiểm soát nhiệt độ đã được nhà sản xuất thiết lập sẵn. Quý khách vui lòng không tự điều chỉnh.

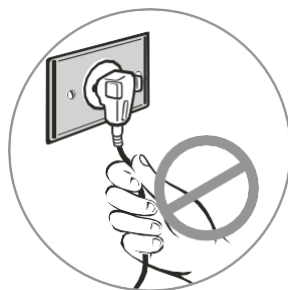

Hình 3





Hình 4

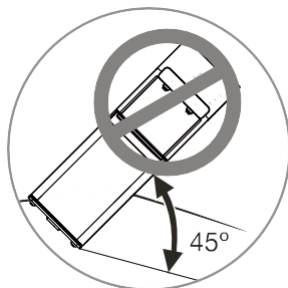

Hình 5

Minh họa sản phẩm

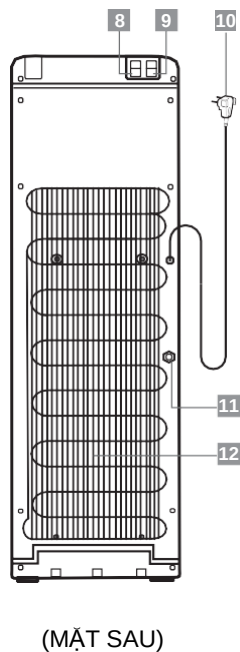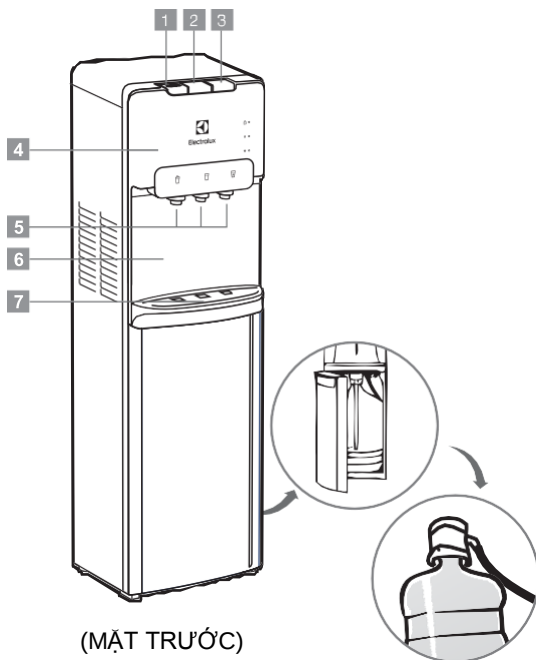

1 Nút nước nóng

2 Nút nước nhiệt độ thường

3 Nút nước lạnh

4 Tấm chắn phía trước

5 Các vò

6 Yếm lọc

7 khay hứng nước

8 Công tắc làm mát

9 Công tắc làm nóng

10 Dây điện nguồn

11 Lỗ thoát nước

12 Bình ngưng tụ

Sử dụng cây nước nóng lạnh

Xác định vị trí đặt cây nước nóng lạnh

1. Đặt cây nước nóng lạnh đứng thẳng
2. Đặt cây nước nóng lạnh trên một bề mặt chắc chắn và cân bằng ở một vị trí có bóng râm và mát mẻ, gần ổ cắm điện nối đất. Lúc này vui lòng chưa cắm dây điện nguồn.
3. Đặt cây nước nóng lạnh cách tường ít nhất 20cm ở mặt sau và để lại ít nhất 20cm không gian trống so với các vật thể khác ở tất cả các mặt.


Lắp ráp

1. Ráp khay hứng nước và khay lưới vào phần yếm lõm phía trước.

Lắp đặt thiết bị

Lắp đặt bộ khung sàn (Hình 3)

1. Sử dụng vít 13 mm để cố định khung cố định ở mặt bên của đĩa chân đế
2. Khoan một lỗ vít (6 mm) trên sàn nhà.
3. Lắp mẫu vít (phích cắm tường) vào lỗ đã khoan.
4. Di chuyển thiết bị, căn chỉnh lỗ của khung cố định cho khớp với lỗ vít trên sàn.
5. Đặt vít 25mm vào lỗ vít của khung cố định.
6. Vặn chặt vít.

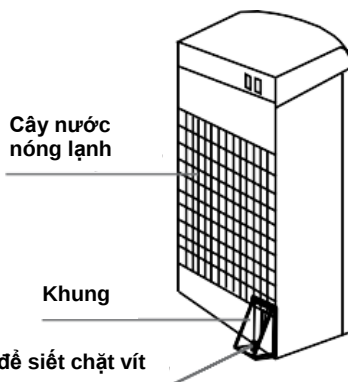

Hình 6



Lắp bình nước

1. Mở cửa khoang chứa bình.
2. Đặt bình nước bên ngoài khoang chứa bình.
3. Tháo toàn bộ phần nắp nhựa ra khỏi bình nước.
4. Lau sạch phía ngoài bình nước bằng khăn.
5. Lắp bộ phận thăm dò vào bình nước.
6. Đẩy nhẹ phần cổ bình nước với nắp hướng xuống dưới cho đến khi bình khớp vào vị trí.
7. Đẩy bình nước vào khoang chứa bình và đóng cửa.




Hình 7

Cắm điện

Cắm dây điện vào ổ điện nối đất đúng cách.

Lúc này, bộ phận bơm sẽ bắt đầu bơm nước từ bình nước vào khoang chứa nước nóng và lạnh. Vào lần đầu tiên, sẽ mất khoảng 12 phút để bơm đầy nước vào hai khoang chứa này. Trong thời gian này, bộ phận bơm sẽ hoạt động liên tục. Điều này là hoàn toàn bình thường.

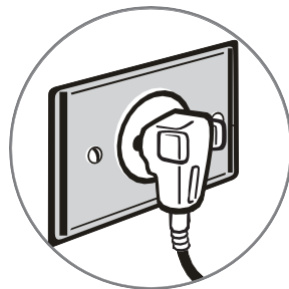

Hình 8

Hướng dẫn vận hành

Kích hoạt chế độ làm nóng và làm mát

Nếu công tắc chưa được bật, thiết bị sẽ không phân phối nước nóng và lạnh.

Để kích hoạt, vui lòng nhấn vào phần phía trên của công tắc nguồn để bắt đầu làm nóng và làm mát nước.

- Nếu bạn không muốn làm nóng nước, hãy nhấn vào phần phía dưới của công tắc màu đỏ.

- Nếu bạn không muốn làm mát nước, hãy nhấn vào phần phía dưới của công tắc màu xanh lá cây.



Hình 9

Xử lý nước

Thiết bị này đã được thử nghiệm và khử trùng trước khi đóng gói và vận chuyển. Trong quá trình vận chuyển, bụi và mùi có thể tích tụ trong các khoang chứa và đường ống. Vui lòng cho thiết bị vận hành phân phối ít nhất một lít nước, sau đó xả bỏ lượng nước đó trước khi uống.

Lấy nước lạnh

Sau khi cài đặt, sẽ mất khoảng một giờ để nước có thể đạt đến nhiệt độ lạnh tối đa. Trong suốt khoảng thời gian này, máy nén sẽ hoạt động liên tục. Điều này là hoàn toàn bình thường.

1. Đặt chai nước, cốc thủy tinh, bình đựng nước hoặc ấm nấu nước ngay dưới vòi.
2. Nhấn nút nước lạnh theo hướng xuống để lấy nước.
3. Thả nút khi bạn đã lấy đủ lượng nước mong muốn.



Hình 10

Lấy nước nhiệt độ thường

1. Đặt chai nước, cốc thủy tinh, bình đựng nước hoặc ấm nấu nước ngay dưới vòi.
2. Nhấn nút nước nhiệt độ thường theo hướng xuống để lấy nước.
3. Thả nút khi bạn đã lấy đủ lượng nước mong muốn.

Lấy nước nóng

Sau khi cài đặt, bạn có thể dùng nước nóng sau khoảng 15-20 phút.

1. Đặt chai nước, cốc thủy tinh, bình đựng nước hoặc ấm nấu nước ngay dưới vòi.
2. Đẩy nút khóa trẻ em màu đỏ từ phải sang trái và nhấn nút nước nóng theo hướng xuống để lấy nước.
3. Thả nút khi bạn đã lấy đủ lượng nước mong muốn.



Hình 11

Thay bình nước

Đèn màu cam nhấp nháy trên hệ thống đèn báo hiệu tính năng sẽ báo hiệu cho bạn rằng bình nước đã hết. Vui lòng thay bình nước mới sớm nhất có thể.

Không vận hành phần phối nước nóng, nước mát hoặc nước lạnh khi đèn màu cam đang nhấp nháy vì bạn có thể làm cạn nước trong các khoang chứa và khiến cây nước nóng lạnh trở nên quá nóng.


1. Mở cửa khoang chứa bình.
2. Kéo bình nước đã hết ra khỏi khoang chứa bình.
3. Tháo bộ phận thăm dò ra khỏi bình nước đã hết.
4. Đặt bình nước đã hết sang một bên.
5. Đặt bình nước mới bên cạnh khoang chứa bình. Tháo toàn bộ phần nắp nhựa ra khỏi bình nước. Lau sạch phía ngoài bình nước bằng khăn.
6. Lắp bộ phận thăm dò vào bình nước. Đẩy nhẹ phần cổ bình nước với nắp hướng xuống dưới cho đến khi bình khớp vào vị trí.
7. Đẩy bình nước vào khoang chứa bình và đóng cửa.



Hình 12

Vệ sinh và bảo dưỡng

1. Thiết bị này đã được khử trùng tại nhà máy. Tuy nhiên, nhà sản xuất khuyên bạn nên vệ sinh máy trước khi sử dụng lần đầu tiên.
2. Làm theo các bước từ 1-4 của chương “Sử dụng cây nước nóng lạnh” ở trang 7.
3. Đảm bảo rằng bạn đã rút phích cắm điện trước khi vệ sinh thiết bị.
4. Xả nước từ các vòi cho đến khi không vòi nào còn nước.
5. Đặt một xô lớn bên dưới lỗ thoát nước nằm ở phía sau cây nước nóng lạnh, sau đó tháo nắp thoát nước và xả nước.
7. Sau khi xả nước xong, đóng nắp thoát nước.
8. Thực hiện theo chương “Sử dụng cây nước nóng lạnh” ở trang 7 để sử dụng thiết bị một cách bình thường.

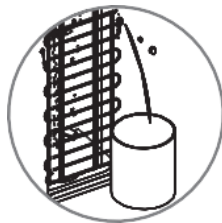

Hình 13

Khử trùng thiết bị

Bạn nên tiến hành khử trùng thiết bị bằng chất khử trùng được mua tại hiệu thuốc hoặc cửa hàng và vui lòng làm theo các hướng dẫn sử dụng của chất khử trùng đó. Sau khi khử trùng, hãy vệ sinh lại thiết bị bằng nước sạch (xem phần hướng dẫn vệ sinh và thoát nước).

Bạn nên vệ sinh cây nước nóng lạnh ba tháng một lần.



Hình 14

Loại bỏ cặn bẩn

Hòa 1 Ga-lông nước với nửa Pound tinh thể axit xi-trít, đổ hỗn hợp vào máy và hãy đảm bảo rằng nước có thể chảy ra từ vòi nước nóng khi nút nước nóng được bật. Bật công tắc làm nóng để làm nóng nước, 30 phút sau, bạn hãy xả sạch chất lỏng bên trong bình và rửa lại bình bằng nước sạch từ hai đến ba lần.

Bạn nên vệ sinh cặn bẩn sáu tháng một lần.

Không nên tự ý tháo rời máy để tránh nguy cơ làm hỏng thiết bị.

THẬN TRỌNG

Nguy cơ bị bỏng

Hãy cẩn thận khi nước nóng chảy ra khi mở vòi nước nóng và nước xả ra từ lỗ thoát nước.

THẬN TRỌNG

Rò rỉ nước

Nắp thoát nước bị lỏng có thể gây ra rò rỉ nước và làm hỏng sàn nhà.

Vui lòng kiểm tra nắp này đã đủ chặt hay chưa trước khi bước vào quá trình sử dụng lâu dài.

CẢNH BÁO

Nguy cơ bị điện giật

Rút phích cắm của cây nước nóng lạnh trước khi tiến hành vệ sinh và lau khô toàn bộ nước thừa tràn ra trên thiết bị.

CẢNH BÁO

Nguy cơ bị bỏng

Cây nước nóng lạnh có thể làm nóng nước lên đến 194°F (90°C)

Nhiệt độ nước trên 125°F (52°C) có thể gây nên các vết bỏng nghiêm trọng.

Trẻ em, người khuyết tật và người già có nguy cơ bị bỏng cao nhất.

Trẻ em nên được giám sát bởi người lớn khi sử dụng sản phẩm này.

Khắc phục sự cố

Trước khi gọi cho Trung tâm dịch vụ, vui lòng kiểm tra một số vấn đề dưới đây:

Cây nước nóng lạnh không hoạt động

- Đảm bảo rằng cây nước nóng lạnh được kết nối đúng cách với ổ cắm đang hoạt động bình thường và các công tắc làm nóng / làm mát đang ở chế độ BẬT.

Nước bị rò rỉ

- Rút phích cắm của cây nước nóng lạnh, tháo bình nước và thay bình mới.
- Đảm bảo rằng nắp ống xả ở phía sau cây nước nóng lạnh đã được đóng chặt.

Không có nước chảy ra từ vòi

- Đảm bảo rằng bình nước vẫn còn nước, nếu hết nước, vui lòng thay bình nước mới.
- Đảm bảo rằng bạn đã nhấn các nút điều khiển đủ mạnh.
- Đảm bảo rằng ống nối bên trong thiết bị không bị lỏng.

Nước lạnh không đủ lạnh

- Đảm bảo rằng cây nước nóng lạnh được kết nối đúng cách với ổ cắm đang hoạt động bình thường.
- Đảm bảo rằng công tắc làm mát màu xanh lá cây được BẬT.
- Đợi cho đến khi đèn báo COOLING tắt, sẽ mất khoảng 1 giờ để nước được làm lạnh.
- Đảm bảo rằng mặt sau của cây nước nóng lạnh cách tường ít nhất 20 cm và tất cả các mặt của máy đều được tiếp xúc với luồng không khí tự do.

Nước nóng không đủ nóng

- Đảm bảo rằng cây nước nóng lạnh được kết nối đúng cách với ổ cắm đang hoạt động bình thường.
- Đảm bảo rằng công tắc làm nóng màu đỏ được BẬT.
- Chờ cho đến khi đèn báo HEATING tắt, phải mất 15 ~ 20 phút để nước được làm nóng.

Cây nước nóng lạnh phát ra tiếng ồn

- Đảm bảo rằng cây nước nóng lạnh được đặt trên bề mặt cứng và chắc chắn.
- Sự vận hành và tự tắt của máy nén có tác dụng kiểm soát nước lạnh được thiết kế theo đúng thông số kỹ thuật, điều này là hoàn toàn bình thường.
- Bộ phận bơm sẽ hoạt động khi bơm nước đến khoang chứa và khi mở vòi nước, điều này là hoàn toàn bình thường


Nước có vị

- Cặn bụi và mùi được tích tụ dần trong bình chứa nước, vui lòng vớt bình chứa cũ và thay bình mới.
- Khử trùng hoặc khử cặn cây nước nóng lạnh theo chương “Vệ sinh và bảo dưỡng”.



Để tránh gây tai nạn, vui lòng ngắt nguồn điện trước khi vận hành theo hướng dẫn sau: Đôi khi xảy ra trường hợp khi nước được phân phối trong hơn 2 phút, máy bơm không lấy được lượng nước cần thiết, trong trường hợp này, đèn báo thiếu nước trên bảng điều khiển sẽ sáng. Nếu điều này xảy ra, bạn chỉ cần mở cửa khoang chứa bình nước, sau đó đóng cửa, và chờ 2 phút, thiết bị sẽ hoạt động trở lại để phân phối nước.

Sơ đồ mạch điện

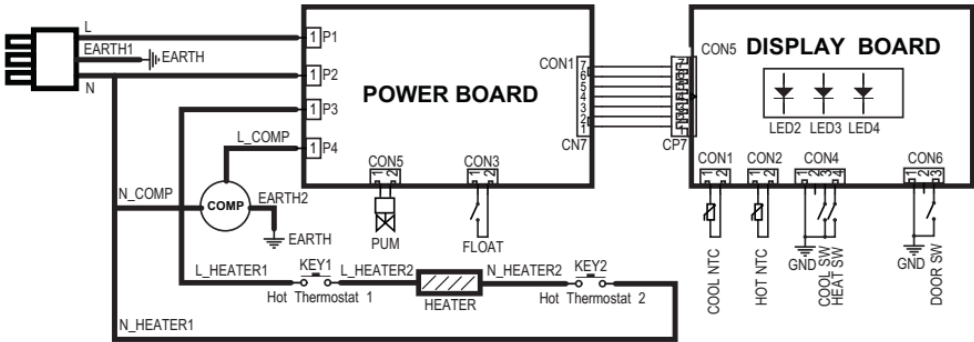

Chú thích:
POWER BOARD: Bảng điện
DISPLAY BOARD: Bảng hiển thị
EARTH: Nối đất
COMP: Máy nén
CON: Khởi động từ
LED: Đèn LED
HEATER: Dây làm nóng
Hot Thermostat: Bộ điều chỉnh nhiệt làm nóng
KEY: Chốt mạch điện

PUM: Bộ phận bơm
FLOAT: Bộ phận phao
COOL NTC: Điện trở cảm biến nhiệt làm mát
HOT NTC: Điện trở cảm biến nhiệt làm nóng
GND: Mức điện áp cực nguồn điện
COOL SW: Công tắc làm mát
HOT SW: Công tắc làm nóng
DOOR SW: Công tắc cửa

Thông số kỹ thuật

Mẫu máy	EQAXF01BxBV
Nguồn điện	220V-240V ~ 50/60Hz
Công suất làm mát	100W
Công suất làm nóng	420W
Nước nóng	4L/h (≥90°C)
Nước lạnh	2L/h (≤10°C)
Vận hành ở nhiệt độ phòng	10-43°C
Độ ẩm tương đối	≤90%
Cường độ dòng điện làm mát	1.0A
Gas làm lạnh	R134a/32g
Vùng khí hậu	ST,T
Nhiệt độ ngăn làm lạnh	N/A
Kích thước sản phẩm	D310mmxR374mmxC1040mm
Khối lượng	14.7kg
Dung tích bình nước nóng	1.16L
Dung tích bình nước lạnh	3.6L
Tổng dung tích	4.76L

Những thông số kỹ thuật trên dựa trên phương pháp thử nghiệm tiêu chuẩn, để biết thêm chi tiết, vui lòng tham khảo GB/T 22090-2008

Các trung tâm chăm sóc khách hàng

Thailand

Call Center tel: (+66 2) 725 900
Electrolux Thailand Co.,Ltd.
Electrolux Building
14th Floor 1910 New Petchburi Road,
Bangkapi, Huay Kwang, Bangkok 10310
Office Tel: (+66 2) 7259100
Office Fax: (+66 2) 7259299
Email: customercarethai@electrolux.com

Indonesia

Tel: (+62 21) 522 7180
PT. Electrolux Indonesia
Gedung Plaza Kuningan
Merana Utara 2nd Floor,
Suite 201, Jl. HR Rasuna Said
kav C 11-14, Karet Setiabudi
Jakarta Selatan 12940
Office Tel: (+62 21) 522 7099
Office Fax: (+62 21) 522 7097
Email: customercare@electrolux.co.id

Vietnam

Domestic Toll Free: 1800-58-88-99
Tel: (+84 8) 3910 5465
Electrolux Vietnam Ltd.
Floor 9th, A&B Tower
76 Le Lai Street – Ben Thanh Ward –
District 1
Ho Chi Minh City Vietnam
Office Tel: (+84 8) 3910 5465
Office Fax: (+84 8) 3910 5470
Email: vncare@electrolux.com

Malaysia

Domestic Toll Free: 1300-88-11-22
Electrolux Home Appliance Sdn. Bhd.
Unit T2-7, 7th Floor, Tower 2, Jaya33
Hyperoffice,
No.3, Jalan Semangat, Seksyen 13,
46100 Petaling Jaya, Selangor
Office Tel: (+60 3) 7843 5999
Office Fax: (+60 3) 7955 5511
Email:
malaysia.customercare@electrolux.com

Philippines

Domestic Toll Free: 1-800-10-845-care
2273
Customer Care Hotline: (+63 2) 845 care
2273
Electrolux Philippines, Inc
10th Floor. W5th Avenue Building
5th Avenue Corner 32nd Street
Bonifacio Global City,
Taguig Philippines 1634
Trunkline: +63 2 737 – 4756
Website: www.electrolux.com.ph
Email: wecare@electrolux.com

Singapore

CUSTOMER CARE HOTLINE: (+65)
6507 8699
Electrolux S.E.A Pte Ltd.
11 Lorong 3 Toa Payoh
Jackson Square. Block B, #01-13/14/15
Singapore 319579
Office Tel: (+65) 6507 8900
Office Fax: (+65) 6356 5489
Email: customer-care.sin@electrolux.com

