

ETG7287GKR
ETG7277GKR
ETG7267GKR
ETG7257GKR
ETG7283GKR



READ THIS MANUAL CAREFULLY BEFORE PUTTING THIS APPLIANCE INTO OPERATION.

Table Top Gas Cooker


User Manual

Enjoy peace of mind. Register your appliance today.

Stay updated on better living services,
safety notices and shop for accessories.

- 1. Open the camera app on your smartphone and point at the QR code to scan.**

Product Registration QR code
is located on the top surface
or underside of your appliance.

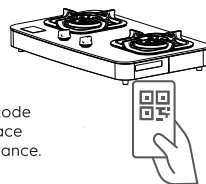

- 2. Tap the notification or link to open the registration form.**

- 3. Complete your details and enjoy peace of mind.**

CONGRATULATIONS

Dear customer,

Thanks for choosing and using Electrolux home appliances.

Electrolux Group of Sweden is one of the world's largest home appliances companies, with more than 65 million Electrolux products being used by millions of households worldwide each year, it is also the world's largest manufacturer of kitchen electrical appliances. The group has sold more than 56 million kitchen products, which is equivalent to the combined height of 5 Mount Everest, besides that, more than 2/3 of the world's star hotels use Electrolux professional kitchen equipment.

Clearly, the excellent achievement of Electrolux over the last 80 years has been recognized by 450 million families all over the world. Now we are pleased to make some of the best products from this renowned brand available to consumers in Southeast Asia. To us not only is Electrolux one of the most reliable brands in dealing with home appliances, it is also brand that promises to bring innovative lifestyles to all families through its cutting edge technologies and excellent designs. For not only to add & tough of elegance to your kitchen, but Electrolux products also make cooking easier, more enjoyable and something to share with.

Enjoy happy cooking now with Electrolux kitchen appliances.

IMPORTANT INSTRUCTIONS

Before installing or using this appliance, please read this manual carefully and pay particular attention to the warnings in the safety instructions.

To avoid the risks that are always present when you use an appliance, it is important that the appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

We recommend that you keep this manual for future reference and pass it on to any future owners.

SAFETY INSTRUCTIONS

Do not use gas other than that which is specified on the label attached.



Do not place anything (e.g. flame tamer or asbestos mat) between the pan and pan support, as serious damage to the appliance may result.

Do not remove the pan support and enclose the burner with a wok stand, as this will concentrate and deflect the heat onto the hotplate.

Do not use large pots or heavy weights that can bend the pan support or deflect flame onto the hotplate.

Locate pan centrally over the burner so that it is stable and does not overhang the appliance.

Use only a wok support supplied or recommended by the manufacturer of the appliance.

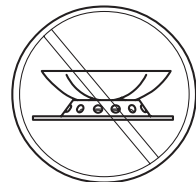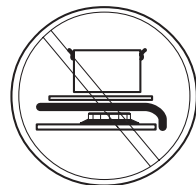

CAUTION: This appliance is for cooking purposes only. It shall not be used for other purposes, for example room heating.

If a gas leak is found, close stopcock, open up all windows and call your dealer. Do refrain from turning an electric switch on or off, lighting a match, smoking or using a lighter.


Use the appliance in a well-ventilated room.

Do not use vinyl gas hose. It is liable to be softened by heat.
Use only a rubber hose.

Be sure to turn off the ignition knob and regulator of the cylinder after use.

Avoid touching the burner, pan stand etc., immediately after use.
Otherwise you will get burnt.

Ensure that the rubber hose does not touch any part of the unit or lies underneath it.
Connect the rubber hose to the gas inlet and fasten it with a hose clamp.

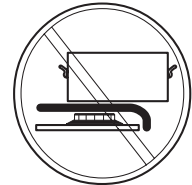

Prior to installation, ensure that the local distribution conditions (nature of the gas and gas pressure) and the adjustment of the appliance are compatible.

The adjustment conditions for this appliance are stated on the label.

This appliance is not connected to a combustion products evacuation device. It shall be installed and connected in accordance with current installation regulations. Particular attention shall be given to the relevant requirements regarding ventilation.



CAUTION

In the event of the burner flames being accidentally extinguished, turn off the burner control knob and do not attempt to re-ignite the burner for at least 1 minute.

In case of hotplate glass breakage:

- shut immediately off all burners and any electrical heating element and isolate the appliance from the power supply.
- do not touch the appliance surface,
- do not use the appliance.


The device shall not be operated for more than 15 s. If after 15 s the burner has not lit, stop operating the device and open the compartment door and/or wait at least 1 min before attempting a further ignition of the burner.

Cooking vessels on the hob shall not overlap its edges.


CAUTION: The use of a gas cooking appliance results in the production of heat, moisture and products of combustion in the room in which it is installed. Ensure that the kitchen is well ventilated especially when the appliance is in use. Prolonged intensive use of the appliance may require additional ventilation, for example the increasing of mechanical ventilation where present, additional ventilation to safely remove the products of combustion to outside (external) air whilst also providing room air changes with additional ventilation.

PART IDENTIFICATION

ETG7287GKR / ETG7283GKR

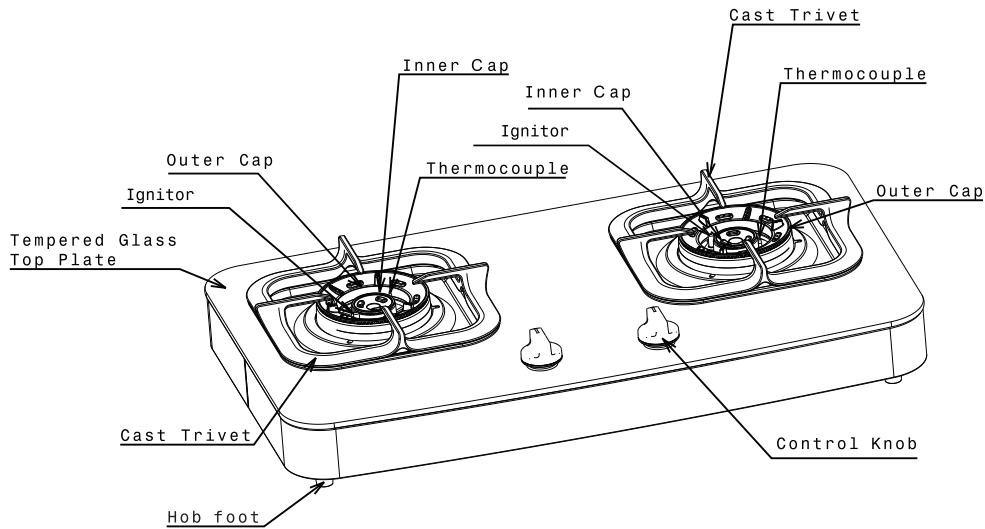


ETG7277GKR

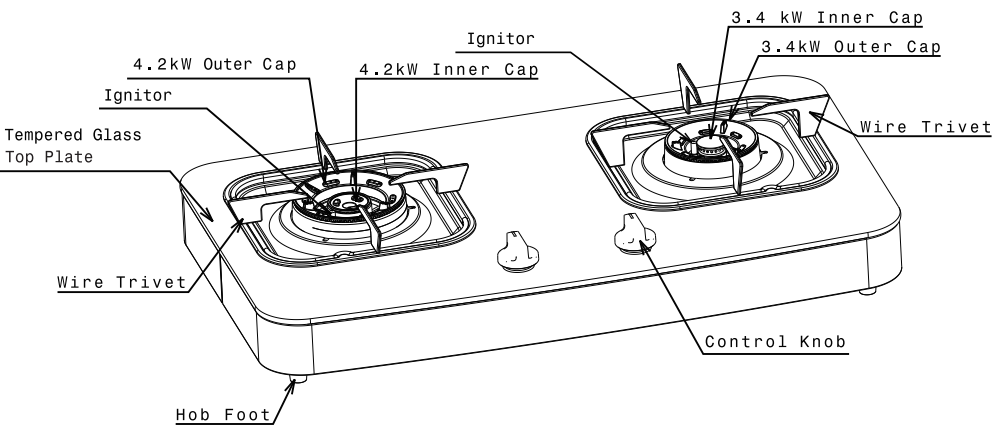

Please notice left trivet and right trivet are different


PART IDENTIFICATION

ETG7267GKR

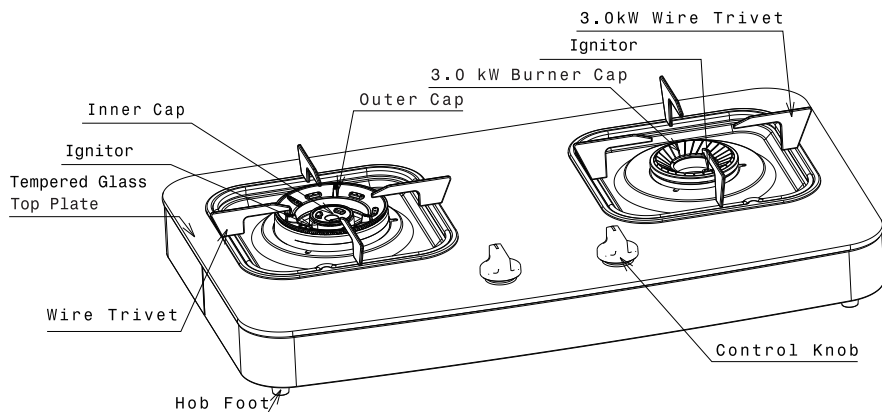

*Please notice left trivet and right trivet are different


ETG7257GKR

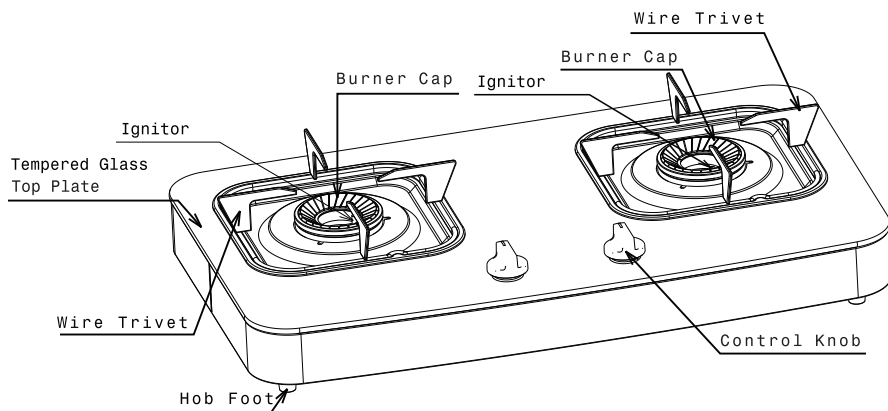


Installation instructions

Follow below steps to install the appliance.


1. Open the package, take out the polyfoam and place them on the even ground.
2. Install 4 hob support feet (supplied in accessory bag) on the 4 square yard by nut as below picture shows. Make sure the glass panel is well protected when you assemble the hob feet, DO NOT touch any sharp edge.

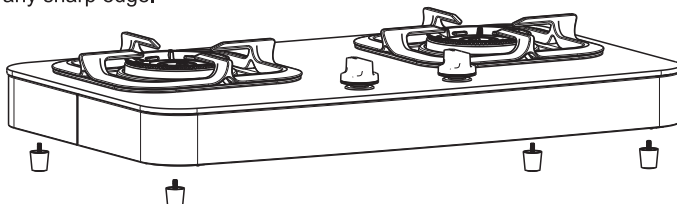


3. Assemble the burner caps on right position, assemble the trivets on right position.

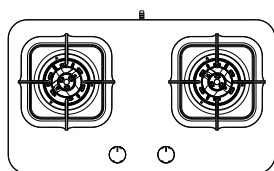


ETG7287GKR / ETG7283GKR

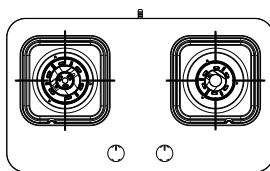

ETG7277GKR

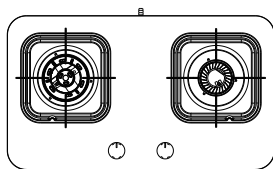


ETG7267GKR

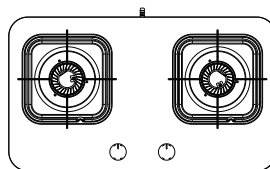

ETG7257GKR

Please notice on ETG7277GKR and ETG7267GKR left trivet and right trivet are not the same, please notice the location when you assemble the trivets.

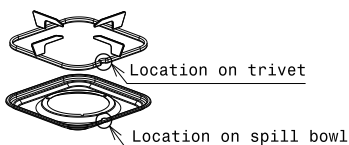

Please notice on ETG7277GKR left burner inner cap and right burner inner cap are not the same. DO NOT MISUSE.




Inner cap
left burner



Inner cap
right burner


4. Connect gas pipe to the inlet and fasten the connection by turning the clamp clockwise.

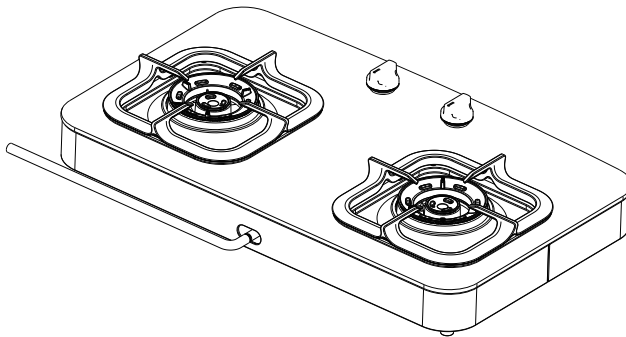

Notes:

- The length of the rubber hose, if used, must not exceed 1.5m.
- A pressure regulator in accordance with EN16129 is required.

5. If clearance between side/back walls and hob is less than 100mm, the walls must be protected with a non-combustible material. Horizontal surfaces less than 750mm vertically above the cooktop must also be protected.

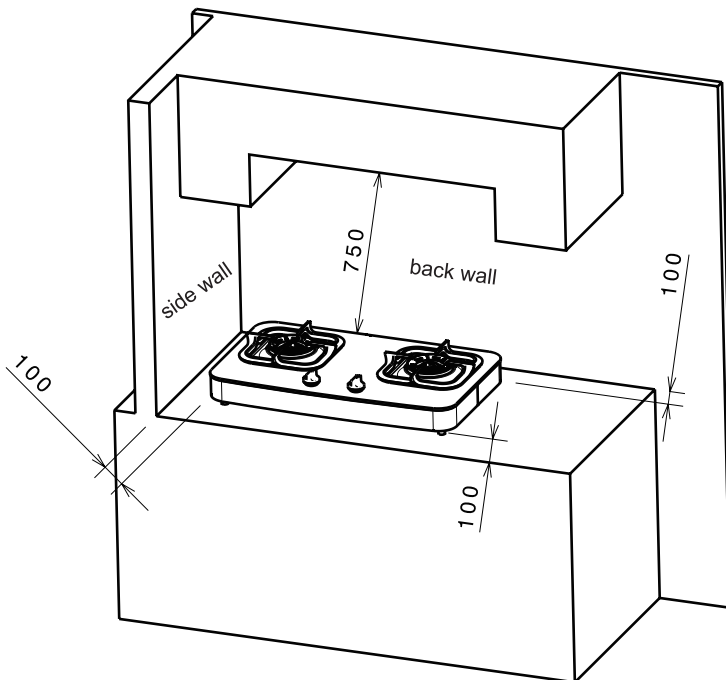


6. Check the leakage. Turn the gas on and check for leaks using soap solution and brush around all the joints and connections.

Test and operation

1.Test the appliance


Press the control knob and turn to full flame setting to activate the electric igniter. The burner will ignite. Adjust control knob to the desired setting. On initial usage you may have to repeat this ignition function several times (to allow air to be purged from the gas supply system). No adjustment should be necessary. If any problem occurs, refer to the servicing instructions or the trouble shooting chart.

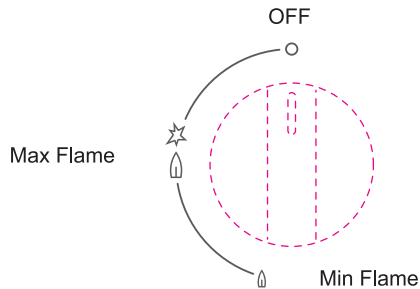

Please notice ETG7287GKR/ ETG7283GKR have flame failure devices, push down as far as possible for approximately 5 seconds. If the flame goes out when the knob is released simply depress the knob again, this time holding it down with slightly more force for the same length of time.

2.Adjust air door

Normal and good performance flame should be blue and very small yellow flame at the flame tip, if you find the flame is too much yellow, you can adjust the valve air door to get the desired flame. **Air door is required to be adjusted before using.**

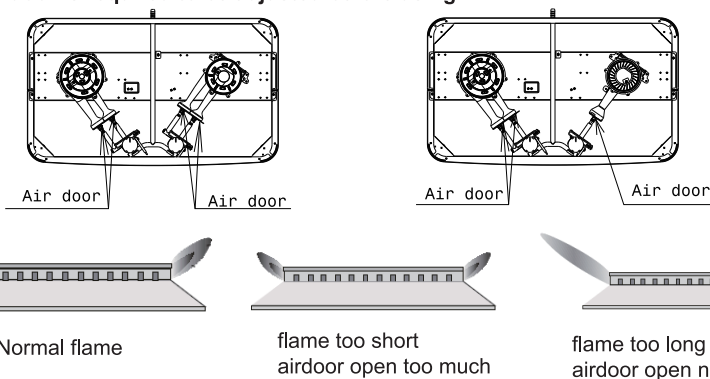

WARNING

It is not recommended the user to adjust by themselves. Ask qualified technician or installer to adjust if necessary. When adjusting the air door, make sure the gas pipe is well connected.

Using the hob correctly

To ensure maximum burner efficiency, it is strongly recommended that you use only pots and pans with a bottom fitting the size of the burner used, so that the flame will not spread beyond the bottom of the vessel. Recommended pot size is from 120mm to 280mm.

Technical specifications

Model	Gas Type	Gas Pressure	Product Dimension (LxWxH) mm	Nominal Heat Input(kW)	Injector Size mm	Category
ETG7287GKR	G30 (LPG)	28-30 mbar	700X410X120	Left: 4.2kW(306g/h) Right: 4.2kW(306g/h)	Left: 0.85+0.51 Right: 0.85+0.51	I _{3B/P(30)}
ETG7277GKR	G30 (LPG)	28-30 mbar	700X410X120	Left: 4.2kW(306g/h) Right: 3.4kW(247g/h)	Left: 0.85+0.51 Right: 0.79+0.42	I _{3B/P(30)}
ETG7267GKR	G30 (LPG)	28-30 mbar	700X410X120	Left: 4.2kW(306g/h) Right: 3.0kW(218g/h)	Left: 0.85+0.51 Right: 0.83	I _{3B/P(30)}
ETG7257GKR	G30 (LPG)	28-30 mbar	700X410X120	Left: 3.0kW(218g/h) Right: 3.0kW(218g/h)	Left: 0.85+0.51 Right: 0.83	I _{3B/P(30)}
ETG7283GKR	G30 (LPG)	28-30 mbar	700X410X120	Left: 4.0kW(291g/h) Right: 4.0kW(291g/h)	Left: 0.85+0.51 Right: 0.85+0.51	I _{3B/P(30)}

Glass top

•Persistent stains may require vigorous rubbing with nylon scourer or creamed powder cleansers. Household enamel cleaners are available, follow the manufacturer instructions in their use. Harsh abrasive cleaners, powder cleaners, steel wool or wax polishes should not be used.

•Do not use the glass top as a work table.

Burner Cap

These can all be lifted off and removed for separate cleaning.

•Ensure burner caps are thoroughly dried after cleaning or spillage.

•When cleaning the burner, ensure that all the flame ports are free of any blockage.



WARNING

When refitting the burner caps, ensure that they are correctly seated.

When refitting the trivets, ensure the trivets are correctly seated on the hob.

TROUBLESHOOTING

Phenomenon	Reason	Solution
Burner not igniting	Gas inlet pipe is bent	Straighten the pipe
	Air in gas line	repeat ignition
	Burner cap not fitted correctly	Fit burner cap in correct position
	Injector blocked	Clean the injector
Flames uneven or tending to lift	Burner cap incorrectly fitted.	Ensure this component is fitted correctly
	Burner cap blocked or wet.	Clean or dry burner cap
	airdoor not adjusted	Adjust airdoor
Yellow flame	Burner cap dirty	Clean or dry burner cap
	airdoor not adjusted	Adjust airdoor
Flames not staying on when knob is released	Knob not held down long enough in 'Max' position for flame safeguard to engage	Repeat the ignition procedure and hold knob down for 5 seconds in 'Max' position.
	airdoor of inner cap not adjusted	Adjust airdoor
	Dirt or spillage on flame safeguard sensor.	Clean flame safeguard sensor tip
Ignitor not sparking	Excessive electrode gap	Check gap and adjust to 4-5mm
	Ignitor connection loose	Check connection to ignitor, replace if faulty

If you need any technical help or would like more information about our products, please do not hesitate to contact our Customer Care Center, listed below:

Indonesia

Hotline service: 08041119999

PT. Electrolux Indonesia

Electrolux Building

Jl.Abdul Muis No.34, Petojo Selatan,
Gambir Jakarta Pusat 10160

Email:customercare@electrolux.co.id

SMS & WA : 0812.8088.8863

Malaysia

Consumer Care Center Tel: 1300-88-11-22

Electrolux Home Appliances Sdn. Bhd.

Corporate Office Address: Unit T2-7, 7th Floor,
Tower 2 , Jaya33 Hyperoffice, No. 3, Jalan
Semangat, Seksyen 13, 46100 Petaling Jaya,
Selangor

Office Tel : (+60 3) 7843 5999

Office Fax : (+60 3) 7955 5511

Consumer Care Center Address: Lot C6, No.
28,
Jalan 15/22, Taman Perindustrian Tiong Nam,
40200 Shah Alam, Selangor

Consumer Care Center Fax : (+60 3) 5524
2521

Email : malaysia.customercare@electrolux.com

Philippines

Consumer Care Center Toll Free :

1-800-10-845-CARE 2273

Consumer Care Hotline : (+63 2) 845

CARE 2273 Electrolux Philippines, Inc.

10th Floor. W5th Avenue Building

5th Avenue Corner 32nd Street

Bonifacio Global City,

Taguig Philippines 1634

Trunkline: +63 2 737- 4756

Website : www.electrolux.com.ph

Email : wecare@electrolux.com

Singapore

Consumer Care Center Tel: (+65) 6727

3699 Electrolux S.E.A. Pte Ltd.

1 Fusionopolis Place,

#07-10 Galaxis, West Lobby

Singapore 138522.

Office Fax : (+65) 6727 3611

Email : customer-

care.sin@electrolux.com

Thailand

Consumer Care Tel : (+66 2) 725

9000 Electrolux Thailand Co., Ltd.

Electrolux Building 14th Floor

1910 New Phetchaburi Road,

Bangkok, Huai Khwang, Bangkok

10310 Office Tel : (+66 2) 7259100

Office Fax : (+66 2) 7259299

Email :

customercareshai@electrolux.com

Vietnam


Customer Care Center: 1800 588 899
(Toll Free)

Electrolux Vietnam Co., Ltd

Unit 1,2, Floor 10, Sofic Tower, 10 Mai
Chi Tho, An Khanh Ward, HCM city,
Vietnam

Phone: (+84 28) 3910 5465

Email: vncare@electrolux.com

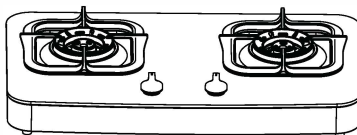

ETG7287GKR
ETG7277GKR
ETG7267GKR
ETG7257GKR
ETG7283GKR



ĐỌC KỸ HƯỚNG DẪN NÀY TRƯỚC KHI SỬ DỤNG THIẾT BỊ.

Bếp gas dương


Hướng dẫn sử dụng

**Yên tâm sử dụng.
Đăng kí thiết bị của bạn ngay hôm nay.**

Cập nhật thông tin về các dịch vụ, thông báo an toàn và mua phụ kiện.

- 1. Mở ứng dụng máy ảnh trên điện thoại thông minh của bạn và quét mã QR.**

Mã QR để đăng kí sản phẩm nằm ở mặt trên hoặc mặt dưới của thiết bị.

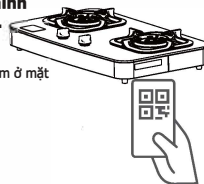

- 2. Nhấn chọn thông báo hoặc đường dẫn liên kết để mở biểu mẫu đăng kí.**
- 3. Hoàn thành các thông tin và yên tâm sử dụng thiết bị.**

XIN CHÚC MỪNG

Thưa quý Khách hàng,

Cảm ơn các bạn đã chọn và sử dụng các sản phẩm gia dụng Electrolux.

Tập đoàn Electrolux của Thụy Điển là một trong những tập đoàn sản xuất hàng gia dụng lớn nhất thế giới. Với hơn 65 triệu sản phẩm được sử dụng bởi hàng triệu hộ gia đình trên khắp thế giới mỗi năm, Electrolux cũng là một trong những tập đoàn sản xuất đồ điện tử nhà bếp lớn nhất thế giới. Tập đoàn đã bán ra hơn 56 triệu sản phẩm nhà bếp, với tổng chiều cao tương đương 5 ngọn núi Everest xếp chồng lên nhau. Bên cạnh đó, hơn 2/3 khách sạn cao cấp trên thế giới sử dụng các thiết bị bếp chuyên dụng của Electrolux.

Rõ ràng là, các sản phẩm của Electrolux trong 80 năm qua đã được 450 triệu hộ gia đình trên toàn thế giới công nhận là những sản phẩm chất lượng cao. Giờ đây, chúng tôi rất hân hạnh được giới thiệu với các bạn ở khu vực Đông Nam Á các sản phẩm tối ưu của chúng tôi. Đối với chúng tôi, Electrolux không chỉ là một trong những thương hiệu được tin cậy nhất về các sản phẩm điện gia dụng mà còn là một thương hiệu đem đến phong cách mới cho ngôi nhà của bạn thông qua những cải tiến kỹ thuật và thiết kế hoàn hảo. Các sản phẩm của Electrolux không chỉ làm cho nhà bếp của bạn sang trọng hơn còn giúp cho việc nấu nướng trở nên thoải mái và dễ dàng hơn.

Nào, hãy cùng làm cho công việc bếp núc của mình thoải mái hơn với sản phẩm bếp Electrolux.

NHỮNG CHỈ DẪN QUAN TRỌNG

Trước khi lắp đặt hoặc sử dụng sản phẩm, vui lòng đọc kỹ hướng dẫn sử dụng và chú ý đến các cảnh báo an toàn ở trang tiếp theo.

Để tránh những rủi ro có thể gặp phải trong khi sử dụng bếp, điều quan trọng là thiết bị được lắp đặt chính xác và bạn đọc kỹ các chỉ dẫn an toàn để tránh việc sử dụng sai và nguy hiểm. Hãy giữ sách hướng dẫn để tiện việc tham khảo về sau và chuyển cho người chủ tiếp theo của thiết bị.



CHỈ DẪN AN TOÀN

Không dùng các loại gas khác so với loại gas đã được chỉ định trên tem đính kèm.

Không đặt bất kỳ đồ vật gì (như bật lửa, tấm amiăng) giữa xoang nồi và kiềng bếp vì điều này có thể gây hư hại nghiêm trọng đến bếp. Không thay kiềng bếp và đậy kín đầu đốt bằng vòng đỡ chảo, vì điều này sẽ tập trung ngọn lửa và làm lệch hướng nguồn nhiệt lên mặt bếp. Không dùng nồi quá lớn hoặc quá nặng vì như thế có thể sẽ làm cong kiềng bếp và làm lệch hướng của ngọn lửa lên trên.

Đặt nồi vào giữa bếp để nồi được chắc chắn và không bị đổ sụp. Chỉ sử dụng kiềng bếp lớn được cung cấp theo bếp hoặc được chỉ định bởi nhà sản xuất.

THẬN TRỌNG: Thiết bị này chỉ dành cho mục đích nấu ăn. Không được sử dụng thiết bị cho các mục đích khác, ví dụ như sưởi ấm phòng.

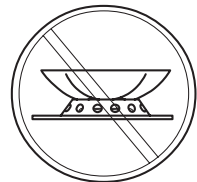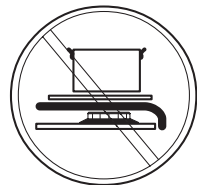


Nếu có rò rỉ gas, hãy khóa van gas, mở tất cả các cửa sổ và gọi đến trung tâm hỗ trợ khách hàng nơi bạn đã mua sản phẩm. Cố gắng không bật tắt công tắc điện, bật quạt diêm, hút thuốc hay quạt lửa.



Chỉ dùng bếp trong không gian được thông hơi tốt.

Không dùng ống dẫn bằng nhựa vinyl. Nó có khả năng bị nhiệt làm mềm ra. Chỉ dùng ống dẫn cao su.

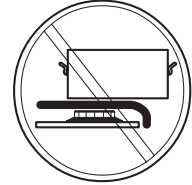

Đảm bảo rằng bạn đã khóa nút đánh lửa và bộ điều chỉnh của xylanh sau mỗi lần sử dụng.

Tránh chạm vào bếp hay các kiềng bếp v.v. ngay sau mỗi lần sử dụng. Nếu không, bạn sẽ bị phỏng.



Chắc chắn rằng ống dẫn cao su không chạm vào bếp hay nằm dưới bất kỳ bộ phận nào của bếp.

Nối ống dẫn cao su vào đầu ống gas và siết chặt lại bằng kẹp giữ cổ ống gas.

Trước khi lắp đặt, hãy chắc chắn rằng các điều kiện phân phối gas tại địa phương (tính chất của gas và áp suất gas) và các điều chỉnh của thiết bị là tương thích..

Các điều kiện điều chỉnh thiết bị này được ghi trên nhãn.

Sản phẩm này không được kết nối với thiết bị dẫn thoát chất thải của quá trình đốt cháy mà cần được lắp đặt và kết nối tuân thủ theo những quy định lắp đặt hiện hành, cần đặc biệt chú ý đến những quy định liên quan đến việc thông khí.



THẬN TRỌNG

Trong trường hợp ngọn lửa bị tắt do vô ý, hãy tắt bếp và không cố bật lại bếp trong thời gian ít nhất là 1 phút.

Trong trường hợp vỡ mặt kính:

- Ngay lập tức tắt bếp và bất kỳ bộ phận làm nóng bằng điện và ngắt thiết bị khỏi nguồn điện.
- Không chạm vào mặt bếp,
- Không sử dụng thiết bị.


Thiết bị không được hoạt động quá 15 giây. Nếu sau 15 giây bếp không cháy, hãy ngừng bật bếp và mở cửa ngăn và/hoặc đợi ít nhất 1 phút trước khi thử đánh điện bếp.

Không xếp chồng nồi nấu lên các cạnh của bếp.


THẬN TRỌNG:Việc sử dụng thiết bị nấu ăn bằng gas sẽ sinh ra nhiệt, độ ẩm và các sản phẩm gây cháy nổ trong phòng nơi lắp đặt sản phẩm. Đảm bảo rằng bếp được thông gió tốt, đặc biệt là trong quá trình sử dụng thiết bị. Việc sử dụng thiết bị trong thời gian dài có thể cần thông gió bổ sung, ví dụ như tăng khả năng thông gió cơ học nếu có, thông gió bổ sung để loại bỏ an toàn các sản phẩm gây cháy nổ ra không khí bên ngoài (ngoại vi) đồng thời cũng thay đổi không khí trong phòng bằng quá trình thông gió bổ sung.

CÁC BỘ PHẬN CỦA BẾP

ETG7287GKR/ ETG7283GKR

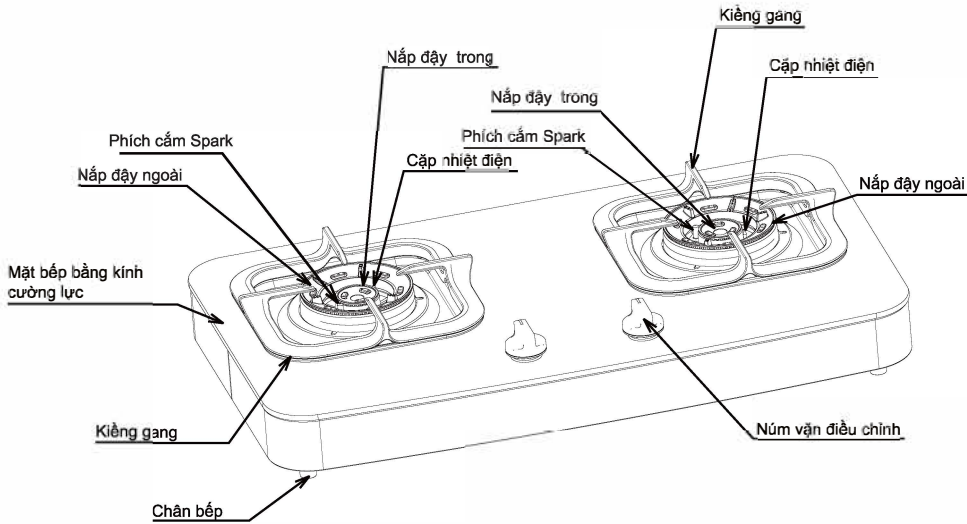


ETG7277GKR

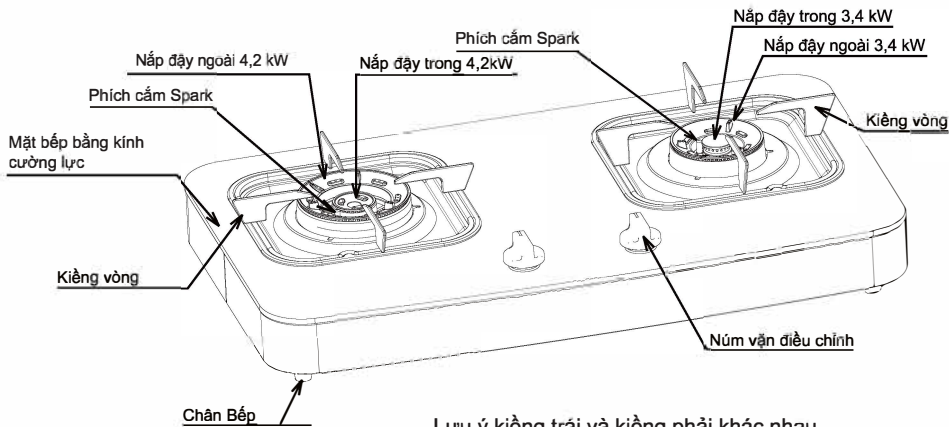

Lưu ý kiềng trái và kiềng phải khác nhau


CÁC BỘ PHẬN CỦA BẾP

ETG7267GKR

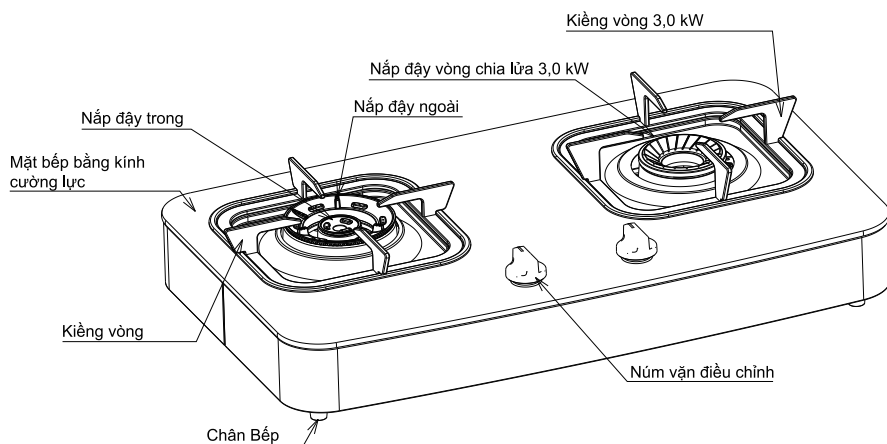

*Lưu ý kiềng trái và kiềng phải khác nhau


ETG7257GKR

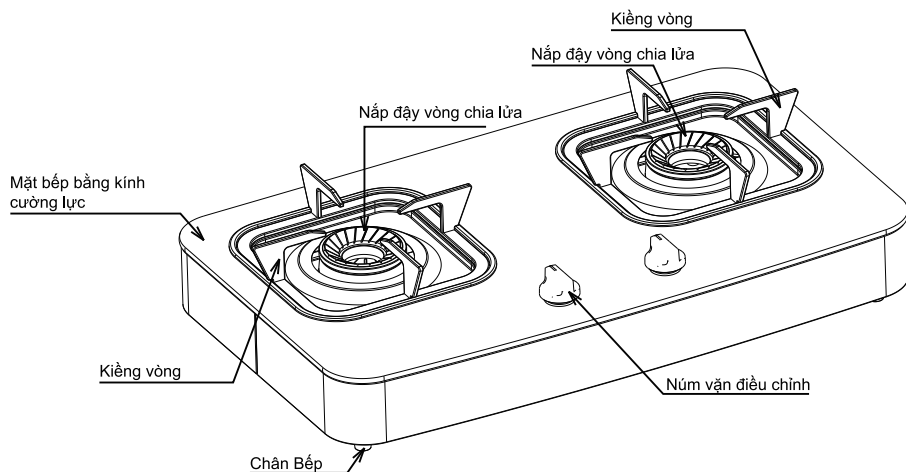


Hướng dẫn lắp đặt

Làm theo các bước dưới đây để lắp đặt thiết bị.


1. Mở hộp chứa hàng, gỡ bỏ tấm xốp đệm và đặt bếp ở nơi bằng phẳng.
2. Lắp 4 chân đỡ bếp (được cung cấp trong túi phụ kiện) trên 4 thước vuông bằng đai ốc như hình minh họa bên dưới. Đảm bảo tấm kính được bảo vệ tốt khi bạn lắp các chân bếp, **KHÔNG** tiếp xúc với bất kỳ cạnh sắc nào.

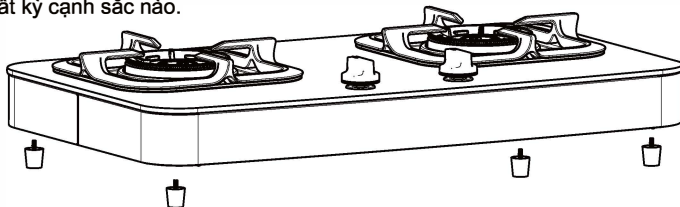


3. Lắp các nắp đỡ vòng chia lửa vào đúng vị trí, lắp kiềng vào đúng vị trí.

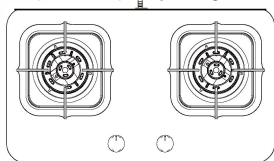


ETG7287GKR / ETG7283GKR

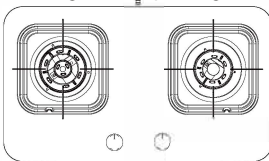

ETG7277GKR

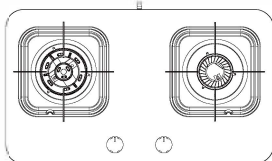


ETG7267GKR

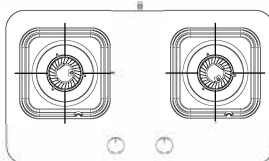

ETG7257GKR

Vui lòng lưu ý trên ETG7277GKR và ETG7267GKR, kiềng trái và kiềng phải không giống nhau, vui lòng lưu ý vị trí khi bạn lắp kiềng.

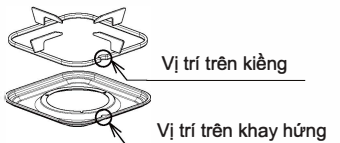

Vui lòng lưu ý trên nắp trong của đầu đốt bên trái ETG7277GKR và nắp trong của đầu đốt bên phải không giống nhau. **KHÔNG ĐƯỢC LẮP SAI.**




Nắp đỡ trong
đầu đốt bên trái



Nắp đỡ trong
đầu đốt bên phải


4. Tháo nắp chống bụi ở cửa nhận gas, nối ống dẫn gas vào cửa nhận gas rồi siết chặt mối nối bằng cách vặn kẹp ống theo chiều kim đồng hồ.

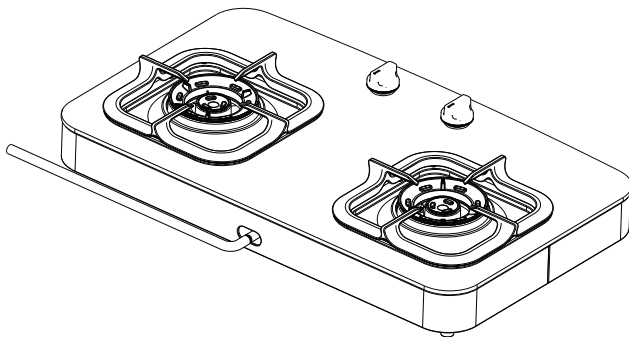

Lưu ý:

- Chiều dài của ống cao su, nếu sử dụng, không được vượt quá 1,5m.
- Yêu cầu bộ điều chỉnh áp suất phù hợp với EN16129.

5. Nếu khoảng cách giữa tường bên/sau và bếp nhỏ hơn 100mm, tường phải được bảo vệ bằng vật liệu chống cháy. Các bề mặt nằm ngang dưới 750mm theo phương thẳng đứng so với mặt bếp cũng phải được bảo vệ.

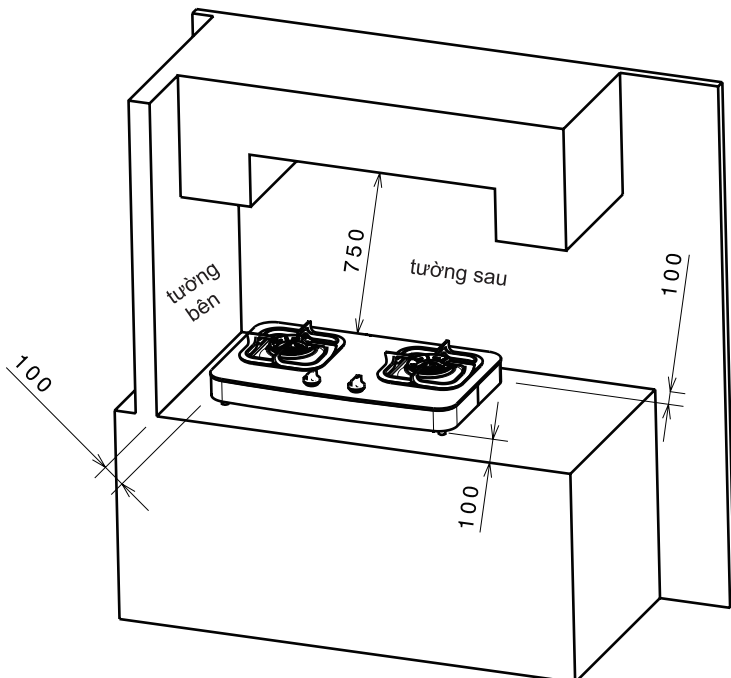


6. Kiểm tra rò rỉ. Mở gas và kiểm tra xem có rò rỉ hay không bằng cách sử dụng dung dịch xà phòng và chải xung quanh mối nối và khớp nối.

Kiểm tra và vận hành

1. Kiểm tra thiết bị



Nhấn nút vận điều chỉnh và vặn về mức lửa lớn nhất để kích hoạt bộ đánh lửa điện. Bếp sẽ bắt lửa. Xoay nút vận điều chỉnh đến mức lửa mong muốn. Lần đầu sử dụng, bạn có thể đánh lửa vài lần (để làm sạch không khí từ hệ thống cung cấp gas). Không cần thiết phải có bất kỳ điều chỉnh gì. Nếu bất kỳ vấn đề gì xảy ra, tham khảo thêm phần chỉ dẫn dịch vụ hoặc sơ đồ phát hiện lỗi.

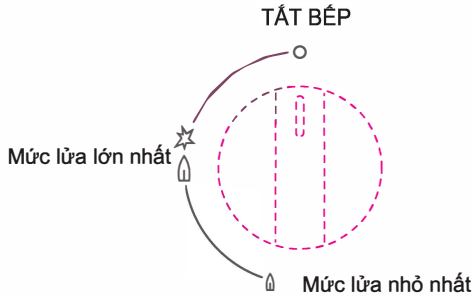

Lưu ý ETG7287GKR và ETG7283GKR có các thiết bị tự độ ng ngắt gas, hãy ấn và giữ thiết bị này trong khoảng 5 giây. Nếu lửa tắt khi nhả nút, chỉ cần nhấn lại nút và giữ với lực mạnh hơn chút trong một khoảng thời gian tương tự.

2. Điều chỉnh van điều áp

Ngon lửa bình thường hoặc có hiệu suất tốt sẽ có màu xanh với chút ánh vàng rất nhỏ. Nếu bạn thấy ngọn lửa có quá nhiều màu vàng, bạn có thể điều chỉnh van cửa thông hơi để có được ngọn lửa mong muốn. **Cửa không khí được yêu cầu điều chỉnh trước khi sử dụng.**

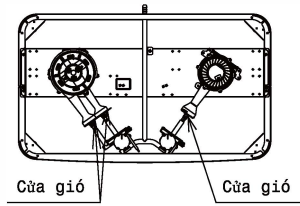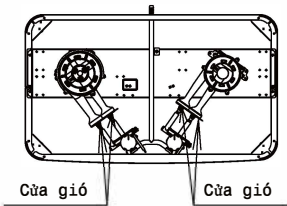

CẢNH BÁO

Không khuyến khích người sử dụng tự điều chỉnh. Yêu cầu kỹ thuật viên hoặc người lắp đặt có chuyên môn để điều chỉnh nếu cần thiết. Khi điều chỉnh cửa gió, đảm bảo rằng đường ống dẫn khí được kết nối tốt.

Sử dụng bếp đúng cách

Để có thể tận dụng tối đa hiệu quả của bếp, chúng tôi khuyến bạn chỉ sử dụng xoong nồi có kích thước đáy phù hợp, do đó ngọn lửa sẽ không lan rộng ra khỏi đáy nồi. Kích thước xoong nồi khuyến cáo từ 120mm đến 280mm.

THÔNG SỐ KỸ THUẬT

Model	Loại gas	Áp suất gas	Kích thước sản phẩm (DxRxC)mm	Công suất bếp danh nghĩa (kW)	Kích thước vòi phun gas mm	Loại
ETG7287GKR	G30 (LPG)	28-30 mbar	700x410x120	Bếp trái: 4.2kW(306g/h) Bếp phải: 4.2kW(306g/h)	Bếp trái: 0.85+0.51 Bếp phải: 0.85+0.51	3B/P(30)
ETG7277GKR	G30 (LPG)	28-30 mbar	700x410x120	Bếp trái: 4.2kW(306g/h) Bếp phải: 3.4kW(247g/h)	Bếp trái: 0.85+0.51 Bếp phải: 0.79+0.42	3B/P(30)
ETG7267GKR	G30 (LPG)	28-30 mbar	700x410x120	Bếp trái: 4.2kW(306g/h) Bếp phải: 3.0kW(218g/h)	Bếp trái: 0.85+0.51 Bếp phải: 0.83	3B/P(30)
ETG7257GKR	G30 (LPG)	28-30 mbar	700x410x120	Bếp trái: 3.0kW(218g/h) Bếp phải: 3.0kW(218g/h)	Bếp trái: 0.85+0.51 Bếp phải: 0.83	3B/P(30)
ETG7283GKR	G30 (LPG)	28-30 mbar	700x410x120	Bếp trái: 4.0kW(291g/h) Bếp phải: 4.0kW(291g/h)	Bếp trái: 0.85+0.51 Bếp phải: 0.85+0.51	3B/P(30)

Mặt kiếng

- Có thể cần dùng miếng tẩy rửa mềm hoặc chất tẩy rửa dạng kem để lau chùi kỹ càng khi muốn tẩy đi các vết bẩn cứng đầu. Chất tẩy rửa dùng cho đồ gia dụng tráng men có thể được sử dụng để tẩy mặt kiếng, hãy đọc kỹ hướng dẫn sử dụng trước khi dùng. Không nên dùng các chất tẩy rửa có tính ăn mòn cao, miếng chùi rửa bằng sắt hoặc sáp đánh bóng để chùi rửa mặt kiếng.
- Không được sử dụng mặt kiếng làm bàn làm việc.

Nắp đậy vòng chia lửa

- Các bộ phận này có thể nhấc được lên và tháo ra để vệ sinh từng bộ phận.
- Đảm bảo rằng các nắp đậy vòng chia lửa được lau khô hoàn toàn sau khi vệ sinh hoặc bị tràn đổ do nấu ăn.
 - Khi vệ sinh vòng chia lửa, đảm bảo rằng các lỗ chia lửa và các lỗ thông hơi khác không bị tắc nghẽn.



LƯU Ý

- Khi lắp lại các nắp đậy vòng chia lửa, đảm bảo rằng chúng được lắp đúng vị trí.
- Khi lắp lại các kiềng, đảm bảo các kiềng được lắp đúng vị trí trên bếp.

KHẮC PHỤC SỰ CỐ

Hiện tượng	Nguyên nhân	Cách khắc phục
Bếp không lên lửa	Ống cấp gas bị cong	Làm cho ống thẳng trở lại
	Có không khí trong ống dẫn gas	ánh sáng lập lại
	Vòng chia lửa chưa được lắp đúng cách	Lắp nắp vòng chia lửa vào đúng vị trí
	Vòi phun gas bị tắc	Thông vòi phun
Ngọn lửa không đều hoặc có xu hướng cháy lên cao	Nắp đáy vòng chia lửa được lắp không đúng cách	Đảm bảo bộ phận này được lắp đúng cách
	Nắp đáy vòng chia lửa bị tắc hoặc bị ẩm	Thông hoặc lau khô nắp đáy
	cửa không điều chỉnh	Điều chỉnh cửa không khí
Ngọn lửa màu vàng	Nắp đáy vòng chia lửa bị bẩn	Thông hoặc lau khô nắp đáy
	cửa không điều chỉnh	Điều chỉnh cửa không khí
Ngọn lửa không ở lại khi núm được giải phóng	Núm chưa được giữ đủ lâu ở vị trí 'Lớn nhất' để ngọn lửa bắt cháy	Thực hiện lại quy trình đánh lửa và giữ núm trong khoảng 5 giây ở vị trí 'Lớn nhất'
	cửa không của nắp trong không điều chỉnh	Điều chỉnh cửa không khí
	Cảm biến an toàn đánh lửa bị bẩn hoặc ướt do tràn đổ	Vệ sinh đầu cảm biến an toàn ngọn lửa
Bộ phận đánh lửa không hoạt động...	Khoảng cách giữa các điện cực (đầu đánh lửa và vòng chia lửa) quá xa	Kiểm tra lại khoảng cách, điều chỉnh nếu khoảng cách không nằm trong khoảng 4 – 5mm
	Mỗi nối bộ phận đánh lửa bị lỏng	Kiểm tra mỗi nối, thay mới nếu mỗi nối bị hư

Nếu cần sự hỗ trợ về kỹ thuật hay bất kỳ thông tin gì về sản phẩm, vui lòng liên hệ với Trung tâm Hỗ trợ Khách hàng theo các địa chỉ sau:

Indonesia

Hotline service: 08041119999

PT. Electrolux Indonesia

Electrolux Building

Jl.Abdul Muis No.34, Petojo Selatan,

Gambir Jakarta Pusat 10160

Email:customer@electrolux.co.id

SMS & WA : 0812.8088.8863

Malaysia

Consumer Care Center Tel: 1300-88-11-22

Electrolux Home Appliances Sdn. Bhd.

Corporate Office Address: Unit T2-7, 7th Floor,

Tower 2 , Jaya33 Hyperoffice, No. 3, Jalan

Semangat, Seksyen 13, 46100 Petaling Jaya,

Selangor

Office Tel : (+60 3) 7843 5999

Office Fax : (+60 3) 7955 5511

Consumer Care Center Address: Lot C6, No.

28,

Jalan 15/22, Taman Perindustrian Tiong Nam,

40200 Shah Alam, Selangor

Consumer Care Center Fax : (+60 3) 5524

2521

Email : malaysia.customer@electrolux.com

Philippines

Consumer Care Center Toll Free :

1-800-10-845-CARE 2273

Consumer Care Hotline : (+63 2) 845

CARE 2273 Electrolux Philippines, Inc.

10th Floor. W5th Avenue Building

5th Avenue Corner 32nd Street

Bonifacio Global City,

Taguig Philippines 1634

Trunkline: +63 2 737- 4756

Website : www.electrolux.com.ph

Email : wecare@electrolux.com

Singapore

Consumer Care Center Tel: (+65) 6727

3699 Electrolux S.E.A. Pte Ltd.

1 Fusionopolis Place,

#07-10 Galaxis, West Lobby

Singapore 138522.

Office Fax : (+65) 6727 3611

Email : customer-

care.sin@electrolux.com

Thailand

Consumer Care Tel : (+66 2) 725

9000 Electrolux Thailand Co., Ltd.

Electrolux Building 14th Floor

1910 New Phetchaburi Road,

Bangkapi, Huai Khwang, Bangkok

10310 Office Tel : (+66 2) 7259100

Office Fax : (+66 2) 7259299

Email :

customer@electrolux.com

Vietnam

Trung tâm chăm sóc khách hàng

miễn phí: 1800-58-88-99

ĐT: (+84 8) 3910 5465

Công ty TNHH Electrolux Việt Nam.

Lầu 10, Tòa nhà Sofic

Số 10, đường Mai Chí Thọ - Thành phố

Thủ Đức, Thành phố Hồ Chí Minh, Việt

Nam

ĐT: (+84 8) 3910 5465

Fax : (+84 8) 3910 5470

Email : vncare@electrolux.com

