EQE5660A-B
EQE5660A-S
EQE5600A-S

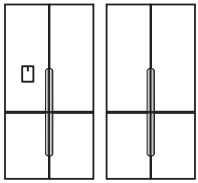

EN	Refrigeration	User Manual	2
VI	Tủ lạnh	Hướng dẫn sử dụng	2

Enjoy peace of mind. Register your appliance today.

Stay updated on better living services, safety notices and shop for accessories.

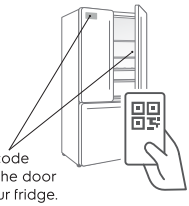

1. **Open the camera app on your smartphone and point at the QR code to scan**

   Product Registration QR code is located on the front of the door or internal side wall of your fridge.

2. **Tap the notification or link to open the registration form**

3. **Complete your details and enjoy peace of mind**

Electrolux

CONTENTS

1. SAFETY INFORMATION 3
2. DESCRIPTION OF THE APPLIANCE 5
3. INSTALLING YOUR NEW APPLIANCE 7
4. TEMPERATURE CONTROL 11
5. STORAGE FEATURES 17
6. AUTOMATIC ICE & WATER DISPENSER 20
7. GENERAL INFORMATION 22
8. FOOD STORAGE GUIDE 24
9. TROUBLESHOOTING 25
10. NOISES 29

WE'RE THINKING OF YOU

Thank you for choosing Electrolux. We have designed this product to make your life simpler and deliver impeccable performance for many years. Please spend a few minutes reading this document to get the best from your new Electrolux appliance.

Visit our website to:

Get usage advice or service information:
www.electrolux.com

Register your product for better service:
www.electrolux.com/support/register-warranty

CUSTOMER CARE AND SERVICE

Always use original spare parts.
When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.
The information can be found on the rating plate.

Warning / Caution-Safety information.
General information and tips.
Environmental information.

Subject to change without notice.

1. SAFETY INFORMATION

Note: You must read these warnings carefully before installing or using the refrigerator. If you need assistance, contact your customer care centre. The manufacturer will not accept liability, should these instructions or any other safety instructions incorporated in this book be ignored.

WARNING

- It is essential the electric outlet is properly earthed to ground. Consult a qualified electrician if you are unsure.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Unplug the refrigerator before cleaning or moving it to avoid electric shock.
- Never unplug the refrigerator by pulling the electrical cord as this may damage it. Grip the plug firmly and pull straight out.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Don't use a steam cleaner. If live components come into contact with condensing steam, they may short-circuit or cause an electric shock.
- Do not store explosive substances such as aerosol cans with a flammable propellant this appliance. If pressurised aerosol containers bear the word 'flammable' and/or a small flame symbol, do not store them inside any refrigerator or freezer.If you do so you may cause an explosion.
- Do not damage the refrigerant circuit.
- This appliance contains insulation formed with flammable blowing gases. Avoid safety hazards by carefully disposing of this appliance.
- If you wish to discard this refrigerator, please contact your local authorities and ask for the correct method of disposal.
- When you dispose of your old refrigerators and freezers, remove any doors. Children can suffocate if they get trapped inside.
- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

WARNING
R600a refrigerant warning

This appliance contains flammable R600a refrigerant. Avoid safety hazards by carefully installing, handling, servicing and disposing of this appliance.

- Ensure that the tubing of the refrigerant circuit is not damaged during transportation and installation.
- Leaking refrigerant may cause eye injuries or ignite.
- The room for installing appliance must be at least 1m^3 per 8g of refrigerantThe amount of refrigerant in the appliance can be found on the rating plate inside the appliance.
- If you are unsure of the refrigerant check the rating plate inside the refrigerator compartment.
- It is hazardous for anyone other than an Authorised Service Person to service this appliance. In Queensland Australia the Authorisation Service Person MUST hold a Gas Work Authorisation for hydrocarbon refrigerants to carry out servicing or repairs which involve the removal of covers.
- Keep ventilation openings in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

GENERAL WARNINGS

Read the following carefully to avoid damage or injury. It is important to use your refrigerator safely. Check these safety points before using your refrigerator.

- The appliance must be plugged into its own dedicated electrical outlet.
- The plug must be accessible when the refrigerator is in position.
- It is essential the powerpoint is properly earthed to ground. Consult a qualified electrician if you are unsure.
- Don't use extension cords or adapter plugs with this refrigerator.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Unplug the appliance before cleaning and before changing the light bulb(when fitted) to avoid electric shock.
- Never unplug the refrigerator by pulling the electrical cord as this may damage it. Grip the plug firmly and pull straight out.
- Choose a location for your refrigerator that isn't too cold. The ambient room temperature should be above 10°C.
- Stand your refrigerator in a dry place avoid areas of high moisture or humidity.
- Don't put the refrigerator in frosty or unprotected areas like a garage or on the verandah.
- Don't plug your refrigerator into a timer fitted to the powerpoint.
- Do not put the refrigerator in direct sunlight, near stoves, fires or heaters.
- Do not put the refrigerator on an uneven surface.
- Do not store flammable materials on or under the appliance, e.g. aerosols.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Never store fizzy drinks in the freezer compartment.
- Never try to repair the refrigerator yourself, only use a qualified or authorised service person for repairs.
- Never use electric heaters or dryers to defrost the freezer because you can receive an electric shock.
- When transporting and installing the refrigerator, care should be taken to ensure that no parts of the refrigerating circuit are damaged.
- When installed correctly, your refrigerator should:
  - Have adequate space at the back and sides for air circulation.
  - Be vertically aligned to the surrounding cupboards.
  - Have doors that will self-close from a partially open position.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children being supervised not to play with the appliance.

NOTE: You must read these warnings carefully before installing or using the refrigerator. If you need assistance, contact your Customer Care Department. The manufacturer will not accept liability, should these instructions or any other safety instructions incorporated in this book be ignored.

ENVIRONMENTAL INFORMATION

This appliance is intended to be used in household and similar applications such as,

- The kitchen areas in shops, offices and other working enviroments;
- Farm house and by clients in hotels, motels and other residential type enviroments;
- Bed and breakfast type environments;
- Catering and similar non-retail applications;

2. DESCRIPTION OF THE APPLIANCE

2.1 QUATTRO FRENCH DOOR WITH ICE & WATER REFRIGERATOR FEATURES

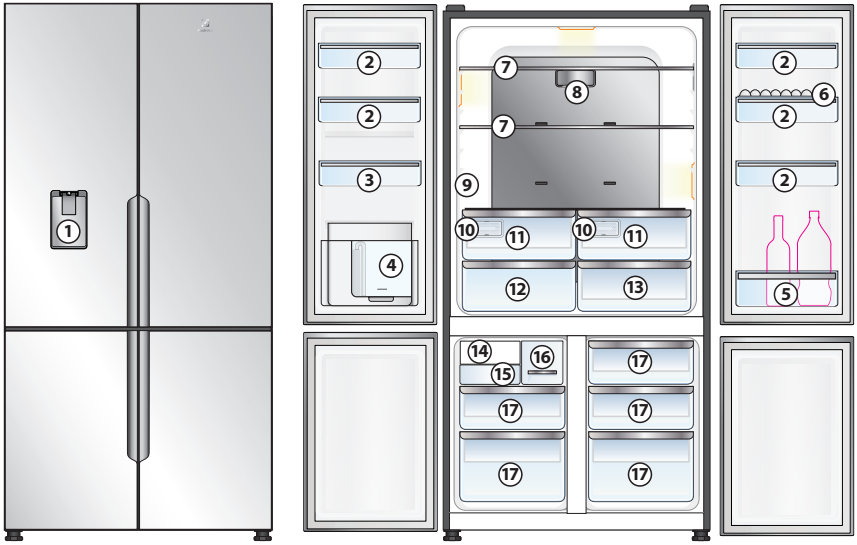

EQE5660 illustrated

1	Water Dispenser Trigger	10	Anti-Oxidant Filter
2	Door Bins*	11	TasteLockAuto Drawer
3	Door Bin Small*	12	TasteSealPlus Drawer
4	Water Tank	13	Drawer Deli
5	Bottle Storage Bins	14	Automatic Ice Maker
6	Egg Tray	15	Ice Storage Small
7	Glass shelves	16	Ice Storage Bin Freezer
8	Air Filter	17	Freezer Drawer
9	UI Control Panel (on the left side wall)		

NOTE:
** Door bin (3) is the slighly smaller than Door bin (2) ,*
Position must be installed as per above picture.

2.2 QUATTRO FRENCH DOOR REFRIGERATOR FEATURES

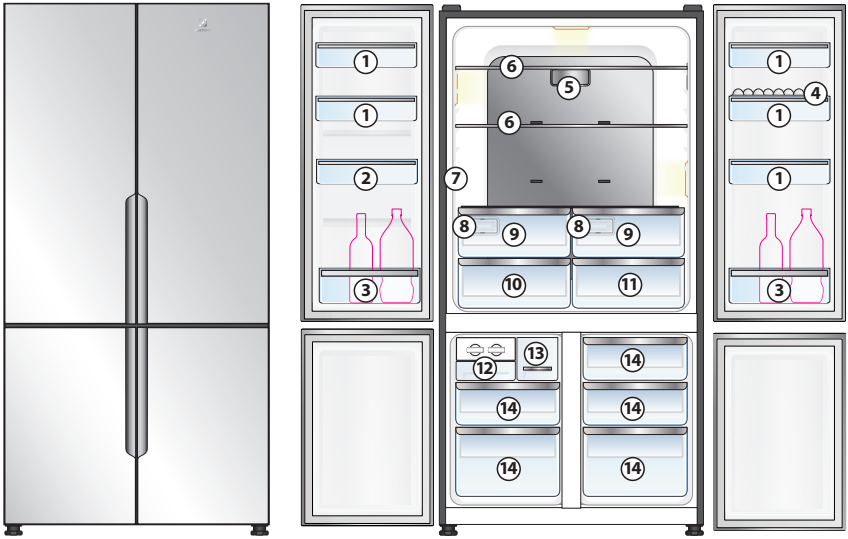

EQE5600 illustrated

1	Door Bins*	8	Anti-Oxidant Filter
2	Door Bin Small*	9	TasteLockAuto Drawer
3	Bottle Storage Bins	10	TasteSealPlus Drawerr
4	Egg Tray	11	Drawer Deli
5	Air Filter	12	Twist & Serve Ice Bin
6	Glass shelves	13	Ice Storage Bin Freezer
7	UI Control Panel (on the left side wall)	14	Freezer Drawer

NOTE:
** Door bin (2) is the slighly smaller than Door bin (1) ,*
Position must be installed as per above picture.

3. INSTALLING YOUR NEW APPLIANCE

Unpacking

ENVIRONMENT
Most of the packing materials are recyclable. Please dispose of those materials through your local recycling depot or by placing them in appropriate collection containers.

Important – check for any damages or marks. If you find the refrigerator is damaged or marked, you must report it within 7 days should you wish to claim for damage/ marks under the manufacturers warranty. This does not affect your statutory rights.

Clean your refrigerator thoroughly following the instructions in the "Cleaning" section and wipe off any dust that has accumulated during shipping.

Locating the refrigerator

CAUTION
Automatic aerosol systems (such as insect control) should not be located adjacent to the product as the spray may cause long term damage to the external plastics of he appliance.

Do not put the refrigerator in a location that is too cold or is unprotected, for example in a garage or on a veranda. The ambient temperature should be above 10°C.

Put the refrigerator in a dry place avoiding areas of high moisture or humidity.

Ensure the refrigerator is located on an even surface.

Installing your refrigerator

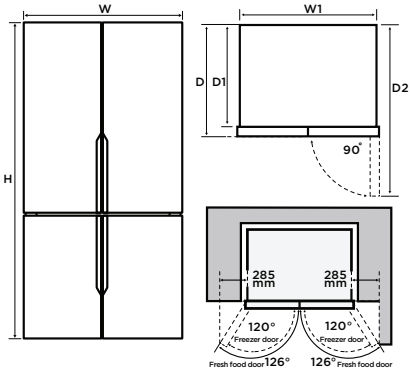

Product Dimensions

Total width (W)	mm	896
Total depth (D)	mm	726
Maximum height (H)	mm	1795
Cabinet width (W1)	mm	890
Cabinet depth (D1)	mm	640
Depth door open 90° (D2)	mm	1104

When positioned in a corner area, spacing of at least 285mm on the hinge side will allow the doors to open enough to enable the removal of bins and shelves.

Installation options for optimal aesthetics :

Minimum side clearance kitchen cabinet

Fridge must sit 10mm proud of kitchen cabinetry.

Minimum cabinetry opening (WxDxH) : 900mm x 649mm x 1800mm

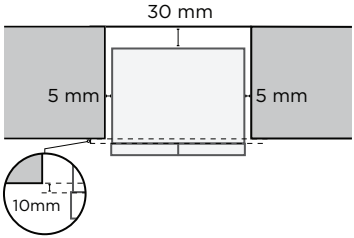

Front of fridge body in line with kitchen cabinet

Side clearance must be 25mm either side of fridge body, to have the fridge doors siting proud of the kitchen cabinetry.

Minimum cabinetry opening (WxDxH) : 940mm x 659mm x 1800mm

Note : Spacers supplied to assist

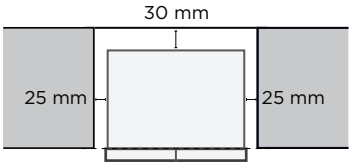

Fridge door flush with the cabinetry

Side clearance must be 90mm either side of the fridge, to have the fridge doors siting flush with the kitchen cabinetry.

Minimum cabinetry opening (WxDxH) : 1070mm x 741mm x 1800m

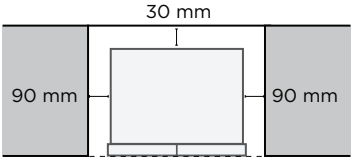

Note : Top gap all 5 mm.

1. Roll the refrigerator into place.
   The rollers are designed for forward or backward movement only. They are not castors. Moving the refrigerator sideways may damage your floor and the rollers. Before moving your refrigerator ensure height adjusting nut and the stability foot are fully wound up off the floor.
2. Wind the large height adjusting nut under door hinge down until the refrigerator is tilted back by 10mm (see diagram).

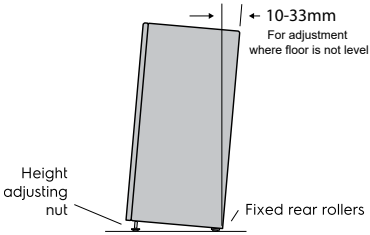

3. Wind the large height adjusting nut on the handle side down until the refrigerator is level and stable. If you have difficulty winding the nut or height adjusting foot down, have someone tilt the refrigerator back so you have better access.

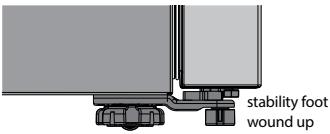

4. Check the alignment of the refrigerator to the surrounding cupboards to see if it is level. You can adjust the level as detailed in step 2 and 3.

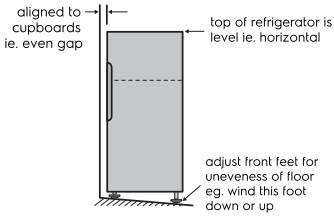

5. If you find your refrigerator rocks from corner to corner, it means your floor is uneven. Find a piece of plastic or hardboard etc. and pack it firmly under the roller.
6. You may now need to fine-tune the installation by repeating steps 3, 4 and 5.
7. When you have the appliance in its final position, it needs to be stabilised. Wind the stability foot under the door hinge down to the floor until it just makes contact with the floor. Lift the front of the appliance to take the weight off the stability foot, then turn it half a turn further to ensure firm contact with the floor. Wind the large height adjusting nut back up to ensure all the weight is now on the front stability foot. Wind the large height adjusting nut back up to ensure all the weight is now on the front stability foot.

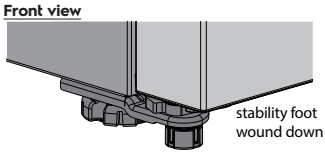

8. Repeat step 7 for the stability foot on the handle side. Whenever you need to move the appliance, be sure to wind the feet back up so that the appliance can roll freely and be sure to reset it when reinstalling.
9. Plug your refrigerator straight into its own power point and never use a double adapter. If you need to roll the refrigerator to get to the plug, remember to raise the stability foot first.
10. Before you put any food in your refrigerator, it's recommended you leave it on for 2 or 3 hours to check it is running properly.

Door opening

Your refrigerator should be positioned to allow easy access to a counter when removing food. For best use of refrigerator drawers and freezer baskets, the refrigerator should be in a position where both can be fully opened.

WARNING
LED lighting
Your appliance is fitted with long life LED lighting. In the unlikely event the LED lights should fail, then the LED lights should be serviced by the service agent, to avoid a safety hazard. Refer to the warranty page for contact details.

Cabinet Leveling & Refrigerator Door Alignment (if necessary)

- All four corners of the cabinet must rest firmly on the floor
- The front should be slightly elevated to ensure that doors close and seal properly.
- Doors should align with each other and be level.

Most of these conditions can be met by raising or lowering the adjustable front rollers.

To level the cabinet using the front rollers:

1. Lower anti-tip legs until they are both touching the floor. Use a pair of pliers to adjust.
   To raise: turn leg clockwise.
   To lower: turn leg counterclockwise.

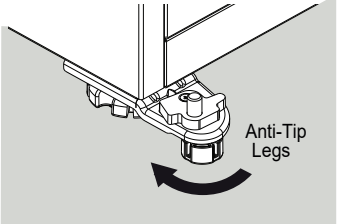

2. Ensure both doors are bind-free with their seals touching the cabinet on all four sides and that cabinet is stable.

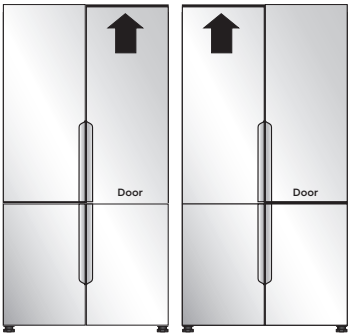

Flipper Mullion

Adjust Flipper Mullion for proper connection with the mullion guide by ensuring the flipper mullion is folded and perpendicular to the fresh food door. If the mullion guide is not in the correct position, it could prevent the door from closing completely.

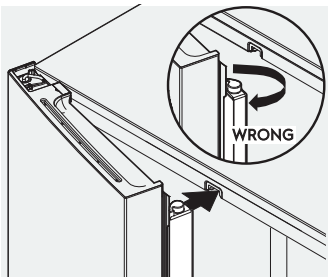

Air filter installation

1. Remove air filter cover.
2. Remove plastic bag from air filter and put air filter into air filter cover.
3. Then install air filter cover with filter on multiflow.

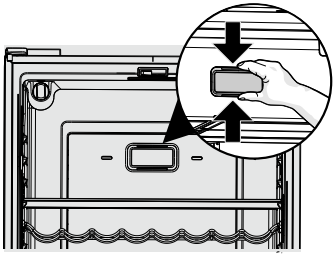

NutriPlus™ (Anti-Oxidant Filter)

Installing Filter Cartridge

Your filter can be found in the crisper. To enjoy the full benefit of NutriPlus™, it is important to install it after turning on the refrigerator. For installation, please follow the following instruction.

1. Remove plastic wrap.
2. Insert the packet into the holder in the side of crisper.

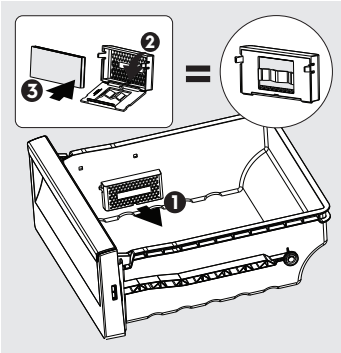

4. TEMPERATURE CONTROL

The following pages explain the various functions of the user interface to help you better understand how to get the most out of your new refrigerator.

IMPORTANT
NOTE: When you set a temperature, you set an average temperature for the whole refrigerator cabinet. Ensuring that you make only small adjustments and wait at least 24 hours to see if the new temperature is correct to your liking.

Checking the softness of ice cream is a good indication that your freezer is the right temperature, while checking the temperature of water kept in the refrigerator is a good way of checking the temperature of the food compartment.

Temperatures inside each compartment may vary, depending on how much food you store and where you place it.

High or low room temperature may also affect the actual temperature inside the refrigerator.

4.1 Functions of the user interface

EQE5660

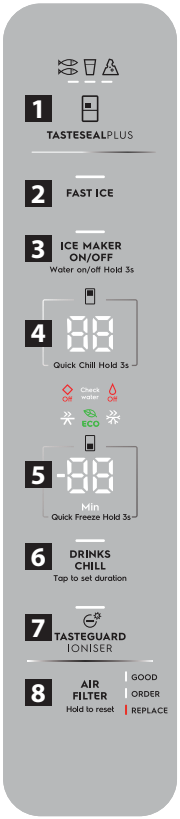

EQE5600

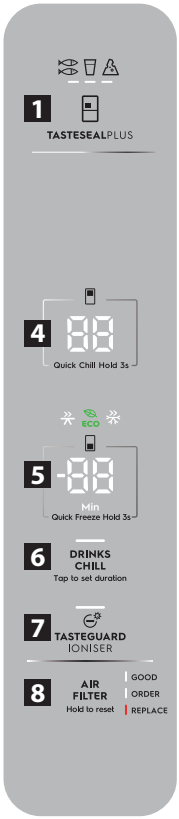

1. TasteSeal Plus Control
2. Fast Ice Botton
3. Auto Ice Maker Control
4. Fridge Temp Tontrol
5. Freezer Temp Control
6. Drinks Chill Button
7. Tasteguard Ioniser
8. Air Filter Reset Button

Function	Icon	Operation (depending on model)
1 TasteSeal Plus Control	Meat & Fish TASTESEALPLUS	Tap on TasteSealPlus button, Actives the next mode. The LED of the next mode lights up. TasteSeal plus has 3 temperature modes: -2°C Meat & Fish -0°C Cold Drinks 3°C Deli snack
	Cold Drinks mode TASTESEALPLUS	
	Deli snack mode TASTESEALPLUS	
2 Fast Ice Botton	FAST ICE	Tap on Fast ice button. When Fast ice is ON, the Fast Ice indicator lights up. When Fast ice is OFF, the Fast ice indicator turns off. When Fast Ice is on, the compressor will run continuously for 24 hours. Fridge and TasteSealPlus compartment continue to run at set temperature. Fast ice auto turn off on either of this condition: - 24 hours has elasped - Freezer temp is adjusted to -23°C *NOTE:* **Quick Freeze and Fast Ice cannot be activated at the same time. If Quick Freeze is ON, Fast ice cannot be activated.* ***When ice bin is full - Fast ice will not be deactivated. Auto Ice maker will stop working but Fast ice 12 hours counter continus to countdown.* *Whenever ice bin level drops, Auto Ice maker will continue to make ice with Fast ice turn on.*

Function	Icon	Operation (depending on model)
3 Auto Ice Maker Control	 Ice Off Alert indicator Water Off Alert indicator 	Tap on Ice Maker on/off button. When Ice maker is ON, the button LED lights up . When Ice maker is OFF, the button LED turns off. Ice Off alert lights up. Press and hold on Ice Maker On/Off button for 3 secods. When it is ON, water can be dispensed when the water dispenser paddle is pressed. When it is OFF, water cannot be dispensed when the water dispenser paddle is pressed.
4 Fridge Temp Control		Taps on the display to cycle through the temperature range supported by the Fridge. From 7°C To 1°C Default 4°C
5 Freezer Temp Control		Taps on the display to cycle through the temperature range supported by the Freezer From -14°C To -23°C Default -18°C
6 DrinksChill	Drinks Chill timer indicator 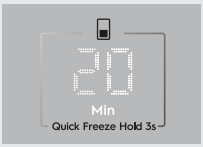	The Drinks Chill timer is used to quickly chill a bottle inside the freezer compartment and to warn the user when it ends. Tap on Drinks Chill button, Freezer display shows 20 ,"Min" and Drink Chill LED turns on. The timer option is from 20 minutes and the user can add time in 5 min intervals up to 45 minutes. After it starts the timer will show the countdown minute by minute. *NOTE:* *When timer countdown is in progress, the timer duration cannot be adjusted. User will need to deactivate Drinks Chill and activate Drinks chill again to set a new timer.*

Function	Icon	Operation (depending on model)
7 Tasteguard Ioniser		Tap on Ioniser button. When Ioniser is ON, Ioniser button LED turns on. When Ioniser is OFF, Ioniser button LED turns off. Ionizer is a device designed to reduce the bacteria level inside the refrigerator helping to extend food preservation time. It creates ozone while operating and it's important to keep the amount of ozone inside the safety limits (0.1ppm), therefore ionizer operation will follow a simple ON/OFF logic. Ioniser do not affect ECO status. ECO indicator will remain on when Ioniser is turned On. Deactivating Ioniser: - By tapping on Ioniser button to turn OFF - When Holiday mode is set. *NOTE* *- Ionizer will stop operating during if the doors are opened and restart automatically when the door are closed.* *- Ionizer will stop operating during defrost process and restart automatically once defrost is finished.*
8 Air Filter Alert and Reset		"GOOD" LED turns on is mean the filter used for 0-4 months. "ORDER" LED turns on is mean the filter used for 5 months , to remind user to order new water filter. "REPLACE" LED turns on is mean the filter used for 6 months, Press and hold Air filter for 3 seconds to reset. Status will reset to GOOD.
Quick Chill Control	 Quick chill indicator 	Press & Hold on Fridge digits for 3 seconds. Tap on Fridge digits to adjust temperature. When Quick chill is ON, the Quick chill indicator lights up. When Quick chill is OFF, the Quick chill indicator turns off. Use the Quick Chill when you add a large amount of food to the refrigerator compartment after grocery shopping or to quickly cooled your drink. When Quick chill is on, the cold air circulate into the refrigerator to temporarily reduce the temperature to 1°C for 6 hours, Freezer compartment continue to run at set temperature. Quick chill auto turn off on either of this condition: - 6 hours has elasped - Fridge temp is adjusted

Function	Icon	Operation (depending on model)
Quick Freeze Control	 Quick Freeze Control 	Press & Hold on Freezer digits for 3 seconds. Tap on Freezer digits to adjust temperature. When Quick freeze is ON, the Quick Freeze indicator lights up. When Quick freeze is OFF, the Quick Freeze indicator turns off. Use the Quick freeze function when you add a large amount of food to the freezer compartment after grocery shopping, to speed up the freezing process. When Quick freeze is on, the compressor will run continuously for 6 hours. Fridge compartment continue to run at set temperature. Quick freeze auto turn off on either of this condition: - 6 hours has elasped - Freezer temp is adjusted to -23°C *NOTE: Quick Freeze and Fast Ice cannot be activated at the same time. If Fast ice is ON, Quick Freeze cannot be activated.*

4.2 Alert and Alarms

Door Alarm

When any of the door is left open for 2 minutes. The alarm will sound, and all LEDs that are currently on.

- The alarm is turned off by closing the door or resetting the countdown by pressing any key on the control panel.

High Temperature alert

In the event of high temperature condition, audio alarm is played every 10 seconds until the alert is acknowledged.

The alarm by pressing any key on the control panel.

Display and blink "HI" in the correspondent compartment display, whichever is in the high temperature condition.

High Temp indicator on Fridge display

High Temp indicator on Freezer display

ECO indicator

Eco mode indicator will light up automatically to 100% when the fridge and freezer compartments are set within a temperature range.

Fridge range: 4°C to 7°C

Freezer range: -18°C to -14°C

Selecting any of these mode: Quick Freeze, Quick Chill, Fast Ice or Drinks Chill will deactivate the Eco mode, the Eco icon will fade.

Air Filter Alert and Reset

Air Filter alert warns user that the Air filters have to be changed as soon as possible.

When air filter is used for 6 months since the last filter reset, the LED "Replace" will automatically turn ON.

Note:
1. Users could reset the filter when alert is not visible. Play tone_Confirm once it is reset.
2. LED_air filter remains visible during sleep mode, except when door is closed.

Check water Alert (*EQE5660 model only)*

When water tank is empty, the Ice maker senses the lack of warm water feeding in, and will turn off the ice maker.

This trigger will also displays the "Check water alert". The intention is the alert user that Ice maker has been turn off due to the lack of water.

The alert can be dismissed by turning on Ice maker. If no water is detected again, ice maker will be turn off again, and the check water alert turns on.

Error codes

Both Fridge & Freezer displays are used to communicate problems by code.

When error codes are displayed in the numeric display, the unit requires service attention.

"Er" shows up on Fridge display

Various error codes on Freezer display

Error code table	
Communication error	**CE**
FZ Cavity NTC	T1
FZ Evaporator NTC	T2
FF Cavity NTC	T3
Third cavity NTC	T5
FZ Ice maker NTC	T8

5. STORAGE FEATURES

Glass shelves

To remove the shelves, gently pull them forward until the shelf comes clear of the shelf guides.

To return the shelf, make sure there is nothing behind that may obstruct movement. Gently push the shelf, into the cabinet and back into position.

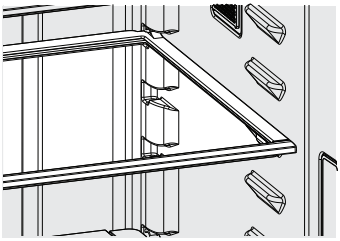

CAUTION
To avoid personal injury or property damage, handle tempered glass shelves carefully. Shelves may break suddenly if nicked, scratched, or exposed to sudden temperature change. Allow the glass shelves to stabilize to room temperature before cleaning. Do not wash in dishwasher.

Drawer
Your refrigerator includes a variety of storage drawers.

Crisper (with automatic humidity control)

Crisper drawers are designed for storing fruits, vegetables, and other fresh produce. Crispers have an auto humidity control (with replaceable membrane) on the back of each crisper under the humidity control cover.

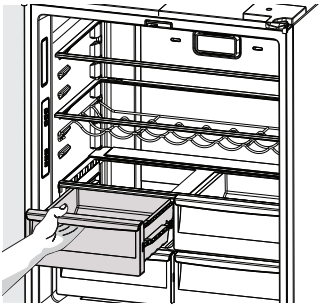

Opening the Crisper Drawer

To remove the auto humidity control membrane:

1. Reach to back of humidity control cover.
2. Pull up on cover.
3. Pull cover towards back of cabinet and remove.
4. Replace humidity membrane.
5. Replace cover by reversing the steps above.

Repeat for both crispers.

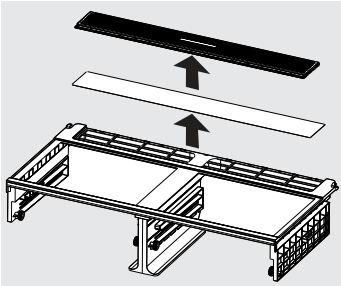

Remove the auto humidity control membrane

IMPORTANT
It's not required to replace the Auto humidity membrane unless it becomes damaged or ruined. If the membrane becames soiled or dirty, it can be washed with soap and water. Ensure membrane is dry before putting back in crisper drawer. Please contact our service provider when need to replace your AHC membrane.

To remove the crisper for cleaning:

1. Pull the drawer out until it stops.
2. Lift the front slightly and remove the drawer.

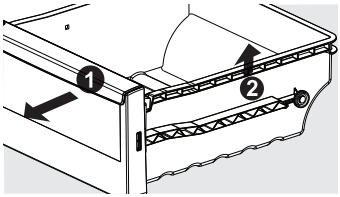

Removing Crisper

Doors

Storage bins

The doors to your fresh food compartment use a system of modular storage bins. All of these bins are removable for easy cleaning. Bins can be adjusted to your needs.

Door bins are ideal for storing jars, bottles, cans, and large drink containers. They also enable quick selection of frequently used items.

To remove the door bin:

1. lift and unlock from lugs to remove.
2. Replace by lift up and push bin down until the support lugs lock it in place.

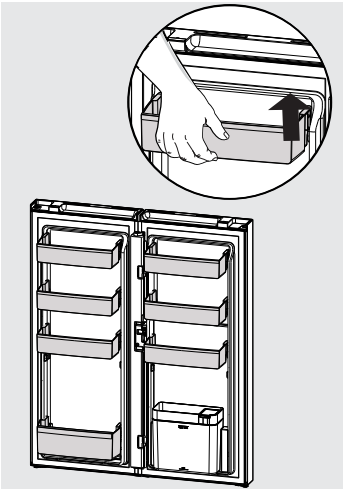

Removing door bin

Water Tank

CAUTION

BEFORE REMOVE; to empty the water in the tank.

To remove the water tank and disassembly cleanable parts follow these steps:

1. Life up water tank until locking release.
2. Pull water tank forward.

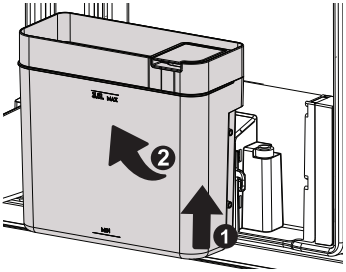

Removing water tank

3. Remove water tank lid (1), water tank tube (2) and filter (3).

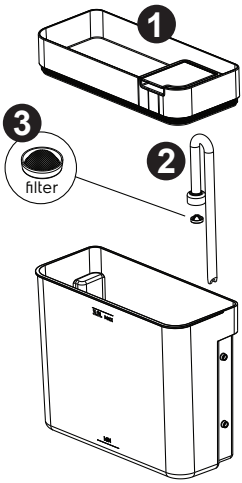

Disassembly water tank

Reverse the step to assembly the water tank and return to its place. Reverse the step to assembly the water tank and return to its place.

NOTE: The water tank for EQE5660 model only

Freezer storage

To remove freezer drawers:

All freezer drawers are removable.

1. Open doors completely to gain access to drawers.
2. Pull the drawer to the stopper. Lift up and pull to remove it from the cabinet.
3. Reverse the steps to reinstall drawer.

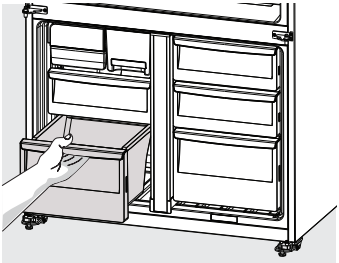

Removing Freezer Drawer

Twist & Serve Ice Bin *(EQE5600 model only)* **:**

1. Prior the first use clean the ice tray.
2. Fill the water up to max level of the ice tray.

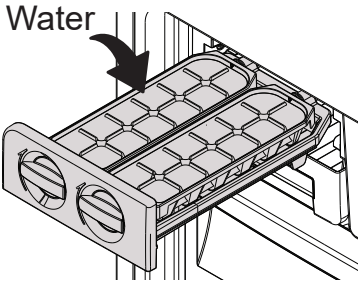

3. Put the ice tray in place.
4. Rotate ice twist clockwise to release the ice from ice tray.

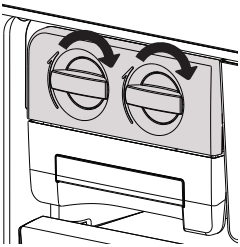

6. AUTOMATIC ICE & WATER DISPENSER

NOTE: The Automatic ice&water for EQE5660 model only

Using the ice maker after installation

The automatic ice making function pumps water from the water tank located in the refrigerator and dispenses it into the automatic ice maker in the freezer.

The ice will then be dropped into the ice bin located beneath the ice maker. If the water tank is empty or lower than level, the ice maker will automatically turn off after 3 attempts at pumping water from the tank. The ice maker indicator on the user interface shows the operational status of the ice maker (Refer control instructions).

Refilling the water tank

- The water tank must be placed on the door.
- Pour potable water through the funnel at the lid of water tank.
- Ensure that ice maker and dispenser is switched on.

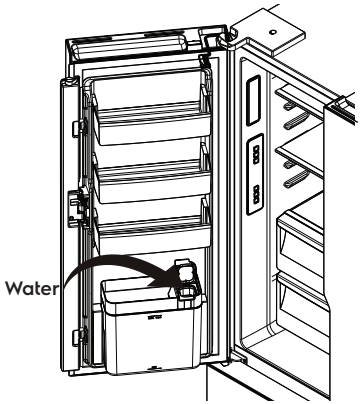

Priming the water supply system

1. Begin filling the system by pressing and holding a drinking glass against the dispenser.
2. Keep the glass in this position until water comes out of the dispenser. It may take about 1½ minutes.
3. Continue dispensing water for about four minutes to flush the system and plumbing connections of any impurities (stopping to empty the glass as necessary).

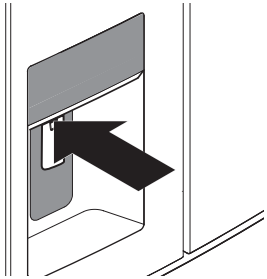

Note: The water dispenser has a built-in device that shuts off the water flow after three minutes of continuous use. To reset this shut-off device, simply release the dispenser paddle.

CAUTION
Do not fill the Water tank with anything other then clean water (Filtered or Mineral water). Soft drink, juice, tea or hot water etc, can damage your automatic icemaker. The Water tank can withstand a maximum water temperature of 60°C

Tip and Useful Information
Remove and clean ice bin and water tank once a month, discarding unused ice and water. This will ensure fresh ice and smooth operation of your icemaker. Make sure your refrigerator is level to avoid uneven ice cubes.

Turning the ice maker on and off

IMPORTANT
Your ice maker is turned on at the factory so it can work as soon as you install your refrigerator. If you do not fill the water tank, set the ice maker's On/Off feature to Off; otherwise, the ice maker's fill valve may make a loud chattering noise when it attempts to operate without water.

Ice production is controlled by the ice maker's On/Off feature on the control panel. Pressing the On/Off feature turns the ice maker on & off.

IMPORTANT
Turning off the ice maker simply d isables ice making. You will still be able to dispense existing ice, and you will still be able to dispense water.

Ice maker/dispenser tips

- The following sounds are normal when the ice maker is operating:
  - Motor running
  - Ice dropping into ice bin
  - Water valve opening or closing
  - Running water

CAUTION
If the water supply to your refrigerator is softened, be sure the softener is properly maintained. Chemicals from a water softener can damage the ice maker.

Cleaning the ice maker

Clean the ice maker and ice bin at regular intervals, especially prior to vacation or moving.

1. Turn off the icemaker.
2. Remove the ice bin by pulling straight out.
3. Empty and carefully clean the ice bin with mild detergent. Do not use harsh or abrasive cleaners. Do not place in dishwasher. Rinse with clear water.
4. Allow the ice bin to dry completely before placing it back into the freezer.
5. Place ice bin back into position. Turn the ice maker on.

7. GENERAL INFORMATION

7.1 Cleaning your refrigerator

WARNING
BEFORE CLEANING: Turn the refrigerator off at the power point and unplug the cord to prevent any chance of electrocuting yourself.

Stainless Steel:

Your stainless steel refrigerator is manufactured from mark-resistant stainless steel. This stainless steel has a special advanced protective coating that eases the removal of marks such as fingerprints and water spots. To keep its appearance, clean it regularly with lukewarm soapy water and a soft cloth.

CAUTION
Never use stainless steel cleaners, abrasive pads or other cleaners that will scratch the surface. Damage to the appliance after d elivery is not covered by your warranty.

Interior

Clean the inside of your refrigerator regularly with a soft cloth, unscented mild soap and lukewarm water. Thoroughly dry all surfaces and removable parts and avoid getting water on the controls. Replace removable parts, plug power cord in and switch the power on before returning the food.

Door seals

Always keep door seals clean by washing them with a mild detergent and warm water, followed by a thorough drying. Sticky food and drink can cause seals to stick to the cabinet and tear when you open the door.

Never use hot water, solvents, commercial kitchen cleaners, aerosol cleaners, metal polishes, caustic or abrasive cleaners, or scourers to clean your refrigerator. Many commercially available cleaning products and detergents contain solvents that will damage your refrigerator. Use only a soft cloth with an unscented mild soap and lukewarm water.

CAUTION
To clean a crisper simply wipe with a damp cloth and warm soapy water. Never immerse the cover in water, as this could affect the operation of the slide.

Switching off your refrigerator

If you switch off your refrigerator for an extended period, follow these steps to reduce the chances of mould.

1. Remove all food.
2. Remove the power plug from the power point.
3. Thoroughly clean and dry the Interior.
4. Ensure that all the doors are wedged open slightly for air circulation.

7.2 Air Filter

The air filter is located in the top center of the fresh food compartment.

Replacing your Air Filter

To ensure optimal filtering of refrigerator odors, you should change the air filter six months (The filter status light on the Touch Panel prompts you to replace the filter after six month)

1. Remove the air filter cover by squeezing the sides of the cover together and removing from liner
2. Remove the old filter and discard it.
3. Unpack the new filter and slide it into the housing. The open face must (carbon media) of the filter should be installed facing the air port (hole) in the multiflow.
4. Replace the air filter cover by squeezing the sides and snapping it back into place.
5. Press and hold the “Reset Air Filter” button on the control panel for three seconds. When the LED turns off, the status has been reset.

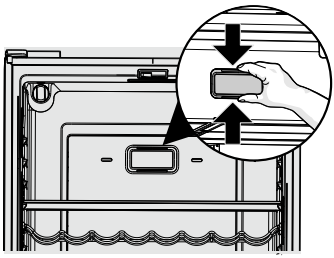

7.3 Ice and Water (selected models)

Clean the components of the ice maker/water dispenser regularly with a soft cloth, unscented mild soap and rinsing thoroughly with lukewarm water.For further information on the care and cleaning of your ice maker, ice dispenser of water dispenser refer to the section "Ice and Water Models"

7.4 Water Tank

The water tank is intended to be removed only for cleaning purposes, to fill the portable water only, the tank must be placed on the door and the funnel on the lid has to be used.

Clean the inside of the water tank regularly with a soft cloth and the filter use the soft brush to clean, unscented mild soap and rinse thoroughly with lukewarm water to completely remove any soap residue.

NOTE: When customer assembled tank to door To avoid water leaks ensure that tank nozzle fully engaged with housing socket.

8. FOOD STORAGE GUIDE

Category	Product	Recommended storage times for fresh foods*			Storage tips
		Refrigerator	TasteSeal Plus	Freezer	
Meat	Sausages and Mince	1-2 Days	3-5 Days	2-3 Months	Keep cold meat at the back of the refrigerator where it is coldest. Plastic can cause meat to sweat if stored in refrigerator for more than a day. Roast can take up to 48 hours to defrost properly, transfer frozen roast to the refrigerator 2 days before use.
	Chops and Steak	3-4 Days	5-7 Days	4-6 Months	
	Cold Meats	3-5 Days	5-7 Days	4-6 Months	
	Roasts	3-5 Days	1 week	12 Months	
Poultry	Chicken	1-2 Days	5-7 Days	2 Months	If poultry takes on a smell or colour you are unsure about it is best to throw it out. Whole eggs are not suitable for freezing, slightly beaten eggs may be frozen for four months.
	Roast Chicken	3-5 Days	1 week	12 Months	
	Eggs	6 Weeks	Not Suitable	Not Suitable	
Seafood	Whole fish and fillets	2-3 Days	5-7 Days	2 Months	Store in an airtight container or foil. Never freeze prawns in salty water as this will dehydrate the flesh.
	Lobster and Crab	1-2 Days	3-5 Days	2 Months	
	Prawns	1-2 Days	3-5 Days	2 Months	
Dairy	Milk	Until Expiry Date	Not Suitable	Not Suitable	If dairy takes on a smell or colour and you are unsure about it, it is best to throw it out. Depending on the variety hard cheese can last from 2 weeks to 2 months. * Texture may change depending of the type of soft cheese
	Yoghurt	7- 10 Days	Not Suitable	Not Suitable	
	Hard Cheeses	2 Weeks – 2 Months	1-2 Months	2 Months (Grated)	
	Soft Cheeses	1-2 Weeks	2-4 Weeks *	Not Suitable	
	Butter	8 Weeks	3-4 Months	12 Months	
Fruit & Vegetables	Every fruit and vegetable has a different shelf life. Some stay fresh for a couple of days e.g. beans, others can last for a couple of months e.g. onions.		Not Suitable	8-12 Months When freezing chop and blanch in small portions.	Keep vegetables in the crisper and away from the air vents to avoid freezing. If you wash fruit and vegetables before storing them make sure they are dry or wrap in absorbent paper before storing in the refrigerator as this can make them susceptible to rotting. Try to keep fruit and vegetables separated as fruits that give off high levels of ethylene (the ripening agent) can prematurely ripen and spoil surrounding vegetables
Left Overs	Homemade meals	3-4 Days	Not Suitable	2-6 Months	Store in sealed container. Freeze meal in small portion sizes to limit wastage.

IMPORTANT
Please note, use this information as a guide only, actual storage times will vary depending on how you use your refrigerator, climatic conditions and the freshness of the food.

9. TROUBLESHOOTING

Appliance does not operate at desired temperature
In a modern frost free refrigerator / freezer, cold air is circulated around the various compartments through air vents using a high efficiency fan.

CONCERN	WHAT TO DO
Refrigerator is too warm	• Adjust the refrigerator to a colder setting • Ensure food is allowed to cool before placing inside the refrigerator. • Ensure the appliance is set up as per instructions • Ensure that contents are not obstructing the cooling vents. • Ensure the door is not held open or is being opened too frequently.
Freezer is too warm	• Adjust temperature to a colder setting. • Ensure food is allowed to cool before placing inside the freezer. • Ensure the appliance is set up as per instructions • Ensure that contents are not obstructing the cooling vents. • Ensure the door is not held open or is being opened too frequently.
Food is freezing in the refrigerator	• Adjust temperature to a warmer setting. • Ensure that fruit and vegetables are stored in the crisper. Items with a high water content should not be placed near the cooling vents.
Unable to change temperature settings	• Refer to sections "temperature control" and "about the user interface". • Ensure that user interface is in "awake" mode before trying to adjust temperature settings.

Appliance noise
Your new refrigerator may make sounds that your old one didn't make. Because the sounds are new to you, you might be concerned about them. Most of the new sounds are normal. Hard surfaces, like the floor, walls and cabinets, can make the sounds seem louder than they actually are. The following describes the kinds of sounds and what may be making them.

CONCERN	WHAT TO DO
Motor noise (compressor)	Nothing. This is normal as your new refrigerator uses a high-speed compressor which switches on and off during operation. Note that the compressor noise may seem louder at the start of the on cycle.
Motor noise (compressor);	These refrigerators are fitted with a variable speed compressor and fan. At start up and on warm days they run at a higher speed to provide additional cooling. When less cooling is required the compressor and fan will run at a lower speed. As a result it is normal for sound levels to change depending on operating conditions.
A clicking noise heard just before the compressor starts.	Nothing. This is normal as your new refrigerator has an automatic switching action of the temperature control, turning the compressor on and off.

CONCERN	WHAT TO DO
Occasional gurgling, similar to water boiling.	Nothing. As each cycle ends, you may hear a gurgling sound due to the refrigerant flowing in your refrigerator system. Nothing, this is normal as your new refrigerator uses high efficiency fans to circulate air. Fan speed and noise may increase during periods of heavy usage or hot weather.
Rattling and other noises.	• Ensure that the cabinet is level and stable, refer to Installation Instructions • Check the surrounds of the appliance to ensure there is nothing touching or placed on top of the appliance. • Ensure that contents of the appliance are not placed in such a way that they are vibrating (such as bottles).

Crisper Operation

CONCERN	WHAT TO DO
Excess moisture build up in crisper It is normal for there to be some moisture and humidity in the crisper bin.	• Ensure that the crisper is not over packed. • Adjust crisper humidity slides.
Crisper bin can not be removed	• If crisper bin interferes with the door bins, remove door bins before removing crisper. • Position cabinet so that the door can be fully opened.
Freezing items in the crisper	• Adjust temperature to a warmer setting.

Refrigerator operation

CONCERN	WHAT TO DO
Appliance will not run It is normal for the freezer fan not to operate during the automatic defrost cycle, or for a short time after the appliance is switched on.	• Ensure that the cord is plugged into a live power outlet and outlet is switched on. • Ensure that the household circuit breaker has not tripped or that the fuse has not blown. • The appliance maybe in defrost mode, check again in half an hour.
Compressor motor seems to run too long At normal room temperatures, expect your motor to run about 40% to 80% of the time. Under warmer conditions, expect it to run more often.	• Ensure that the doors are not held open. • Check that large amounts of warm food have not just been placed inside the appliance. • Note that the appliance will run more than normal just after you install it or when adjusting the temperature setting changes.

CONCERN	WHAT TO DO
Compressor motor seems to run too long . These appliances use a variable speed compressor, which by design can run for long periods of time, this is normal	• The variable speed compressor and fan that at start up and on warm days, runs at high speeds to provide additional cooling. When less cooling is required the compressor and fan will run at a lower speed, but still may not switch off. This is normal. • It is possible that the only time the compressor and fan will stop is when the refrigerator is defrosting which is approximately once per day.
The exterior of the appliance is warm or hot to touch This is normal because the appliance transfers heat from the inside out through the outer panels and the divider between the doors.	• Ensure the appliance has the external clearances recommended in the section "Installing your new appliance". • The exterior of the cabinet will be much warmer on warmer days it may even feel hot to touch, as the appliance is working harder.
User interface will not respond To ensure settings are not accidentally changed the user interface will go into sleep mode when not in use. Press any button to wake user interface	• Check that the user interface is in awake mode, refer to section "About the user interface". • Check that the user interface is not locked, refer to section "About the user interface". • If the user interface is frozen turn the appliance off for five minutes for the memory to clear, then turn back on.
Alarms Sounding	• Check that all doors are fully closed. • Ensure that the over temperature alarm is not being activated by hot food placed in the freezer. • Check if the drinks timer has ended, refer control instructions.
Frost build up	• Check that all doors are fully closed. • Ensure that the doors are not opened too often. • Ensure that the return air vents are not blocked with packaging. • Ensure the seals are clean and not obstructed.
Odours	• The interior may need cleaning, refer to cleaning guide. • Ensure that food is stored correctly as some food, containers and wrapping can produce odours. • Check appliance for old or unusual food.
Lights not working The LED lighting is esigned to turn on gradually. The LED lighting is designed to dim automatically if the door is left opened for more than 5 minutes and turn off completely if the door is open for more than 7 minutes. Closing the door will reset the timer.	• Ensure that the cord is plugged into a live power outlet and outlet is switched on. • Ensure that the household circuit breaker has not tripped or that the fuse has not blown. • Check the appliance features section to determine lighting configuration for your model.

Door operation

CONCERN	WHAT TO DO
Freezer door pops open.	• This is normal and should re-close. This happens when the refrigerator door is closed too quickly. • If the freezer door stays open, it indicates that the appliance needs to be tilted backwards a little further. Refer to section "Installing your new appliance".
Self close not working.	• Check if your appliance has self closing hinges as not all models do. • It indicates that the appliance needs to be tilted backwards a little further. Refer to section "Installing your new appliance".
Door not sealing properly	• Ensure there is nothing that is preventing the door from closing such as appliance contents or items placed near the appliance. • Ensure that the crisper/freezer bin is closed completely. Refit if required as referred to in the section "Using your refrigerator". • Ensure the appliance is set up as per recommendations.
Door difficult to open and close	• If the door is difficult to open just after you have closed it this is due to the pressure equalising, the door will open normally after a few minutes.

If you still require service
If you have a problem, and the problem persists after you have made the checks mentioned, contact your nearest Electrolux approved Service Centre or the dealer you bought the refrigerator from. Be ready to quote the model number, the 9-digit PNC and 8-digit serial number, which is stated on the label inside the refrigerator compartment.

10. NOISES

Appliance noise

Your new refrigerator may make sounds that your old one didn't make. Because the sounds are new to you, you might be concerned about them. Most of the new sounds are normal. Hard surfaces, like the floor, walls and cabinets, can make the sounds seem louder than they actually are. The following describes the kinds of sounds and what may be making them.

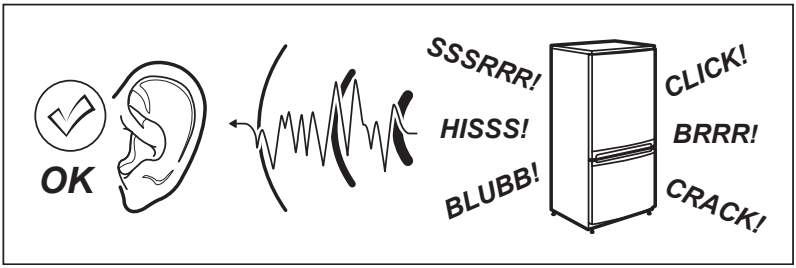

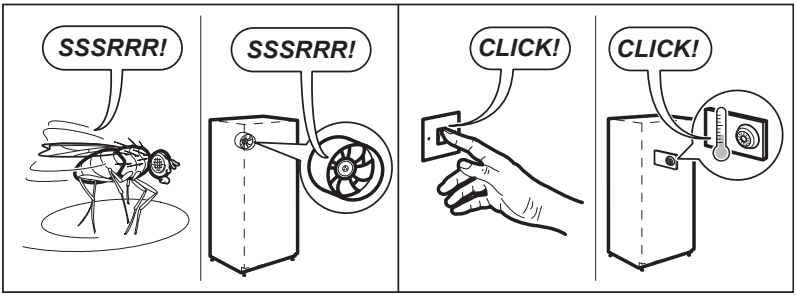

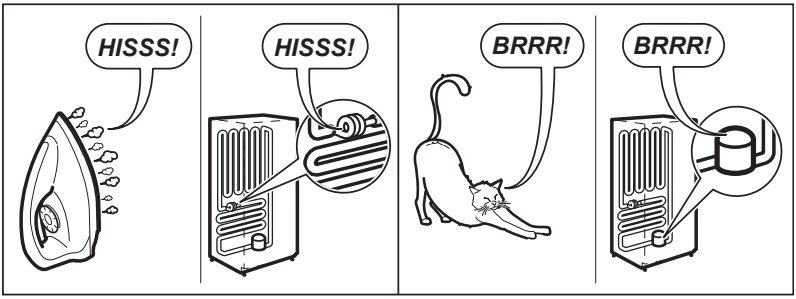

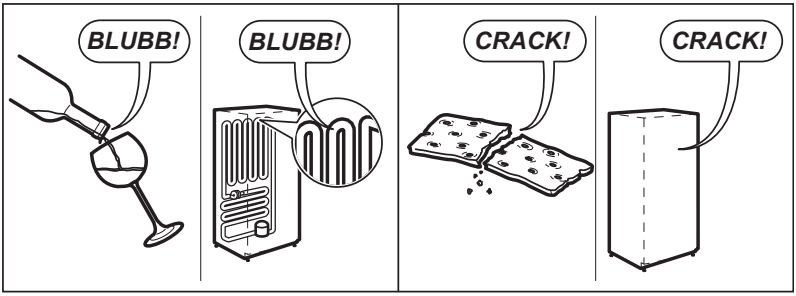

NỘI DUNG

1. THÔNG TIN AN TOÀN 3
2. HƯỚNG DẪN SỬ DỤNG SẢN PHẨM 5
3. LẮP ĐẶT TỦ LẠNH 7
4. KIỂM SOÁT NHIỆT ĐỘ 11
5. TÍNH NĂNG LƯU TRỮ 17
6. MÁY LÀM ĐÁ & NƯỚC TỰ ĐỘNG 20
7. THÔNG TIN CHUNG 22
8. HƯỚNG DẪN BẢO QUẢN THỰC PHẨM 24
9. XỬ LÝ SỰ CỐ 25
10. TIẾNG ỒN 29

CHÚNG TÔI ĐANG NGHĨ ĐẾN BẠN

Cảm ơn bạn đã lựa chọn Electrolux. Chúng tôi đã thiết kế sản phẩm này để giúp cuộc sống của bạn trở nên đơn giản hơn và mang lại hiệu suất hoàn hảo trong nhiều năm qua. Vui lòng dành vài phút đọc tài liệu này để tận dụng tối đa thiết bị Electrolux mới của bạn.

Ghé thăm trang web của chúng tôi để:

Nhận tư vấn sử dụng hoặc thông tin dịch vụ:
www.electrolux.com

Đăng ký sản phẩm của bạn để được phục vụ tốt hơn:
www.electrolux.com/support/register-warranty

DỊCH VỤ VÀ CHĂM SÓC KHÁCH HÀNG

Luôn sử dụng phụ tùng nguyên bản.
Khi liên hệ với Trung tâm Dịch vụ được Ủy quyền của chúng tôi, hãy đảm bảo rằng bạn có sẵn dữ liệu sau đây: Kiểu máy, PNC, Số sê-ri.
Thông tin có thể được tìm thấy trên bảng đánh giá.

Cảnh báo / Thận trọng-Thông tin an toàn.
Thông tin chung và lời khuyên.
Thông tin môi trường.

Có thể thay đổi mà không cần thông báo.

1 THÔNG TIN AN TOÀN

Ghi chú: Bạn phải đọc kỹ những cảnh báo này trước khi lắp đặt hoặc sử dụng tủ lạnh. Nếu bạn cần hỗ trợ, hãy liên hệ với trung tâm chăm sóc khách hàng của bạn. Nhà sản xuất sẽ không chịu trách nhiệm pháp lý nếu các hướng dẫn này hoặc bất kỳ hướng dẫn an toàn nào khác được đưa vào cuốn sách này bị bỏ qua.

CẢNH BÁO

- Quan trọng là ổ cắm điện phải được nối đất đúng cách. Tham khảo ý kiến của thợ điện có trình độ nếu bạn không chắc chắn.
- Không sử dụng các thiết bị điện bên trong ngăn bảo quản thực phẩm của thiết bị, trừ khi chúng thuộc loại được nhà sản xuất khuyến nghị.
- Rút phích cắm của tủ lạnh trước khi vệ sinh hoặc di chuyển tủ để tránh bị điện giật.
- Tuyệt đối không được rút phích cắm của tủ lạnh bằng cách kéo dây điện vì điều này có thể làm hỏng tủ. Nắm chặt phích cắm và rút thẳng ra.
- Nếu dây nguồn bị hỏng, nó phải được thay thế bởi nhà sản xuất, đại lý dịch vụ của nhà sản xuất hoặc những người có trình độ tương đương để tránh nguy hiểm.
- Không sử dụng máy làm sạch bằng hơi nước. Nếu các bộ phận mang điện tiếp xúc với hơi nước ngưng tụ, chúng có thể bị đoản mạch hoặc gây điện giật.
- Không lưu trữ các chất dễ nổ như bình xịt chứa chất nổ đẩy dễ cháy trên thiết bị này. Nếu các bình xịt áp suất có chữ 'dễ cháy' và/hoặc biểu tượng ngọn lửa nhỏ, không được bảo quản chúng bên trong bất kỳ tủ lạnh hoặc tủ đông nào. Nếu làm như vậy, bạn có thể gây cháy nổ.
- Không làm hỏng mạch môi chất lạnh.
- Thiết bị này có lớp cách nhiệt được hình thành bằng khí thổi dễ cháy. Tránh các mối nguy hiểm về an toàn bằng cách thải bỏ cẩn thận thiết bị này.
- Nếu bạn muốn vứt bỏ tủ lạnh này, vui lòng liên hệ với chính quyền địa phương của bạn và yêu cầu cung cấp phương thức thải bỏ chính xác.
- Khi bạn thải bỏ tủ lạnh và tủ đông cũ, hãy tháo toàn bộ cửa. Trẻ em có nguy cơ ngạt thở nếu bị mắc kẹt bên trong.
- Khi định vị thiết bị, đảm bảo dây nguồn không bị kẹt hoặc hư hỏng.
- Không bố trí nhiều ổ cắm di động- ổ cắm hoặc nguồn điện di động ở phía sau của thiết bị.

CẢNH BÁO
Cảnh báo môi chất lạnh R600a

Thiết bị này chứa chất làm lạnh R600a dễ cháy. Tránh các mối nguy hiểm về an toàn bằng cách lắp đặt, xử lý, bảo dưỡng và thải bỏ cẩn thận của thiết bị này.

- Đảm bảo rằng ống dẫn của mạch chất làm lạnh không bị hư hỏng trong quá trình vận chuyển và lắp đặt.
- Rò rỉ chất làm lạnh có thể gây thương tích cho mắt hoặc gây cháy.
- Phòng để lắp đặt thiết bị phải rộng ít nhất $1m^3$ trên 8g chất làm lạnh. Có thể tìm thấy thông tin về lượng chất làm lạnh trong thiết bị trên bảng thông số định mức bên trong thiết bị.
- Nếu bạn không chắc chắn về chất làm lạnh, hãy kiểm tra bảng thông số định mức bên trong ngăn tủ lạnh.
- Sẽ rất nguy hiểm nếu bất kỳ ai không phải là Nhân viên Dịch vụ được Ủy quyền thực hiện bảo dưỡng thiết bị này. Tại Queensland (Úc), Nhân viên Dịch vụ được Ủy quyền PHẢI có Giấy phép Hoạt động Khí đốt đối với chất làm lạnh hydrocarbon để tiến hành bảo dưỡng hoặc sửa chữa liên quan đến việc tháo nắp.
- Giữ các lỗ thông khí trong vỏ thiết bị hoặc trong cấu trúc tích hợp luôn thông thoáng.
- Không sử dụng các thiết bị cơ học hoặc phương tiện khác để đẩy nhanh quá trình rã đông, ngoài những thiết bị được nhà sản xuất khuyến nghị.

CẢNH BÁO CHUNG

Đọc kỹ những điều sau đây để tránh hư hỏng hoặc chấn thương. Điều quan trọng là sử dụng tủ lạnh của bạn một cách an toàn. Kiểm tra các điểm an toàn này trước khi sử dụng tủ lạnh của bạn.

- Thiết bị phải được cắm vào ổ cắm điện chuyên biệt riêng.
- Phích cắm phải dễ tiếp cận khi tủ lạnh được đặt vào vị trí.
- Quan trọng là đầu nguồn điện phải được nối đất đúng cách. Tham khảo ý kiến của thợ điện có trình độ nếu bạn không chắc chắn.
- Không sử dụng dây nối dài hoặc phích cắm bộ chuyển đổi với tủ lạnh này.
- Nếu dây nguồn bị hỏng, nó phải được thay thế bởi nhà sản xuất, đại lý dịch vụ của nhà sản xuất hoặc những người có trình độ tương đương để tránh nguy hiểm.
- Rút phích cắm của thiết bị trước khi vệ sinh và trước khi thay bóng đèn (khi được lắp) để tránh bị điện giật.
- Tuyệt đối không được rút phích cắm của tủ lạnh bằng cách kéo dây điện vì điều này có thể làm hỏng tủ. Nắm chặt phích cắm và rút thẳng ra.
- Chọn vị trí đặt tủ lạnh không quá lạnh. Nhiệt độ xung quanh phòng phải trên 10°C.
- Đặt tủ lạnh ở nơi khô ráo, tránh nơi có độ ẩm hoặc độ ẩm cao.
- Không đặt tủ lạnh ở nơi có sương giá hoặc khu vực không được bảo vệ như nhà để xe hoặc hiên.
- Không cắm tủ lạnh của bạn vào bộ đếm thời gian được trang bị cho đầu nguồn điện.
- Không đặt tủ lạnh dưới ánh nắng trực tiếp, gần bếp, lửa hoặc lò sưởi.
- Không đặt tủ lạnh trên bề mặt không bằng phẳng.
- Không lưu trữ vật liệu dễ cháy trên hoặc bên dưới thiết bị, ví dụ như bình xịt.
- Không lưu trữ các chất dễ nổ như bình xịt có chất đẩy dễ cháy trong thiết bị này.
- Không bao giờ bảo quản đồ uống có ga trong ngăn đá.
- Không bao giờ cố gắng tự sửa chữa tủ lạnh, chỉ sử dụng dịch vụ có trình độ hoặc người được ủy quyền để sửa chữa.
- Không bao giờ sử dụng máy sưởi hoặc máy sấy điện để rã đông tủ đông vì bạn có thể bị điện giật.
- Khi vận chuyển và lắp đặt tủ lạnh, cần cẩn thận để đảm bảo không có bộ phận nào của mạch làm lạnh bị hư hỏng.
- Khi được lắp đặt đúng cách, tủ lạnh của bạn sẽ:
  - Có đủ không gian ở phía sau và bên hông để lưu thông không khí.
  - Căn thẳng hàng với tủ xung quanh.
  - Có cửa tự đóng từ vị trí mở một phần.
- Thiết bị không được sử dụng bởi những người (bao gồm cả trẻ em) bị suy giảm năng lực thể chất, giác quan hoặc tinh thần, hoặc thiếu kinh nghiệm và kiến thức, trừ khi họ được giám sát hoặc hướng dẫn liên quan đến việc sử dụng thiết bị bởi người chịu trách nhiệm về sự an toàn của họ.
- Trẻ em được giám sát không được nghịch thiết bị.

GHI CHÚ: Bạn phải đọc kỹ những cảnh báo này trước khi lắp đặt hoặc sử dụng tủ lạnh. Nếu bạn cần hỗ trợ, hãy liên hệ với Bộ phận chăm sóc khách hàng của bạn. Nhà sản xuất sẽ không chịu trách nhiệm pháp lý nếu các hướng dẫn này hoặc bất kỳ hướng dẫn an toàn nào khác được đưa vào cuốn sách này bị bỏ qua.

THÔNG TIN MÔI TRƯỜNG

Thiết bị này được thiết kế để sử dụng trong hộ gia đình và các ứng dụng tương tự như,

- Các khu vực nhà bếp trong các cửa hàng, văn phòng và các môi trường làm việc khác;
- Hộ trang trại và Không gian sinh hoạt của khách hàng trong khách sạn, nhà nghỉ và các loại môi trường dân cư khác;
- Môi trường phòng ngủ và ăn sáng;
- Các thiết bị phục vụ ăn uống và không bán lẻ tương tự;

2. HƯỚNG DẪN SỬ DỤNG SẢN PHẨM

2.1 Tủ lạnh 4 cửa có tính năng lấy nước và làm đá tự động

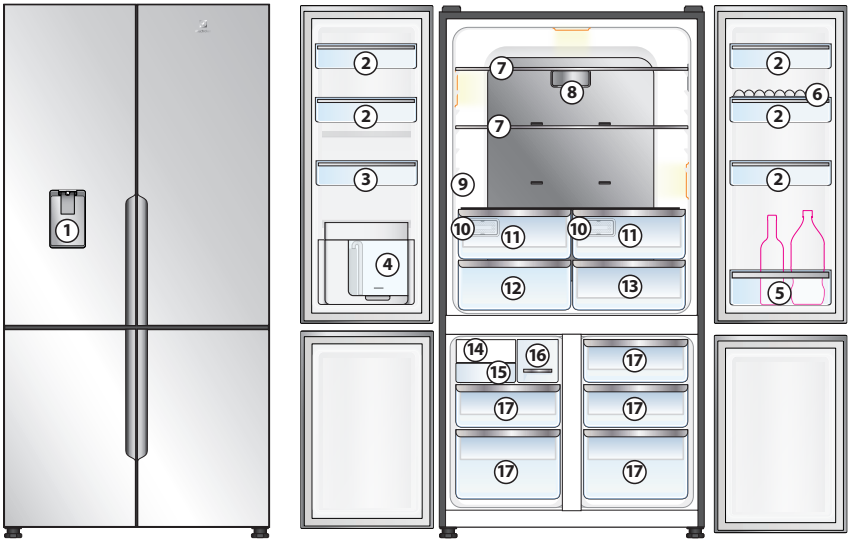

Hình minh họa tủ lạnh EQE5660

1	Cần gạt lấy nước
2	Ngăn cửa*
3	Ngăn cửa nhỏ*
4	Khay chứa nước
5	Ngăn đựng chai
6	Khay đựng trứng
7	Khay kính
8	Bộ lọc khử mùi
9	Bảng điều khiển (Góc bên trái)
10	Bộ lọc chống oxy hóa
11	Ngăn rau lớn giữ độ ẩm tự động
12	Ngăn đông mềm cao cấp
13	Ngăn chứa Deli
14	Bộ làm đá tự động
15	Khay chứa đá nhỏ
16	Ngăn đá tủ đông
17	Ngăn kéo tủ đông

GHI CHÚ:
** Ngăn cửa (3) nhỏ hơn một chút so với ngăn cửa (2), Vị trí phải được cài đặt theo hình trên.*

2.2 Tính năng sản phẩm

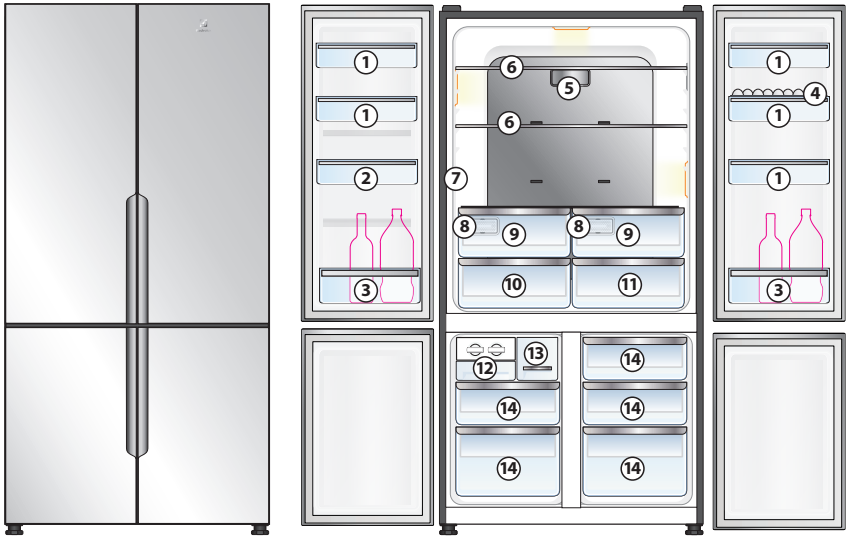

Hình minh họa tủ lạnh EQE5600

1	Ngăn cửa*
2	Ngăn cửa nhỏ*
3	Ngăn đựng chai
4	Khay đựng trứng
5	Bộ lọc khử mùi
6	Khay kính
7	Bảng điều khiển (Góc bên trái)
8	Bộ lọc chống oxy hóa
9	Ngăn rau lớn giữ độ ẩm tự động
10	Ngăn đông mềm cao cấp
11	Ngăn chứa Deli
12	Ngăn đá xoay
13	Ngăn đá tủ đông
14	Ngăn kéo tủ đông

GHI CHÚ:
** Ngăn cửa (2) nhỏ hơn một chút so với ngăn cửa (1),*
Vị trí phải được cài đặt theo hình trên.

3. LẮP ĐẶT TỦ LẠNH

Mở Thùng

MÔI TRƯỜNG
Hầu hết các vật liệu đóng gói đều có thể tái chế. Vui lòng thải bỏ những vật liệu đó thông qua kho tái chế tại địa phương của bạn hoặc bằng cách đặt chúng vào các thùng thu gom thích hợp.

Quan trọng – kiểm tra xem có bất kỳ hư hỏng hoặc dấu vết nào không. Nếu bạn thấy tủ lạnh bị hư hỏng hoặc có dấu vết, bạn phải báo cáo trong vòng 7 ngày nếu bạn muốn yêu cầu bồi thường thiệt hại/dấu hiệu theo bảo hành của nhà sản xuất. Điều này không ảnh hưởng đến các quyền theo luật định của bạn.

Làm sạch kỹ tủ lạnh của bạn theo hướng dẫn trong phần “Vệ sinh” và lau sạch mọi bụi bẩn tích tụ trong quá trình vận chuyển.

Định vị tủ lạnh

THẬN TRỌNG
Không được để các dụng cụ dễ cháy nổ (như bình xịt côn trùng) gần tủ lạnh vì có thể gây cháy nổ và hư hỏng thiệt bị.

Không đặt tủ lạnh ở nơi quá lạnh hoặc không được bảo vệ, ví dụ như trong nhà để xe hoặc trên hiên. Nhiệt độ xung quanh phải trên 10°C.

Đặt tủ lạnh ở nơi khô ráo, tránh nơi có độ ẩm cao.

Đảm bảo tủ lạnh được đặt trên một bề mặt bằng phẳng.

Lắp đặt tủ lạnh của bạn

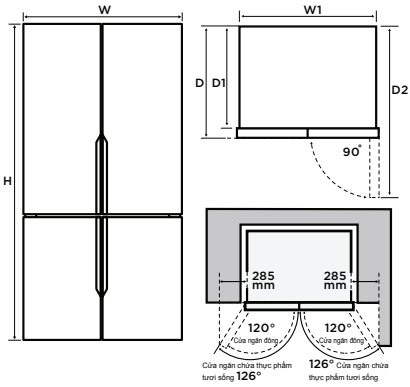

Kích thước sản phẩm		
Tổng chiều rộng (W)	mm	896
Tổng chiều sâu (D)	mm	726
Chiều cao tối đa (H)	mm	1795
Chiều rộng tủ (W1)	mm	890
Độ sâu tủ (D1)	mm	640
Chiều sâu cửa mở 90° (D2)	mm	1104

Khi được đặt ở khu vực góc, khoảng cách ít nhất 285mm ở phía bản lề sẽ cho phép các cửa mở đủ để có thể tháo các thùng và giá.

Diện tích lắp đặt kiến nghị:

Diện tích lắp đặt tối thiểu

Tủ lạnh phải cách tường tối thiểu 10mm

Khoảng cách mở cửa tối thiểu (RxSxC):
900mm x 649mm x 1800mm

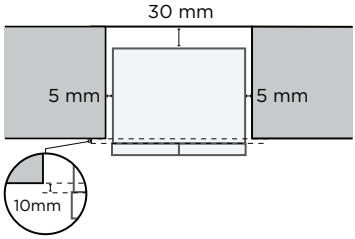

Mặt trước thân tủ lạnh thẳng hàng với tủ bếp

Khoảng hở hai bên phải là 25 mm ở hai bên thân tủ lạnh, để cửa tủ lạnh có vị trí hài hòa với tủ bếp.

Khoảng cách mở cửa tối thiểu (RxSxC):
940mm x 659mm x 1800mm

Lưu ý : Gioăng được cung cấp để hỗ trợ

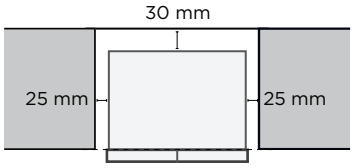

Cửa tủ lạnh ngang bằng với tủ

Khoảng hở hai bên phải là 90 mm ở mỗi bên của tủ lạnh, để vị trí cửa tủ lạnh ngang bằng với tủ bếp.

Khoảng cách mở cửa tối thiểu (RxSxC):
1070mm x 741mm x 1800m

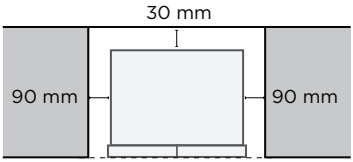

Ghi chú: Khoảng cách trên tất cả 5 mm.

1. Lăn tủ lạnh vào vị trí.
   Các con lăn được thiết kế chỉ để di chuyển tiến hoặc lùi. Chúng không phải bánh xe. Di chuyển tủ lạnh sang một bên có thể làm hỏng sàn nhà và các trục lăn.
   Trước khi di chuyển tủ lạnh, hãy đảm bảo đai ốc điều chỉnh độ cao và chân ổn định đã được quấn hoàn toàn khỏi sàn.
2. Xoay đai ốc lớn điều chỉnh độ cao bên dưới bản lề cửa xuống cho đến khi tủ lạnh nghiêng về phía sau 10 mm (xem sơ đồ).

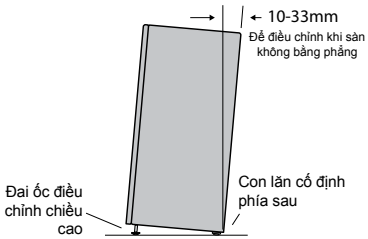

3. Xoay đai ốc điều chỉnh độ cao lớn ở mặt tay cầm xuống cho đến khi tủ lạnh ở mức cân bằng và ổn định. Nếu bạn gặp khó khăn khi vặn đai ốc hoặc chân điều chỉnh độ cao xuống, hãy nhờ ai đó nghiêng tủ lạnh ra sau để bạn tiếp cận dễ dàng hơn.

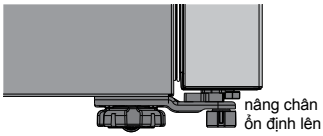

4. Kiểm tra độ thẳng hàng của tủ lạnh với các tủ xung quanh xem có bằng không. Bạn có thể điều chỉnh mức như chi tiết trong bước 2 và 3.

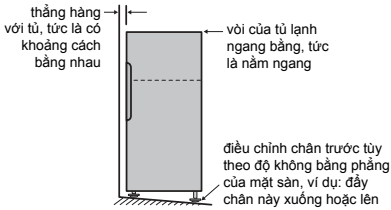

5. Nếu bạn thấy tủ lạnh lắc từ góc này sang góc khác, điều đó có nghĩa là sàn nhà của bạn không bằng phẳng. Tìm một miếng nhựa hoặc bìa cứng, v.v. và đóng gói chắc chắn dưới con lăn.
6. Bây giờ bạn có thể cần tinh chỉnh cài đặt bằng cách lặp lại các bước 3, 4 và 5.
7. Khi bạn đặt thiết bị ở vị trí cuối cùng, thiết bị cần được ổn định. Xoay chân ổn định dưới bản lề cửa xuống sàn cho đến khi nó chỉ tiếp xúc với sàn. Nhấc mặt trước của thiết bị lên để nhấc vật nặng ra khỏi chân ổn định, sau đó xoay thiết bị thêm nửa vòng để đảm bảo tiếp xúc chắc chắn với sàn. Xoay đai ốc điều chỉnh độ cao lớn trở lại để đảm bảo toàn bộ trọng lượng hiện nằm trên chân ổn định phía trước. Xoay đai ốc điều chỉnh độ cao lớn trở lại để đảm bảo toàn bộ trọng lượng hiện nằm trên chân ổn định phía trước.

Khung cảnh phía trước

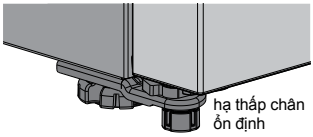

8. Lặp lại bước 7 cho chân ổn định ở phía tay cầm. Bất cứ khi nào bạn cần di chuyển thiết bị, hãy đảm bảo cuộn chân lại để thiết bị có thể lăn tự do và đảm bảo đặt lại thiết bị khi lắp đặt lại.
9. Cắm thẳng tủ lạnh của bạn vào ổ cắm điện riêng và không bao giờ sử dụng bộ chuyển đổi đôi. Nếu bạn cần lăn tủ lạnh để đến chỗ phích cắm, hãy nhớ nâng chân ổn định lên trước.
10. Trước khi cho bất kỳ thực phẩm nào vào tủ lạnh, bạn nên bật tủ lạnh trong 2 hoặc 3 giờ để kiểm tra xem tủ có chạy bình thường không.

Mở cửa

Tủ lạnh của bạn nên được bố trí sao cho dễ dàng tiếp cận quầy khi lấy thực phẩm ra. Để sử dụng tốt nhất ngăn kéo tủ lạnh và giỏ ngăn đá, tủ lạnh phải ở vị trí mà cả hai có thể được mở hoàn toàn.

CẢNH BÁO
Đèn LED
Thiết bị của bạn được trang bị đèn LED tuổi thọ cao. Trong trường hợp không chắc là đèn LED bị hỏng, thì đèn LED nên được đại lý dịch vụ bảo dưỡng để tránh nguy hiểm về an toàn. Tham khảo trang bảo hành để biết chi tiết liên hệ.

Cân chỉnh tủ lạnh (Nếu cần)

- Tất cả bốn góc của tủ phải đặt chắc chắn trên sàn nhà
- Mặt trước nên được nâng lên một chút để đảm bảo rằng cửa đóng và niêm phong đúng cách.
- Các cửa phải thẳng hàng với nhau và ở cùng mức.

Hầu hết các điều kiện này có thể được đáp ứng bằng cách nâng hoặc hạ các con lăn phía trước có thể điều chỉnh.

Để cân bằng tủ bằng các con lăn phía trước:

1. Hạ chân chống xuống cho đến khi cả hai chân chạm sàn. Sử dụng kìm để
   Để nâng cao: xoay chân theo chiều kim đồng hồ.
   Để hạ xuống: xoay chân ngược chiều kim đồng hồ.

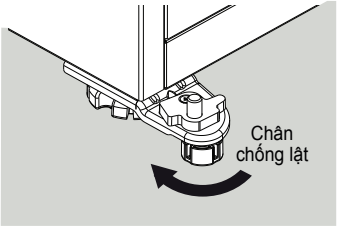

2. Đảm bảo rằng cả hai cửa đều không bị ràng buộc với các vòng đệm của chúng chạm vào tủ ở cả bốn phía và tủ đó ổn định.

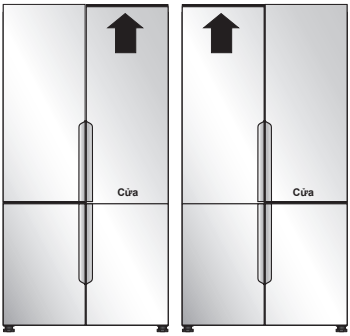

Thanh lật

Điều chỉnh Thanh chân vịt để kết nối đúng với thanh dẫn hướng chân vịt bằng cách đảm bảo thanh chân vịt được gấp lại và vuông góc với cửa thực phẩm tươi sống. Nếu thanh dẫn hướng không ở đúng vị trí, nó có thể ngăn cửa đóng hoàn toàn.

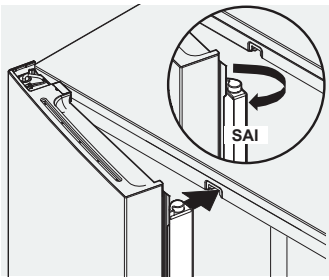

Lắp đặt bộ loc khử mùi

1. Tháo nắp bộ lọc khử mùi.
2. Tháo túi nhựa ra khỏi bộ lọc khử mùi và đặt bộ lọc khử mùi vào nắp bộ lọc khử mùi.
3. Sau đó đậy nắp bộ lọc khử mùi lại

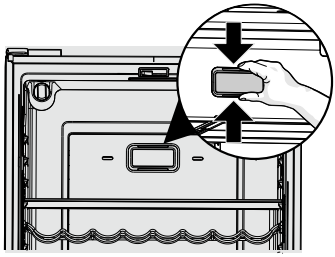

NutriPlus ™ (Bộ lọc chống oxy hóa)

Lắp hộp lọc

Bộ lọc chống oxy hóa được đặt trong ngăn tủ. Để có thể sử dụng bộ lọc này, cần lắp bộ lọc vào tủ như hướng dẫn bên dưới:

1. Tháo bọc nhựa.
2. Chèn gói vào ngăn chứa ở mặt bên của ngăn đựng rau củ.

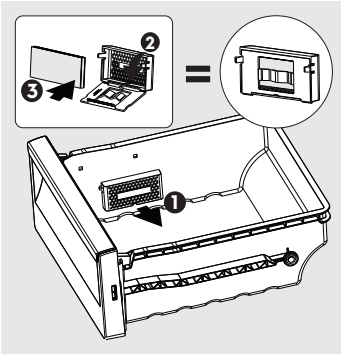

4. KIỂM SOÁT NHIỆT ĐỘ

Các trang sau giải thích các chức năng khác nhau của giao diện người dùng để giúp bạn hiểu rõ hơn về cách tận dụng tối đa chiếc tủ lạnh mới của mình.

QUAN TRỌNG

GHI CHÚ: Khi bạn đặt nhiệt độ, bạn đặt nhiệt độ trung bình cho toàn bộ tủ lạnh. Đảm bảo rằng bạn chỉ thực hiện những điều chỉnh nhỏ và chờ ít nhất 24 giờ để xem nhiệt độ mới có đúng với mong muốn của bạn hay không.

Kiểm tra độ mềm của kem là một dấu hiệu tốt cho thấy tủ đông của bạn có nhiệt độ phù hợp, trong khi kiểm tra nhiệt độ của nước giữ trong tủ lạnh là một cách tốt để kiểm tra nhiệt độ của ngăn đựng thực phẩm.

Nhiệt độ bên trong mỗi ngăn có thể khác nhau, tùy thuộc vào lượng thực phẩm bạn bảo quản và nơi bạn đặt thực phẩm.

Nhiệt độ phòng cao hay thấp cũng có thể ảnh hưởng đến nhiệt độ thực tế bên trong tủ lạnh.

4.1 Các chức năng của bản điều khiển

EQE5660

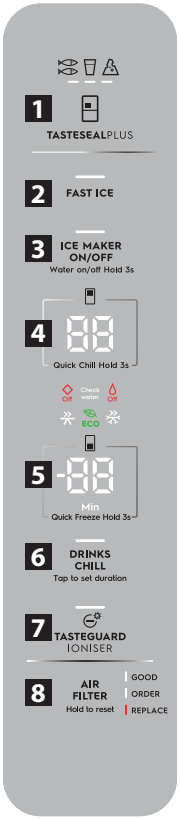

EQE5600

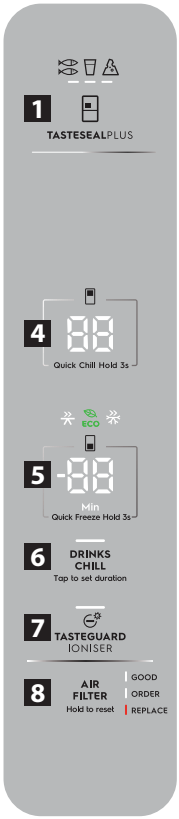

1 Điều chỉnh ngăn đông mềm

2 Làm đá nhanh

3 Điều khiển ngăn làm đá tự động

4 Điều chỉnh nhiệt độ tủ lạnh

5 Điều chỉnh nhiệt độ ngăn đông

6 Nút Làm lạnh Đồ uống

7 Điều khiển Ion khử mùi Tasteguard

8 Nút thiết lập lại bộ lọc khử mùi

Hàm số	Biểu tượng	Hoạt động (tùy thuộc vào kiểu máy)
1 Điều chỉnh ngăn đông mềm	Thịt cá TASTESEALPLUS Chế độ đồ uống lạnh TASTESEALPLUS Chế độ đồ ăn nhanh TASTESEALPLUS	Chạm vào nút TasteSealPlus, Kích hoạt chế độ tiếp theo. Đèn LED của chế độ tiếp theo sáng lên. TasteSeal plus có 3 chế độ nhiệt độ: -2°C Thịt & Cá Đồ uống lạnh -0°C Đồ ăn nhanh 3°C
2 Làm đá nhanh	FAST ICE	Chạm vào nút Đá nhanh. Khi Đá nhanh BẬT, đèn báo Làm đá nhanh sẽ sáng lên. Khi Đá nhanh TẮT, đèn báo Đá nhanh sẽ tắt. Khi bật Fast Ice, máy nén sẽ chạy liên tục trong 24 giờ. Tủ lạnh và ngăn TasteSealPlus tiếp tục chạy ở nhiệt độ cài đặt. Tự động làm đá nhanh tắt ở một trong hai điều kiện sau: - Đã hết 24 giờ - Nhiệt độ ngăn đông được điều chỉnh thành -23 °C *GHI CHÚ:* **Không thể kích hoạt Quick Freeze và Fast Ice cùng lúc. Nếu Làm đông nhanh BẬT, không thể kích hoạt Làm đá nhanh.* ***Khi ngăn chứa đá đầy - Đá nhanh sẽ không bị tắt. Bộ làm đá tự động sẽ ngừng hoạt động nhưng Bộ làm đá nhanh 12 giờ sẽ tiếp tục đếm ngược.* *Bất cứ khi nào mức thùng đá giảm xuống, Máy làm đá tự động sẽ tiếp tục làm đá với tính năng Làm đá nhanh được bật.*

Hàm số	Biểu tượng	Hoạt động (tùy thuộc vào kiểu máy)
3 Điều khiển ngăn làm đá tự động	 Chỉ báo cảnh báo tắt băng Chỉ báo tắt nước 	Chạm vào nút bật/tắt Máy làm đá. Khi Bộ làm đá BẬT, đèn LED của nút sẽ sáng lên. Khi bộ làm đá TẮT, đèn LED của nút sẽ tắt. Cảnh báo Ice Off sáng lên. Nhấn và giữ nút Bật/Tắt Bộ làm đá trong 3 giây. Khi nó BẬT, nước có thể được phân phối khi nhấn vào thanh gạt phân phối nước. Khi nó TẮT, nước không thể được phân phối khi nhấn thanh phân phối nước.
4 Điều chỉnh nhiệt độ tủ lạnh		Chạm vào màn hình để chuyển qua phạm vi nhiệt độ được Tủ lạnh hỗ trợ. Từ 7°C Đến 1°C Mặc định 4°C
5 Điều chỉnh nhiệt độ ngăn đông	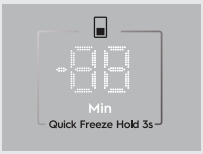	Chạm vào màn hình để điều chỉnh nhiệt độ ngăn đông. Từ -14°C Đến -23°C Mặc định -18°C
6 Nút Làm lạnh Đồ uống	Chỉ báo hẹn giờ làm lạnh đồ uống 	Bộ hẹn giờ làm lạnh đồ uống được sử dụng để làm lạnh nhanh một chai bên trong ngăn đá và cảnh báo người dùng khi hết. Chạm vào nút Làm lạnh đồ uống, màn hình Tủ đông hiển thị 20, "Tối thiểu" và đèn LED làm lạnh đồ uống bật sáng. Tùy chọn hẹn giờ là từ 20 phút và người dùng có thể thêm thời gian trong khoảng thời gian 5 phút tối đa 45 phút. Sau khi nó bắt đầu, bộ hẹn giờ sẽ hiển thị đếm ngược từng phút. *GHI CHÚ:* *Khi đang đếm ngược thời gian, không thể điều chỉnh thời lượng của hẹn giờ. Người dùng sẽ cần tắt chức năng Làm lạnh đồ uống và kích hoạt lại chức năng Làm lạnh đồ uống để đặt hẹn giờ mới.*

Hàm số	Biểu tượng	Hoạt động (tùy thuộc vào kiểu máy)
7 Điều khiển Ion khử mùi Tasteguard	TASTEGUARD IONISER	Chạm vào nút Ioniser. Khi Bộ tạo ion BẬT, đèn LED của nút Bộ tạo ion sẽ bật. Khi Bộ tạo ion TẮT, đèn LED của nút Bộ tạo ion sẽ tắt. Ionizer là thiết bị được thiết kế để giảm mức độ vi khuẩn bên trong tủ lạnh giúp kéo dài thời gian bảo quản thực phẩm. Nó tạo ra ôzôn trong khi vận hành và điều quan trọng là phải giữ lượng ôzôn nằm trong giới hạn an toàn (0,1ppm), do đó hoạt động của máy ion hóa sẽ tuân theo logic BẬT/TẮT đơn giản. Máy ion hóa không ảnh hưởng đến trạng thái ECO. Chỉ báo ECO sẽ vẫn sáng khi Bật Máy tạo ion. Vô hiệu hóa Ioniser: - Bằng cách nhấn vào nút Ioniser để TẮT - Khi chế độ Holiday được thiết lập. *GHI CHÚ* *- Máy tạo ion sẽ ngừng hoạt động nếu cửa được mở và tự động khởi động lại khi cửa được đóng lại.* *- Bộ tạo ion sẽ ngừng hoạt động trong quá trình xả đá và tự động khởi động lại sau khi quá trình xả đá kết thúc.*
8 Nút thiết lập lại bộ lọc khử mùi	AIR FILTER Hold to reset GOOD ORDER REPLACE	Đèn LED "TỐT" sáng có nghĩa là bộ lọc đã được sử dụng trong 0-4 tháng. Đèn LED “ĐẶT HÀNG” bật sáng nghĩa là máy lọc đã sử dụng 5 tháng, để nhắc nhở người dùng đặt mua máy lọc nước mới. Đèn LED "REPLACE" sáng có nghĩa là bộ lọc đã được sử dụng trong 6 tháng, Nhấn và giữ Bộ lọc không khí trong 3 giây để đặt lại. Trạng thái sẽ đặt lại thành TỐT.
Điều khiển làm lạnh nhanh	Quick Chill Hold 3s Chỉ báo làm lạnh nhanh	Nhấn và giữ các chữ số của Tủ lạnh trong 3 giây. Chạm vào chữ số Tủ lạnh để điều chỉnh nhiệt độ. Khi làm lạnh nhanh BẬT, đèn báo Làm lạnh nhanh sáng lên. Khi TẮT chế độ làm lạnh nhanh, đèn báo Làm lạnh nhanh tắt. Sử dụng chức năng Làm lạnh nhanh khi bạn cho một lượng lớn thực phẩm vào ngăn tủ lạnh sau khi đi chợ hoặc để làm lạnh nhanh đồ uống của bạn. Khi bật chế độ Làm lạnh nhanh, luồng khí lạnh luân chuyển vào tủ lạnh để tạm thời giảm nhiệt độ xuống 1°C trong 6 giờ, Ngăn đông tiếp tục chạy ở nhiệt độ cài đặt. Tự động làm lạnh nhanh tắt ở một trong hai điều kiện sau: - 6 giờ đã trôi qua - Nhiệt độ tủ lạnh được điều chỉnh

Hàm số	Biểu tượng	Hoạt động (tùy thuộc vào kiểu máy)
Kiểm soát cấp đông nhanh	 Kiểm soát cấp đông nhanh 	Nhấn và giữ các chữ số của Freezer trong 3 giây. Chạm vào các chữ số Freezer để điều chỉnh nhiệt độ. Khi BẬT làm đông nhanh, đèn báo Quick Freeze sáng lên. Khi TẮT cấp đông nhanh, đèn báo Làm đông nhanh tắt. Sử dụng chức năng Làm đông nhanh khi bạn cho một lượng lớn thực phẩm vào ngăn đông lạnh sau khi đi chợ để tăng tốc quá trình làm đông . Khi bật chức năng Làm đông nhanh, máy nén sẽ chạy liên tục trong 6 giờ. Ngăn lạnh tiếp tục chạy ở nhiệt độ cài đặt. Tự động đóng băng nhanh tắt ở một trong hai điều kiện sau: - 6 giờ đã trôi qua - Nhiệt độ ngăn đông được điều chỉnh thành -23°C *GHI CHÚ: Không thể kích hoạt Quick Freeze và Fast Ice cùng lúc. Nếu Đá nhanh đang BẬT, thì không thể kích hoạt Làm đông nhanh.*

4.2 Các cảnh báo và chuông báo

Chuông cửa

Khi bất kỳ cửa nào được mở trong 2 phút.
Báo thức sẽ phát ra âm thanh và tắt cả các đèn LED hiện đang bật.

- Báo thức được tắt bằng cách đóng cửa hoặc đặt lại bộ đếm ngược bằng cách nhấn bất kỳ phím nào trên bảng điều khiển.

Cảnh báo nhiệt độ cao

Trong trường hợp điều kiện nhiệt độ cao, cảnh báo âm thanh sẽ được phát cứ sau 10 giây cho đến khi cảnh báo được xác nhận.

Báo động bằng cách nhấn bất kỳ phím nào trên bảng điều khiển.

Hiển thị và nhấp nháy “HI” trong màn hình ngăn tương ứng, tùy thuộc vào điều kiện nhiệt độ cao.

Chỉ báo nhiệt độ cao trên màn hình tủ lạnh

Chỉ báo nhiệt độ cao trên màn hình tủ đông

Chỉ báo ECO

Đèn báo chế độ Eco sẽ tự động sáng đến 100% khi các ngăn tủ lạnh và tủ đông được đặt trong một phạm vi nhiệt độ.

Phạm vi tủ lạnh: 4°C đến 7°C

Dòng tủ đông: -18°C đến -14°C

Chọn bất kỳ chế độ nào trong số này: Quick Freeze, Quick Chill, Fast Ice hoặc Drinks Chill sẽ tắt chế độ Eco, biểu tượng Eco sẽ mờ đi.

Cảnh báo và Đặt lại bộ lọc khử mùi

Cảnh báo bộ lọc khử mùi cảnh báo người dùng rằng Bộ lọc không khí phải được thay càng sớm càng tốt.

Khi sử dụng quá 6 tháng, đèn LED “replace” yêu cầu thay thế bộ lọc sẽ hiển thị.

Ghi chú:
1. Người dùng có thể thiết lập lại cảnh báo thay bộ lọc ngay cả khi cảnh báo không hiển thị. Âm báo sẽ phát khi thiết lập hoàn tất.
2. Bộ lọc LED_air vẫn hiển thị trong chế độ ngủ, trừ khi đóng cửa.

Kiểm tra cảnh báo nước (*Chỉ kiểu máy EQE5660)*

Khi ngăn chứa nước trống, Bộ làm đá sẽ cảm thấy thiếu nước ấm cấp vào và sẽ tắt bộ làm đá.

Trình kích hoạt này cũng sẽ hiển thị "Kiểm tra cảnh báo nước". Mục đích là để người dùng cảnh báo rằng Máy làm đá đã bị tắt do thiếu nước.

Cảnh báo có thể được loại bỏ bằng cách bật Máy làm đá. Nếu không phát hiện thấy có nước nữa, bộ làm đá sẽ lại bị tắt và cảnh báo kiểm tra nước sẽ bật.

Mã lỗi

Cả hai màn hình Tủ lạnh & Tủ đông đều được sử dụng để thông báo các sự cố bằng mã.

Khi mã lỗi được hiển thị trong màn hình số, thiết bị cần được chú ý bảo dưỡng.

"Er" xuất hiện trên màn hình Tủ lạnh

Các mã lỗi khác nhau trên màn hình Tủ đông

Bảng mã lỗi	
Lỗi giao tiếp	**CE**
Khoang FZ NTC	T1
Thiết bị bay hơi FZ NTC	T2
Khoang FF NTC	T3
NTC khoang thứ ba	T5
Máy làm đá FZ NTC	T8

5. TÍNH NĂNG LƯU TRỮ

Khay kính

Để tháo các giá, nhẹ nhàng kéo chúng về phía trước cho đến khi giá ra khỏi thanh dẫn giá.

Để trả lại kệ, đảm bảo rằng không có vật gì phía sau có thể cản trở chuyển động. Nhẹ nhàng đẩy giá vào trong tủ và đặt trở lại vị trí cũ.

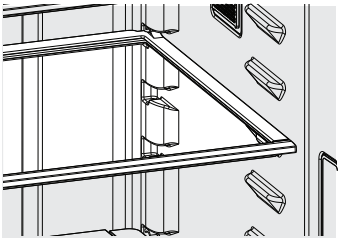

THẬN TRỌNG

Để tránh thương tích cá nhân hoặc hư hỏng tài sản, hãy xử lý các kệ kính cường lực một cách cẩn thận. Kệ có thể bị vỡ đột ngột nếu bị sứt mẻ, trầy xước hoặc tiếp xúc với sự thay đổi nhiệt độ đột ngột. Để các kệ thủy tinh ổn định ở nhiệt độ phòng trước khi vệ sinh. Không rửa trong máy rửa chén.

Ngăn kéo

Tủ lạnh của bạn bao gồm nhiều ngăn kéo lưu trữ.

Ngăn kiểm soát độ ẩm tự động

Ngăn kiểm soát độ ẩm tự động được thiết kế để lưu trữ trái cây, rau và các thực phẩm tươi sống khác tươi ngon lâu hơn. Ngăn này được trang bị bộ kiểm soát độ ẩm tự động (với màn có thể thay thế) phía sau ngăn kiểm soát độ ẩm tự động.

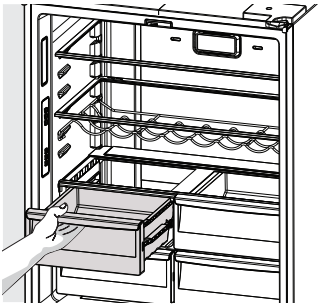

Mở Ngăn kéo Crisper

Để tháo màng kiểm soát độ ẩm tự động:

1. Tiếp cận mặt sau của nắp kiểm soát độ ẩm.
2. Mở nắp đậy màn ẩm.
3. Kéo nắp về phía sau tủ và tháo ra.
4. Thay màng ẩm.
5. Thay nắp bằng cách đảo ngược các bước trên.

Lặp lại cho cả hai ngăn kiểm soát độ ẩm.

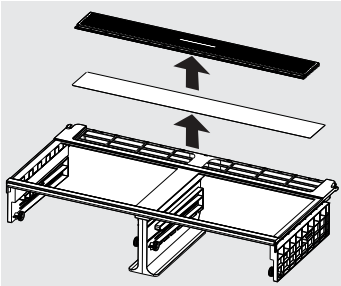

Tháo màng kiểm soát độ ẩm tự động

QUAN TRỌNG

Không bắt buộc phải thay màng lọc Độ ẩm tự động trừ khi màng này bị hỏng hoặc hỏng. Nếu màng bị bẩn, có thể rửa sạch bằng xà phòng và nước. Đảm bảo màng khô trước khi đặt lại vào ngăn đựng rau. Vui lòng liên hệ với nhà cung cấp dịch vụ của chúng tôi khi cần thay thế màng AHC của bạn.

Để tháo ngăn đựng rau củ để làm sạch:

1. Kéo ngăn kéo ra cho đến khi nó dừng lại.
2. Nâng nhẹ mặt trước và tháo ngăn kéo.

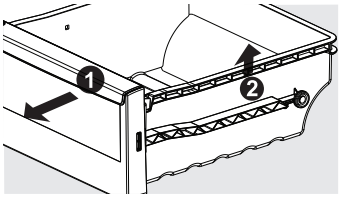

Loại bỏ Crisper

Cửa

Thùng lưu trữ

Cửa ngăn thực phẩm tươi sống của bạn sử dụng hệ thống các ngăn chứa mô-đun. Tất cả các thùng này đều có thể tháo rời để vệ sinh dễ dàng. Thùng có thể được điều chỉnh theo nhu cầu của bạn.

Thùng cửa là lý tưởng để lưu trữ lọ, chai, lon và hộp đựng đồ uống lớn. Chúng cũng cho phép lựa chọn nhanh các mục được sử dụng thường xuyên.

Để tháo ngăn cửa:

1. nâng và mở khóa từ vấu để loại bỏ.
2. Thay thế bằng cách nhấc lên và đẩy thùng xuống cho đến khi vấu đỡ khóa thùng vào đúng vị trí.

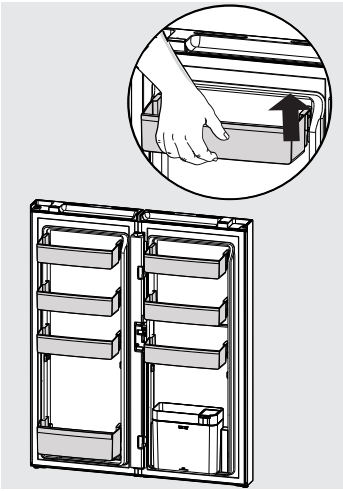

Tháo thùng cửa

Bồn nước

THẬN TRỌNG

TRƯỚC KHI BỎ; để làm cạn nước trong bể.

Để tháo ngăn chứa nước và tháo rời các bộ phận có thể vệ sinh, hãy làm theo các bước sau:

1. Cuộc sống lên bể chứa nước cho đến khi giải phóng khóa.
2. Kéo két nước về phía trước.

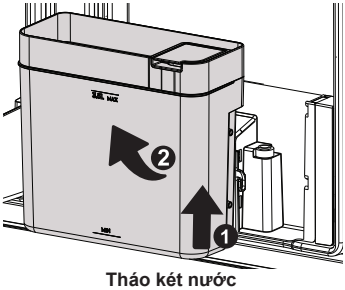

Tháo két nước

3. Tháo nắp ngăn chứa nước (1), ống ngăn chứa nước (2) và bộ lọc (3).

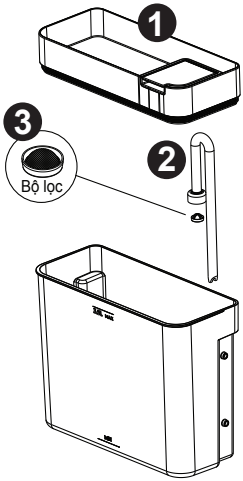

Bình nước tháo rời

Làm ngược bước để lắp ngăn chứa nước và trở về vị trí của nó. Làm ngược bước để lắp ngăn chứa nước và trở về vị trí của nó.

GHI CHÚ: Bồn nước chỉ dành cho model EQE5660

Bảo quản tủ đông

Để tháo ngăn kéo tủ đông:

Tất cả các ngăn tủ đông đều có thể tháo rời.

1. Mở hoàn toàn các cửa để tiếp cận ngăn kéo.
2. Kéo ngăn kéo đến nút chặn. Nâng lên và kéo để tháo nó ra khỏi ngăn chứa.
3. Đảo ngược các bước để cài đặt lại ngăn kéo.

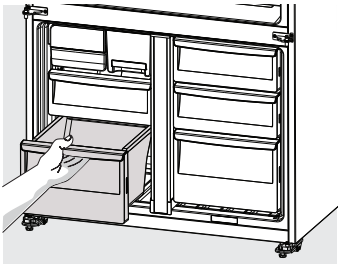

Tháo Ngăn Đông

Thùng đựng đá xoay và phục vụ *(chỉ kiểu máy EQE5660)* **:**

1. Trước khi sử dụng lần đầu, hãy làm sạch khay đá.
2. Đổ đầy nước đến mức tối đa của khay đá.

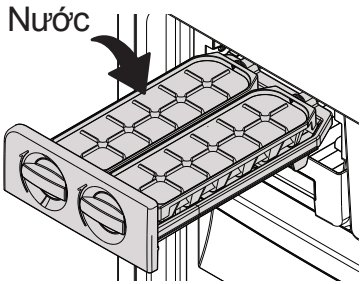

3. Đặt khay đá vào vị trí.
4. Xoay vòng xoắn đá theo chiều kim đồng hồ để lấy đá ra khỏi khay đá.

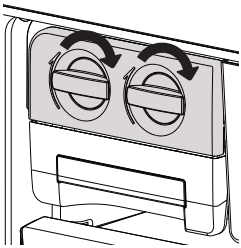

6. MÁY LÀM ĐÁ & NƯỚC TỰ ĐỘNG

GHI CHÚ: Đá & nước tự động chỉ dành cho model EQE5660

Sử dụng máy làm đá sau khi lắp đặt

Chức năng làm đá tự động bơm nước từ ngăn chứa nước nằm trong tủ lạnh và cấp nước vào bộ làm đá tự động trong ngăn đá.

Sau đó, đá sẽ được thả vào thùng chứa đá nằm bên dưới máy làm đá. Nếu ngăn chứa nước trống hoặc thấp hơn mực nước, bộ làm đá sẽ tự động tắt sau 3 lần bơm nước từ ngăn chứa. Chỉ báo bộ tạo đá trên giao diện người dùng hiển thị trạng thái hoạt động của bộ tạo đá (Tham khảo hướng dẫn điều khiển).

Đổ đầy bình chứa nước

- Bể chứa nước phải được đặt trên cửa.
- Đổ nước uống được qua phễu ở nắp ngăn chứa nước.
- Đảm bảo rằng bộ làm đá và bộ định lượng đã được bật.

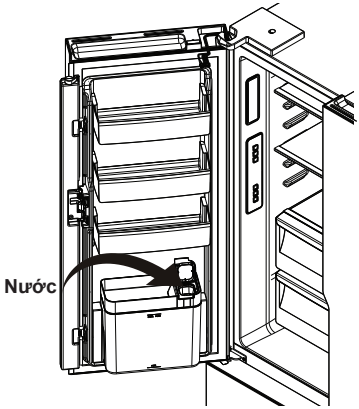

Mồi nước cho tủ lạnh

1. Ấn giữ cần gạt lấy nước để nước được bơm vào tủ lạnh.
2. Giữ cốc nước tại cần gạt cho tới khi có nước chảy ra. Quá trình này có tốn một phút rưỡi.
3. Ấn giữ tiếp tục cần gạt nước trong bốn phút để nước được bơm đầy trong tủ lạnh và loại bỏ bụi bẩn (Nếu có).

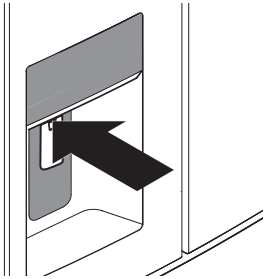

Ghi chú: Bộ phận lấy nước được tích hợp một thiết bị ngắt nước tự động sau ba phút sử dụng. Để tiếp tục lấy nước, chỉ cần ấn lại cần gạt lấy nước.
Chỉ 750 ml nước đầu tiên được làm lạnh.

THẬN TRỌNG
Không đổ bất kỳ thứ gì khác ngoài nước sạch (nước lọc hoặc nước khoáng) vào ngăn chứa nước. Nước ngọt, nước trái cây, trà hoặc nước nóng, v.v., có thể làm hỏng máy làm đá tự động của bạn. Bình chứa nước có thể chịu được nhiệt độ nước tối đa là 60°C

Mẹo và thông tin hữu ích
Tháo và vệ sinh thùng đá và ngăn chứa nước mỗi tháng một lần, đổ bỏ nước và đá không sử dụng. Điều này sẽ đảm bảo đá tươi và hoạt động trơn tru của máy làm đá của bạn.
Đảm bảo tủ lạnh của bạn bằng phẳng để tránh làm đá viên không đều.

Vận hành & chăm sóc máy làm đá

Sau khi tủ lạnh được lắp đặt đúng cách và đã làm mát trong vài giờ, bộ làm đá có thể sản xuất đá trong vòng 24 giờ. Máy làm đá sẽ đổ đầy ngăn chứa đá từ phía sau. Bạn phải đổ một ít đá để đẩy đá vào thùng. Điều này sẽ cho phép thùng đầy hoàn toàn.

Máy làm đá và Dung tích thùng chứa

Máy làm đá này sẽ sản xuất 1 kg đá mỗi 24 giờ. Thùng đá sẽ chứa khoảng 1,8 kg đá.

Bật và tắt máy làm đá

QUAN TRỌNG
Máy làm đá của bạn được bật tại nhà máy để nó có thể hoạt động ngay khi bạn lắp đặt tủ lạnh. Nếu bạn không đổ đầy ngăn chứa nước, hãy đặt tính năng Bật/Tắt của bộ làm đá thành Tắt; nếu không, van cấp nước của máy làm đá có thể phát ra tiếng kêu lớn khi nó cố gắng hoạt động mà không có nước.

Việc sản xuất đá được điều khiển bằng tính năng Bật/Tắt của máy làm đá trên bảng điều khiển. Nhấn nút Bật/Tắt sẽ bật và tắt bộ làm đá.

Ghi chú: Máy làm đá cũng được tích hợp một tay tín hiệu bằng nhựa giúp tự động ngừng sản xuất đá khi ngăn chứa đá đầy. Không được sử dụng nhánh tín hiệu này để dừng bộ làm đá theo cách thủ công.

QUAN TRỌNG
Tắt bộ làm đá chỉ cần tắt chức năng làm đá. Bạn vẫn có thể cấp phát đá hiện có và bạn vẫn có thể cấp phát nước.

Mẹo làm đá/phân phối đá

- Những âm thanh sau đây là bình thường khi máy làm đá đang hoạt động:
  - Động cơ chạy
  - Đá rơi vào thùng đá
  - Đóng mở van nước
  - Nước sinh hoạt
- Nếu bạn cần một lượng lớn đá cùng một lúc, tốt nhất là lấy đá viên trực tiếp từ hộc đựng đá.
- Đá viên được bảo quản quá lâu có thể có hương vị lạ. Làm trống ngăn chứa đá như đã giải thích phần 7.4
- Khi phân phối đá viên, thông thường có một lượng nhỏ các mảnh nhỏ dọc theo cùng với toàn bộ đá viên.
- Để tránh bị bắn tung tóe, hãy cho đá vào bình chứa của bạn trước khi thêm chất lỏng.
- Việc đá đầy đến trên cùng của ngăn chứa đá là điều bình thường.

THẬN TRỌNG
Nếu nguồn nước cung cấp cho tủ lạnh của bạn bị làm mềm, hãy đảm bảo rằng chất làm mềm được bảo dưỡng đúng cách. Hóa chất từ bộ làm mềm nước có thể làm hỏng bộ làm đá.

Vệ sinh máy làm đá

Thường xuyên vệ sinh bộ làm đá và thùng đựng đá, đặc biệt là trước khi đi nghỉ hoặc di chuyển.

1. Tắt máy làm đá.
2. Tháo ngăn đựng đá bằng cách kéo thẳng ra ngoài.
3. Làm trống và cẩn thận làm sạch ngăn đựng đá bằng chất tẩy rửa nhẹ. Không sử dụng chất tẩy rửa mạnh hoặc có khả năng gây ăn mòn. Không đặt trong máy rửa chén. Rửa sạch bằng nước sạch.
4. Để ngăn đá khô hoàn toàn trước khi đặt trở lại ngăn đá.
5. Đặt thùng đá trở lại vị trí. Bật máy làm đá.

7. THÔNG TIN CHUNG

7.1 Vệ sinh tủ lạnh

CẢNH BÁO
TRƯỚC KHI LÀM SẠCH: Tắt tủ lạnh tại ổ cắm điện và rút dây điện để tránh nguy cơ bị điện giật.

Thép không gỉ:

Tủ lạnh bằng thép không gỉ của bạn được sản xuất từ thép không gỉ chống mài mòn. Loại thép không gỉ này có lớp phủ bảo vệ tiên tiến đặc biệt giúp dễ dàng loại bỏ các dấu vết như dấu vân tay và vết nước. Để giữ vẻ ngoài của nó, hãy làm sạch nó thường xuyên bằng nước xà phòng ấm và một miếng vải mềm.

THẬN TRỌNG
Không bao giờ sử dụng chất tẩy rửa bằng thép không gỉ, miếng mài mòn hoặc chất tẩy rửa khác sẽ làm trầy xước bề mặt. Hư hỏng của thiết bị sau khi giao hàng sẽ không được bảo hành.

Bên trong tủ lạnh

Làm sạch bên trong tủ lạnh của bạn thường xuyên bằng vải mềm, xà phòng dịu nhẹ không mùi và nước ấm. Làm khô hoàn toàn tất cả các bề mặt và các bộ phận có thể tháo rời và tránh để nước dính vào các nút điều khiển. Thay thế các bộ phận có thể tháo rời, cắm dây nguồn và bật nguồn trước khi trả lại thực phẩm.

Gioăng cửa

Luôn giữ sạch các gioăng cửa bằng cách rửa chúng bằng chất tẩy nhẹ và nước ấm, sau đó sấy khô hoàn toàn. Thức ăn và đồ uống dính có thể khiến các miếng đệm dính vào tủ và rách khi bạn mở cửa.

Không bao giờ sử dụng nước nóng, dung môi, chất tẩy rửa nhà bếp thương mại, chất tẩy rửa bình xịt, chất đánh bóng kim loại, chất tẩy rửa ăn da hoặc mài mòn hoặc chất tẩy rửa để làm sạch tủ lạnh của bạn. Nhiều sản phẩm làm sạch và chất tẩy rửa có bán trên thị trường có chứa dung môi sẽ làm hỏng tủ lạnh của bạn. Chỉ sử dụng một miếng vải mềm với xà phòng nhẹ không mùi và nước ấm.

THẬN TRỌNG
Để làm sạch ngăn đựng rau thơm hoặc ngăn đông lạnh có các rãnh trượt mở rộng bằng kính thiên văn, chỉ cần lau bằng vải ẩm và nước xà phòng ấm. Không nhúng nắp vào nước vì điều này có thể ảnh hưởng đến hoạt động của nắp trượt.

Tắt tủ lạnh của bạn

Nếu bạn tắt tủ lạnh trong một thời gian dài, hãy làm theo các bước sau để giảm khả năng bị nấm mốc.

1. Loại bỏ tất cả thức ăn.
2. Rút phích cắm ra khỏi điểm nguồn .
3. Làm sạch hoàn toàn và lau khô Nội thất.
4. Đảm bảo rằng tất cả các cửa đều được mở hé để không khí lưu thông.

7.2 Bộ lọc khử mùi

Bộ lọc khử mùi được đặt ở giữa trên cùng của ngăn thực phẩm tươi sống.

Thay bộ lọc khử mùi của bạn

Để đảm bảo khả năng lọc mùi tủ lạnh tối ưu, bạn nên thay bộ lọc khử mùi sau sáu tháng (Đèn báo trạng thái bộ lọc trên Bảng điều khiển cảm ứng nhắc bạn thay bộ lọc sau sáu tháng)

1. Tháo nắp bộ lọc khử mùi bằng cách ép các cạnh của nắp lại với nhau và tháo ra khỏi lớp lót
2. Tháo bộ lọc cũ và loại bỏ nó.
3. Mở gói bộ lọc mới và trượt nó vào vỏ. Mặt mở phải (phương tiện carbon) của bộ lọc phải được lắp đặt đối diện với cổng không khí (lỗ) trong đa luồng.
4. Thay thế nắp bộ lọc khử mùi bằng cách bóp các bên và gắn nó trở lại vị trí.
5. Nhấn và giữ nút "Reset Air Filter" trên bảng điều khiển trong ba giây. Khi đèn LED tắt, trạng thái đã được đặt lại.

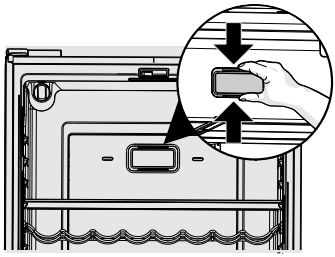

7.3 Đá và Nước (các mẫu được chọn)

Vệ sinh các bộ phận của bộ làm đá/nước định kỳ bằng vải mềm, xà phòng dịu nhẹ không mùi và rửa kỹ bằng nước ấm. Để biết thêm thông tin về cách chăm sóc và vệ sinh bộ làm đá, bộ phận làm đá của bộ phận lấy nước, hãy tham khảo phần "Kiểu máy làm đá và nước"

7.4 Ngăn chứa nước

Bình chứa nước chỉ được tháo ra để làm sạch, chỉ đổ đầy nước di động, bình phải được đặt trên cửa và phải sử dụng phễu trên nắp.

Làm sạch bên trong ngăn chứa nước thường xuyên bằng vải mềm và bộ lọc sử dụng bàn chải mềm để làm sạch, xà phòng nhẹ không mùi và rửa kỹ bằng nước ấm để loại bỏ hoàn toàn cặn xà phòng.

GHI CHÚ: Khi khách hàng lắp ráp bồn tận nơi Để tránh rò rỉ nước, đảm bảo rằng vòi bìnhhoàn toàn tương thích với ổ cắm gia dụng.

8. HƯỚNG DẪN BẢO QUẢN THỰC PHẨM

Loại	Sản phẩm	Thời gian lưu trữ đề xuất cho thực phẩm tươi sống*			Mẹo lưu trữ
		Tủ lạnh	TasteSeal Plus	Tủ đông	
Thịt	Xúc xích và thịt băm	1-2 ngày	3-5 ngày	2-3 tháng	Giữ thịt nguội ở phía sau tủ lạnh, nơi lạnh nhất. Nhựa có thể khiến thịt đổ mồ hôi nếu bảo quản trong tủ lạnh hơn một ngày. Thịt nướng có thể mất tới 48 giờ để rã đông đúng cách, chuyển món nướng đông lạnh vào tủ lạnh 2 ngày trước khi sử dụng.
	Sườn và bít tết	3-4 ngày	5-7 ngày	4-6 tháng	
	Những miếng thịt lạnh	3-5 ngày	5-7 ngày	4-6 tháng	
	Đồ nướng	3-5 ngày	1 tuần	12 tháng	
Gia cầm	Gà	1-2 ngày	5-7 ngày	2 tháng	Nếu gia cầm có mùi hoặc màu mà bạn không chắc chắn thì tốt nhất là vứt bỏ. Trứng nguyên quả không thích hợp để đông lạnh, trứng bị đánh nhẹ có thể được đông lạnh trong bốn tháng.
	Thịt gà nướng	3-5 ngày	1 tuần	12 tháng	
	Trứng	6 tuần	Không phù hợp	Không phù hợp	
Hải sản	Cá nguyên con và phi lê	2-3 ngày	5-7 ngày	2 tháng	Bảo quản trong hộp kín hoặc giấy bạc. Không bao giờ đông lạnh tôm trong nước mặn vì điều này sẽ làm thịt tôm bị mất nước.
	Tôm hùm và cua	1-2 ngày	3-5 ngày	2 tháng	
	Tôm	1-2 ngày	3-5 ngày	2 tháng	
Sản phẩm bơ sữa	Sữa	Cho đến ngày hết hạn	Không phù hợp	Không phù hợp	Nếu sữa có mùi hoặc màu và bạn không chắc chắn về điều đó, tốt nhất là nên vứt bỏ. Tùy thuộc vào loại phô mai cứng có thể kéo dài từ 2 tuần đến 2 tháng. * Kết cấu có thể thay đổi tùy theo loại phô mai mềm
	Sữa chua	7- 10 ngày	Không phù hợp	Không phù hợp	
	Phô mai cứng	2 tuần – 2 tháng	1-2 tháng	2 tháng (Grated)	
	Phô mai mềm	1-2 tuần	2-4 tuần *	Không phù hợp	
	Bơ	8 tuần	3-4 tháng	12 tháng	
Rau quả	Mỗi loại trái cây và rau củ đều có thời hạn sử dụng khác nhau. Một số giữ tươi trong vài ngày, ví dụ như đậu, một số khác có thể tồn tại trong vài tháng, ví dụ như hành tây.		Không phù hợp	8-12 tháng Khi đông lạnh, cắt nhỏ và chần thành các phần nhỏ.	Giữ rau trong ngăn mát và cách xa các lỗ thông khí để tránh bị đóng băng.
					Nếu bạn rửa trái cây và rau củ trước khi bảo quản, hãy đảm bảo chúng khô ráo hoặc bọc trong giấy thấm trước khi cất vào tủ lạnh vì điều này có thể khiến chúng dễ bị thối rữa.
					Cố gắng để riêng trái cây và rau quả vì trái cây thải ra nhiều ethylene (chất làm chín) có thể chín sớm và làm hỏng các loại rau xung quanh
Thức ăn thừa	Bữa ăn tự làm	3-4 ngày	Không phù hợp	2-6 tháng	Bảo quản trong hộp kín.
					Đông lạnh bữa ăn với khẩu phần nhỏ để hạn chế lãng phí.

QUAN TRỌNG

Xin lưu ý, chỉ sử dụng thông tin này làm hướng dẫn, thời gian bảo quản thực tế sẽ khác nhau tùy thuộc vào cách bạn sử dụng tủ lạnh, điều kiện khí hậu và độ tươi của thực phẩm.

9. XỬ LÝ SỰ CỐ

Thiết bị không hoạt động ở nhiệt độ mong muốn
Trong tủ lạnh/tủ đông không đóng tuyết hiện đại, không khí lạnh được lưu thông quanh các ngăn khác nhau thông qua các lỗ thông khí sử dụng quạt hiệu suất cao.

LIÊN QUAN	LÀM GÌ
Tủ lạnh quá nóng	• Điều chỉnh tủ lạnh ở chế độ lạnh hơn • Đảm bảo thực phẩm được để nguội trước khi cho vào tủ lạnh. • Đảm bảo thiết bị được thiết lập theo hướng dẫn • Đảm bảo rằng nội dung không cản trở các lỗ thông hơi làm mát. • Đảm bảo cửa không bị mở hoặc mở quá thường xuyên.
Tủ đông quá ấm	• Điều chỉnh nhiệt độ ở mức lạnh hơn. • Đảm bảo thực phẩm được để nguội trước khi cho vào tủ đông. • Đảm bảo thiết bị được thiết lập theo hướng dẫn • Đảm bảo rằng nội dung không cản trở các lỗ thông hơi làm mát. • Đảm bảo cửa không bị mở hoặc mở quá thường xuyên.
Thực phẩm bị đóng băng trong tủ lạnh	• Điều chỉnh nhiệt độ ở chế độ ấm hơn. • Đảm bảo rằng trái cây và rau củ được bảo quản trong ngăn rau củ. Không nên đặt các vật dụng có hàm lượng nước cao gần các lỗ thông hơi làm mát.
Không thể thay đổi cài đặt nhiệt độ	• Tham khảo phần “kiểm soát nhiệt độ” và “giới thiệu về giao diện người dùng”. • Đảm bảo rằng giao diện người dùng ở chế độ “thức” trước khi thử điều chỉnh cài đặt nhiệt độ.

Tiếng ồn của thiết bị
Tủ lạnh mới của bạn có thể phát ra âm thanh mà tủ lạnh cũ không phát ra. Bởi vì những âm thanh này là mới đối với bạn, bạn có thể lo lắng về chúng. Hầu hết các âm thanh mới là bình thường. Các bề mặt cứng như sàn nhà, tường và tủ có thể làm cho âm thanh có vẻ to hơn thực tế. Phần sau đây mô tả các loại âm thanh và nguyên nhân có thể tạo ra chúng.

LIÊN QUAN	LÀM GÌ
Tiếng ồn động cơ (máy nén)	Không. Điều này là bình thường vì tủ lạnh mới của bạn sử dụng máy nén tốc độ cao bật và tắt trong khi vận hành. Lưu ý rằng tiếng ồn của máy nén có thể to hơn khi bắt đầu chu kỳ hoạt động.
Tiếng ồn của động cơ (máy nén);	Những tủ lạnh này được trang bị một máy nén và quạt tốc độ thay đổi. Khi khởi động và vào những ngày ấm áp, chúng chạy ở tốc độ cao hơn để cung cấp thêm khả năng làm mát. Khi cần làm mát ít hơn, máy nén và quạt sẽ chạy ở tốc độ thấp hơn. Do đó, mức độ âm thanh thay đổi tùy thuộc vào điều kiện hoạt động là điều bình thường.
Nghe thấy tiếng lách cách ngay trước khi máy nén khởi động.	Không. Điều này là bình thường vì tủ lạnh mới của bạn có hoạt động tự động chuyển mạch điều khiển nhiệt độ, bật và tắt máy nén.

LIÊN QUAN	LÀM GÌ
Thỉnh thoảng có tiếng ùng ục, tương tự như nước đang sôi.	Không. Khi mỗi chu kỳ kết thúc, bạn có thể nghe thấy âm thanh ọc ọc do chất làm lạnh chảy trong hệ thống tủ lạnh của bạn. Không có gì, điều này là bình thường vì tủ lạnh mới của bạn sử dụng quạt hiệu suất cao để lưu thông không khí. Tốc độ quạt và tiếng ồn có thể tăng lên trong thời gian sử dụng nhiều hoặc thời tiết nóng.
Tiếng lạch cạch và các tiếng ồn khác.	• Đảm bảo rằng tủ cân bằng và ổn định, tham khảo Hướng dẫn lắp đặt • Kiểm tra xung quanh thiết bị để đảm bảo không có vật gì chạm vào hoặc đặt lên trên thiết bị. • Đảm bảo rằng các vật dụng bên trong thiết bị không được đặt theo cách khiến chúng bị rung (chẳng hạn như chai lọ).

Vận hành ngăn bảo quản rau củ

LIÊN QUAN	LÀM GÌ
Độ ẩm dư thừa tích tụ trong ngăn đựng thực phẩm giòn hơn Việc xuất hiện nhiều hơi ẩm và độ ẩm hơn đôi chút trong ngăn bảo quản rau củ là điều hết sức bình thường.	• Đảm bảo rằng ngăn đựng rau củ không bị đóng gói quá nhiều. • Điều chỉnh các slide độ ẩm sắc nét hơn.
Không thể tháo khay đựng rau củ	• Nếu ngăn đựng rau giòn cản trở các ngăn ở cửa, hãy tháo các ngăn ở cửa ra trước khi tháo ngăn ra. • Đặt tủ sao cho cửa có thể mở hoàn toàn.
Các mặt hàng đông lạnh trong ngăn đựng rau	• Điều chỉnh nhiệt độ ở chế độ ấm hơn.

Vận hành tủ lạnh

LIÊN QUAN	LÀM GÌ
Thiết bị sẽ không chạy Việc quạt ngăn đá không hoạt động trong chu trình xả đá tự động hoặc trong một thời gian ngắn sau khi bật thiết bị là điều bình thường.	• Đảm bảo rằng dây được cắm vào ổ cắm điện trực tiếp và ổ cắm được bật. • Đảm bảo rằng cầu dao gia dụng không bị ngắt hoặc cầu chì không bị đứt. • Thiết bị có thể ở chế độ rã đông, hãy kiểm tra lại sau nửa giờ.
Động cơ máy nén dường như chạy quá lâu Ở nhiệt độ phòng bình thường, động cơ của bạn sẽ chạy khoảng 40% đến 80% thời gian. Trong điều kiện ấm hơn, mong đợi nó chạy thường xuyên hơn.	• Đảm bảo rằng các cửa không được giữ mở. • Kiểm tra để đảm bảo rằng một lượng lớn thức ăn ấm không vừa được đặt bên trong thiết bị. • Lưu ý rằng thiết bị sẽ chạy nhiều hơn bình thường ngay sau khi bạn lắp đặt thiết bị hoặc khi điều chỉnh cài đặt nhiệt độ thay đổi.

LIÊN QUAN	LÀM GÌ
Động cơ máy nén dường như chạy quá lâu. Các thiết bị này sử dụng máy nén có tốc độ thay đổi, theo thiết kế có thể chạy trong thời gian dài, điều này là bình thường	• Máy nén và quạt có tốc độ thay đổi khi khởi động và vào những ngày ấm áp sẽ chạy ở tốc độ cao để cung cấp thêm khả năng làm mát. Khi cần làm mát ít hơn, máy nén và quạt sẽ chạy ở tốc độ thấp hơn, nhưng vẫn có thể không tắt. Điều này là bình thường. • Có thể là lần duy nhất máy nén và quạt ngừng hoạt động là khi tủ lạnh đang xả tuyết, khoảng một lần mỗi ngày.
Mặt ngoài của thiết bị ấm hoặc nóng khi chạm vào Điều này là bình thường vì thiết bị truyền nhiệt từ trong ra ngoài qua các tấm bên ngoài và vách ngăn giữa các cửa.	• Đảm bảo thiết bị có khe hở bên ngoài được khuyến nghị trong phần “Lắp đặt thiết bị mới của bạn”. • Mặt ngoài của tủ sẽ ấm hơn nhiều vào những ngày ấm hơn, thậm chí có thể cảm thấy nóng khi chạm vào vì thiết bị đang hoạt động mạnh hơn.
Giao diện người dùng sẽ không phản hồi Để đảm bảo các cài đặt không vô tình bị thay đổi, giao diện người dùng sẽ chuyển sang chế độ ngủ khi không sử dụng. Nhấn bất kỳ nút nào để đánh thức giao diện người dùng	• Kiểm tra xem giao diện người dùng có ở chế độ hoạt động hay không, hãy tham khảo phần “Giới thiệu về giao diện người dùng”. • Kiểm tra xem giao diện người dùng có bị khóa hay không, hãy tham khảo phần “Giới thiệu về giao diện người dùng”. • Nếu giao diện người dùng bị treo, hãy tắt thiết bị trong năm phút để xóa bộ nhớ, sau đó bật lại. • Kiểm tra xem giao diện người dùng có ở Chế độ Sabbath không, hãy tham khảo hướng dẫn điều khiển. (chỉ dành cho kiểu máy I&W).
Âm thanh báo động	• Kiểm tra xem tất cả các cửa đã được đóng hoàn toàn chưa. • Đảm bảo rằng cảnh báo quá nhiệt không được kích hoạt bởi thức ăn nóng được đặt trong tủ đông. • Kiểm tra xem bộ hẹn giờ đồ uống đã kết thúc chưa, tham khảo hướng dẫn điều khiển.
Đóng băng	• Kiểm tra xem tất cả các cửa đã được đóng hoàn toàn chưa. • Đảm bảo rằng các cửa không được mở quá thường xuyên. • Đảm bảo rằng các lỗ thông gió hồi không bị chặn bởi bao bì. • Đảm bảo các con dấu sạch sẽ và không bị cản trở.
Mùi	• Nội thất có thể cần làm sạch, hãy tham khảo hướng dẫn làm sạch. • Đảm bảo rằng thực phẩm được bảo quản đúng cách vì một số thực phẩm, hộp đựng và bao bì có thể tạo ra mùi. • Kiểm tra thiết bị để tìm thực phẩm cũ hoặc bất thường.
Đèn không hoạt động Đèn LED được thiết kế để bật dần dần. Hệ thống đèn LED được thiết kế để tự động giảm độ sáng nếu cửa mở trong hơn 5 phút và tắt hoàn toàn nếu cửa mở trong hơn 7 phút. Đóng cửa sẽ đặt lại bộ hẹn giờ.	• Đảm bảo rằng dây được cắm vào ổ cắm điện trực tiếp và ổ cắm được bật. • Đảm bảo rằng cầu dao gia dụng không bị ngắt hoặc cầu chì không bị đứt. • Kiểm tra phần tính năng của thiết bị để xác định cấu hình chiếu sáng cho kiểu máy của bạn.

Vận hành cửa

LIÊN QUAN	LÀM GÌ
Cửa tủ đông bật mở.	• Điều này là bình thường và nên đóng lại. Điều này xảy ra khi cửa tủ lạnh đóng quá nhanh. • Nếu cửa tủ đông vẫn mở, điều đó cho thấy thiết bị cần được nghiêng về phía sau thêm một chút. Tham khảo phần “Cài đặt thiết bị mới của bạn”.
Tự đóng không hoạt động.	• Kiểm tra xem thiết bị của bạn có bản lề tự đóng không vì không phải kiểu máy nào cũng có. • Nó chỉ ra rằng thiết bị cần được nghiêng về phía sau thêm một chút. Tham khảo phần “Cài đặt thiết bị mới của bạn”.
Cửa không được niêm phong đúng cách	• Đảm bảo không có vật gì cản trở việc đóng cửa chẳng hạn như đồ đạc bên trong thiết bị hoặc vật dụng đặt gần thiết bị. • Đảm bảo rằng ngăn đựng rau củ/ngăn đông lạnh được đóng hoàn toàn. Sửa chữa nếu cần thiết như được đề cập trong phần “Sử dụng tủ lạnh của bạn”. • Đảm bảo thiết bị được thiết lập theo khuyến nghị.
Cửa khó đóng mở	• Nếu cửa khó mở ngay sau khi bạn đóng, điều này là do cân bằng áp suất, cửa sẽ mở bình thường sau vài phút.

Nếu bạn vẫn yêu cầu dịch vụ
Nếu bạn gặp sự cố và sự cố vẫn tiếp diễn sau khi bạn đã thực hiện các bước kiểm tra được đề cập, hãy liên hệ với Trung tâm Dịch vụ được Electrolux phê duyệt gần nhất hoặc đại lý mà bạn đã mua tủ lạnh. Hãy sẵn sàng trích dẫn số kiểu máy, PNC gồm 9 chữ số và số sê-ri 8 chữ số, được ghi trên nhãn bên trong ngăn tủ lạnh.

10. TIẾNG ỒN

Tiếng ồn của thiết bị

Tủ lạnh mới của bạn có thể phát ra âm thanh mà tủ lạnh cũ không phát ra. Bởi vì những âm thanh này là mới đối với bạn, bạn có thể lo lắng về chúng. Hầu hết các âm thanh mới là bình thường. Các bề mặt cứng như sàn nhà, tường và tủ có thể làm cho âm thanh có vẻ to hơn thực tế. Phần sau đây mô tả các loại âm thanh và nguyên nhân có thể tạo ra chúng.

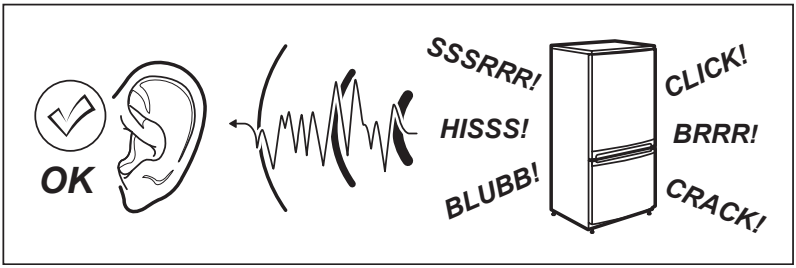

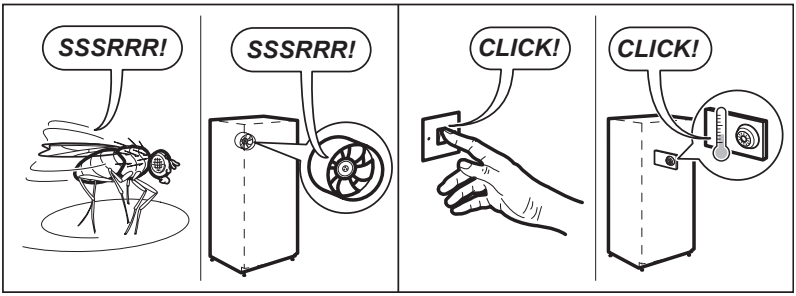

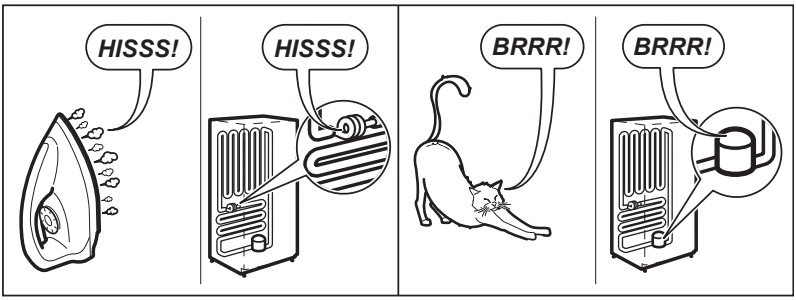

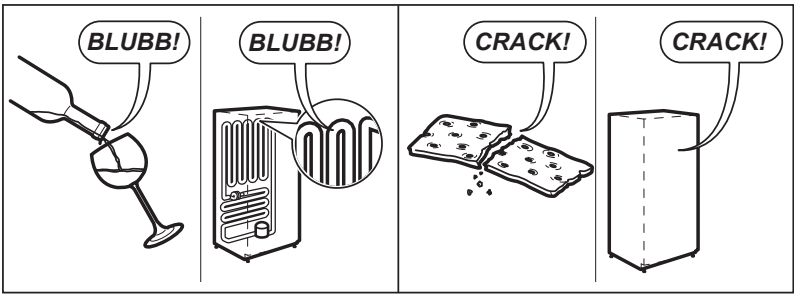

Note

Note

www.electrolux.com/shop

Vietnam

Domestic Toll Free: 1800-58-88-99
Tel: (+84 8)3910 5465
Electrolux Vietnam Ltd
Floor 9th, A&B Tower
76 Le Lai Street - Ben Thanh Ward - District 1
Ho Chi Minh City Vietnam
Office Tel: (+84 8)3910 5465
Office Fax: (+84 8)3910 5470
Email: vncare@electrolux.com

A24336502-A-182023